



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LAVAMAT 52610. You'll find the answers to all your questions on the AEG-ELECTROLUX LAVAMAT 52610 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX LAVAMAT 52610
User guide AEG-ELECTROLUX LAVAMAT 52610
Operating instructions AEG-ELECTROLUX LAVAMAT 52610
Instructions for use AEG-ELECTROLUX LAVAMAT 52610
Instruction manual AEG-ELECTROLUX LAVAMAT 52610

LAVAMAT 52610

Washing machine

User information



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)
<http://yourpdfguides.com/dref/1310473>

Manual abstract:

@ @
.....
.....

..... *Safety*
.....
.....

.....
.....
.....

... *Description of the appliance*
.....
.....

..... *Control Panel* .
.....
.....

.....
.....
.....

..... *Programme overview* ..
.....
.....
.....

.....
.. *5 5 7 7 8 Before the first wash.* ..
.....
.....

..... *10 Preparing and sorting washing*
.....
.....
.....

. *10 Running a washing cycle*
.....
.....

. *Opening the door/Loading the washing*
.....
.....

.....
Adding detergent/additives
.....
.....

.....
.....
.... Switching on the appliance/selecting a programme .
.....

..... Changing the spin speed/Selecting rinse hold ..
.....
.....

.. Selecting programme options.
.....
.....
.....

.....
PRE WASH
.....

.....
.....
.....

. *QUICK WASH*.
.....
.....

.....
.....
.....

Activating/deactivating *RINSE+*.....
.....
.....

..... Setting the delay timer
.....
.....
.....

..... Starting a programme .
.....
.....
.....

... Interrupting a programme/adding washing
.....
.....

.... End of the wash programme/Removing the washing .
.....

..... 11 11 11 13 13 14 14 14 14 15 15 16 16 Child safety device...
.....
.....
.....
.....

.....
... 17 Cleaning and maintenance

.....
.....
.....
.....

. 18 What to do if... ..

.....
.....
.....

.....
.....
.....

... Remedying minor malfunctions yourself.

.....
.....
.....

. If the wash results are not satisfactory

.....
.....
.....

. Carrying out an emergency drain

.....
.....
.....

..... Drain pump.....

.....
.....
.....
.....

.....
.....
.....

... 19 19 22 23 24 Disposal ..

.....
.....
.....
.....
.....

... 25 Technical data. .

.....
.....
.....
.....
.....

... 26 Consumption values.

.....
.....
.....

.....
.....

... 26 3 Installation and connection instructions. .

.....

..... *Installing the appliance*

.....
.....
.....

.....
.....

. *Transporting the appliance*

.....
.....
.....

..... *Removing the transit packaging*

.....
.....
.....

. *Where to install*

.....
.....
.....
.....
.....

Making the appliance level.

.....
.....
.....

27 28 28 28 30 31 *Safety information for the installation.*

.....
.....

..... *27 Electrical connection.* .

.....
.....
.....

.. *31 Connecting to the water supply* . . .

.....
.....
.....

. *31 Water inflow.*

.....
.....
.....
.....

..... *32 Water drainage.* .

.....
.....
.....

.....
.....
..... 33 Guarantee/Customer Service. .

.....
.....
.....
..... Service 34 . .

.....
.....
.....

.....
.....
.....

.. @@ · If the appliance is delivered in the winter months when there are minus temperatures: Store the washing machine at room temperature for 24 hours before using for the first time. Correct use · The washing machine is only designed for the washing of normal domestic laundry at home. · Additions or modifications to the washing machine are not permitted. · Use only detergents and additives that are suitable for use in domestic washing machines. · The washing must not contain any inflammable solutions. Danger of explosion! · Do not use the washing machine for dry cleaning. · Dyes/colour removers may only be used in the washing machine, if the manufacturer of these products expressly permits this. @@ There is a risk of suffocation.

@@ Don't allow children to use the washing machine unsupervised. @@@@ · Never use the washing machine if the mains cable is damaged; or if the control panel, work top or plinth area is damaged such that the inside of the appliance is freely accessible. · Switch off the washing machine before cleaning, maintenance and servicing. In addition, pull the mains plug out of the socket or in the case of a permanent connection switch off the cut-out in the fuse box or remove the screw fuse completely. · If operation is stopped, disconnect the appliance from the mains supply and shut off the water tap. · Never unplug the appliance by pulling on the cable. Always pull the plug. · Multi-way plugs, connectors and extension cables must not be used. This could constitute a fire hazard through overheating. · Never wash the washing machine down with a water jet.

Danger of electric shock! · In washing programmes with high temperatures the glass in the door gets hot. Do not touch it. · Before emergency emptying of the appliance, before cleaning the drain pump or opening the door in an emergency, let the water cool down. · Small animals can nibble at the cables and water hoses. Danger of electric shock and danger of water damage! Keep small animals away from the washing machine.

6 Description of the appliance Detergent dispenser drawer Rating plate (behind door) Control panel Screw feet (height adjustable) Plinth flap/ Drain pump Control Panel SPIN/RINSE HOLD button Programme option buttons Programme Progress display DELAY TIMER button DOOR indicator Programme knob START/PAUSE button 7 Programme overview Programme options Q (QUICK WASH) v (PRE WASH) Spin speed max. load 1) (dry washing) Programme ECO (ENERGY SAVING) 2) c (COTTONS/LINEN) 95, 60, 40, 30 m (EASY-CARE) 60, 40 l (EASY IRON) 40 6kg 6kg 3kg ···· 3) ······ 1kg ···· d (DELICATE) 40, 30 s (WOOL)/s (SILK) H (Handwashing) 30, X (COLD) j (GENTLE RINSE) 3kg ···· 2kg ··· 3kg ···· p (DRAIN) C (SPIN) 6kg ···· 1) A 10 litre bucket contains approximately 2.5 kg of dry washing (cotton) 2) Programme settings for tests in accordance with or in the style of EN 60 456 and IEC 60 456 are described in the section "Consumption values". 3) Recommended load for short programmes is 3kg; full loading is possible however with somewhat reduced cleaning results. 8 n (RINSE HOLD) ······ 1200 1000 600 Application/Features Care symbols 1) Energy saving programme which washes at 60 °C for lightly to normally soiled whites/coloureds made of cotton/linen.

Programme for normally to heavily soiled whites/coloureds made of cotton/ linen. Programme for easy-care mixed fibres and synthetics. Wash programme which washes at 40 °C for easy-care fabrics which after being washed using this programme need to be ironed only lightly or not at all. Gentle programme for fine fabrics such as layered fibres, micro-fibres, synthetics, curtains (load max).



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)
<http://yourpdfguides.com/dref/1310473>

20 to 25 m2 curtains). If n (RINSE HOLD) is used, also suitable for items with a climatic membrane, e.g. outdoor clothing. Particularly gentle programme for machine washable and hand washable wool/silk. Separate gentle rinse (3 rinse cycles, liquid conditioner is washed in from compartment &, spin).

Not suitable for wool. Reduce the spin speed when rinsing easy-care and delicate items. Pumps water away after a rinse hold. Draining and spinning e.g. following rinse hold, or separate spinning of handwashed cottons/linen. Reduce the spin speed when rinsing easy-care, delicate and wool items. 1) The figures in the care symbols indicate the maximum temperatures. MO JMO IKN KN IK QLH JMO JMO 9 Before the first wash 1. Open the detergent drawer. 2. Pour approx. 1 litre of water through the detergent drawer into the washing machine. This closes the water container when the next programme is started and the economy valve can function properly. 3.

In order to remove any residues from the drum and water container which may have been left during manufacturing, perform the first wash cycle without any washing in the machine. Programme: c (COTTONS/LINEN) 60, press Q (QUICK WASH), add approx. 1/4 measuring cup of washing powder. Preparing and sorting washing Preparing washing · Empty pockets. Remove foreign bodies (e.

g. coins, paper clips, nails, etc.). · Do up zips, button up covers to prevent damage to washing. · Remove the runners from net curtains or cover them with a net or a bag. · Wash sensitive and small items in a net or a pillow case, e.g. net curtains, tights, socks, handkerchiefs, bras. Important! Bras and other items containing wires should only be washed in a net bag. The wires can work loose and damage the appliance.

Sorting washing · By colour: Wash white and coloured washing separately. Washing can run. · By temperature, type of washing and care symbol. Important! Do not wash fabrics with care symbol G (= do not wash!) in the washing machine. 10 Running a washing cycle Opening the door/Loading the washing 1. To open the door: pull the door's handle. When the appliance is switched on, the K (DOOR) and S/P (START/ PAUSE) indicators show whether the door can be opened: K (DOOR) indicator flashing illuminated off S/P (START/PAUSE) indicator flashing illuminated flashing Can the door be opened? yes, after approx. 2 minutes no, water level and/or temperature too high yes 2. Separate individual items and load washing loosely into the machine. Mix large and small items. Important: Do not allow items of clothing to get caught between the door and the rubber seal. 3. Press the door firmly shut. The catch must audibly latch.

Adding detergent/additives Warning! Use only detergents and additives that are suitable for use in domestic washing machines.

1 For USA and Canada only! Important! Only LOW-SUDSING detergent suitable for a front-loading washing machine can be used in this machine. This machine can heat the water up to 95 degrees celsius, or 200 dgress display prior to the start of a programme and while the additional rinse cycles are taking place. Deactivating r+ (RINSE+): 1. Turn programme knob to c (COTTONS/LINEN), m (EASY-CARE)/l (EASY IRON) or d (DELICATE) (at any temperature). 2.

Press the v (PRE WASH) and T (DELAY TIMER) buttons simultaneously until r+ (RINSE+) is no longer illuminated in the programme progress display. r+ (RINSE+) is now permanently deactivated. 14 Setting the delay timer The T (DELAY TIMER) button allows you to delay the start of a programme. 1. Select a programme. 2. Press the T (DELAY TIME) button. 5. Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush. 6.

Insert the detergent dispenser drawer in the guide rails and push it in. Washing drum Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron. Important! Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool. 1. Remove any rust deposits on the drum with a cleaning agent for stainless steel. 2. Run a washing cycle without any washing to clean off any cleaning agent residues. Programme: c (COTTONS/LINEN) 60, press the button Q (QUICK WASH), add approx. 1/4 measuring cup of washing powder. 18 Door and rubber collar Regularly check whether deposits or foreign bodies are present in the folds of the rubber collar or on the inside of the glass door.

Clean the glass in the door and the rubber collar regularly. What to do if... Remedying minor malfunctions yourself If the programme progress display shows one of the following error messages during operation: E (END) flashes 1x (problem with water inflow), E (END) flashes 2x (problem with water outflow), E (END) flashes 4x (door open), please refer to the following table.

After the error has been remedied, press the S/P (START/PAUSE) button. For other error messages (one or more flashing indicators in the programme progress display): Switch the appliance off and then on again. Reset the programme. Press the S/P (START/PAUSE) button. If the error is displayed again, please contact customer service.

Problem Possible cause Mains plug not plugged in or fuse not working. Washing machine is not Door not closed properly. working. The S/P (START/PAUSE) button was not pressed for long enough. The door cannot be closed. The E (END) indicator flashes 4x. Remedy Connect the plug to a mains socket. Check fuse. Close door until the catch audibly latches. Press the S/P (START/ PAUSE) button for longer.

Child safety device has been Deactivate the child safety activated. device. The door is not closed prop- Close the door properly. Reerly. start the programme. 19 Problem Possible cause Tap turned off. Remedy Turn on the tap. Turn off the tap. Unscrew the hose, remove the filter and clean it. Check the tap and have it repaired if necessary.

Remove the transportation lock. Adjust the feet as described in the installation and connection instructions. Always load the drum as full as possible. Mix large and small items. The E (END) indicator flashes 1x.

(Problems with water inflow) The filter in the screw connection on the inlet hose is blocked. Water tap is furred with lime scale or is faulty. The transportation lock has not been removed. The washing machine vibrates when operating The screw feet are not coror is not stable. rectly adjusted.

Washing has not been spun. @@tightly. Drain hose is leaking. @@machine. Washing was caught in the door. Emergency drain hose is leaking. Wash water is foaming excessively. Too much detergent has probably been used. Kink in drain hose. Maximum pumping height of 1m has been exceeded.

The E (END) indicator flashes 2x. (Problems with water outflow.) Replace drain hose. Close the cover properly. Load washing carefully for the next wash. Close off emergency drain hose properly. @@Straighten the hose. Please contact customer service. Switch off the appliance.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)
<http://yourpdfguides.com/dref/1310473>

Remove the mains plug.

Clean the drain pump. @@@@or is blocked. @@The programme will continue when the power cut is over. @@@@on. (All indicators are off.)

) The door will remain locked for approx. @@. The right detergent was not used. · Special soiling was not pre-treated. · Programme or temperature was not correctly set. There are grey stains on the washing.

@@ · It was washed at too low a temperature. @@@@After the last rinse foam can still be seen. @@The washing is however sufficiently rinsed. There are white residues on the washing. @@They are not caused by insufficient rinsing. Shake or brush the washing. If possible turn the washing inside out before washing. Check your choice of detergent. @@@@Warning! The water that comes out of the emergency drain hose may be hot. There is a risk of scalding.

Let the water cool before performing an emergency drain. 1. Open the plinth flap and remove it. 2. Take out the emergency drain hose. 3. Place a shallow container underneath it. @@4. The water runs out. @@When the water has all drained away: 5.

@@6. Place the emergency drain hose back in the support. 7. @@@@g. if the pump wheel is blocked.

@@Paperclips, nails, etc. @@@@1. First carry out an emergency drain. 2. Place a cloth on the floor in front of the drain pump cover.

Residual water runs out. 3. @@@@@@@6. Insert the pump cover. @@7. Close off the emergency drain hose and place it in the support. 8. Close plinth flap. @@The plastic components are identified by markings, e.g.

>PE<, >PS<, etc. @@@@@@By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Warning! When an appliance is finished with, remove the plug from the mains socket. Cut off the cable and plug and dispose of them. Destroy the door lock. This prevents children from trapping themselves inside and endangering their lives. 2 W 1 25 Technical data 5 This appliance conforms with the following EU Directives:

73/23/EEC dated 19.02.1973 Low Voltage Directive 89/336/EEC dated 03.

05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC 93/68/EEC dated 22.07.1993 CE Marking Directive Height x Width x Depth Depth when door is open Height adjustment Load (depending on programme) Area of use Drum spin speed Water pressure 850 x 598 x 603 mm 980 mm approx. +10/-5mm Max.

6kg Domestic see Rating Plate 1-10bar (=10100N/cm²=0.11.0MPa) Consumption values The consumption values were obtained under standardised conditions. They may vary when operating in domestic conditions. Programme selector (Temperature) c (COTTONS/LINEN) 95 ECO (ENERGY SAVING) 2)

Load size in kg1) 6 6 6 3 3 2 Water in litres 62 49 58 58 58 54 Energy in kWh 2,20 1,12 0,70 0,52 0,42 0,45 Time in minutes 146 125 129 80 66 54 c (COTTONS/LINEN) 40 m (EASY-CARE) 40 d (DELICATE) 30 s (WOOL)/N (SILK) H (Handwashing)30 1) The load size is determined in accordance with the EN 60 456 standard load.

2) Note: Programme setting for testing in accordance with or in the style of EN 60 456 and IEC 60 456. Consumption values will vary from those given depending on the pressure and hardness of the water and its initial temperature, the room temperature, type and quantity of washing, detergent used, fluctuations in mains voltage and options selected. 26 Installation and connection instructions 1 Safety information for the installation · This washing machine cannot be built-in. · Before using for the first time, check the appliance for damage sustained while it was being transported. Do not under any circumstances connect an appliance that is damaged. In the case of damage, please contact your supplier. · Before using for the first time, all parts of the transit packaging must be removed. Otherwise when spinning damage may be caused to the appliance or to neighbouring units or furniture. · Before using the appliance for the first time, splash protection must be completed. (See "Removing the transit packaging".

) · Always plug the mains plug into a correctly installed shockproof socket. · Permanent connection: a permanent connection must only be installed by a trained electrician. · Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate. · If work on the plumbing is required for the proper connection of the washing machine to the water supply, this must be undertaken by a registered plumber. · If work on the electricity supply system is required for the proper connection of the washing machine to the electricity supply, this must be undertaken by a registered electrician. · The washing machine's cable must only be replaced by the Customer Care Department or a registered electrician. 27 Installing the appliance Transporting the appliance 1 Warning! The washing machine is very heavy. Risk of injury. Be careful when lifting.

· Do not lay the appliance on its front nor on its right side (as seen from the front). Electrical components may get wet. · Never transport the appliance without its transit packaging. Only remove the transit packaging when the appliance is in its place of installation. Transporting the appliance without its transit packaging can lead to damage to the appliance.

· Never lift the appliance by the door when it is open nor by the plinth. @@@@@@moving house). 1. @@@@@@4. Remove screw D with its compression spring using special spanner A.

5. Turn sealing cap C upside down as shown in the illustration. 6. Seal hole using sealing cap C. 7. Unscrew and remove two screws E using special spanner A. 8. Unscrew and remove four screws F using special spanner A. 9. Remove transit bar G.

10. Screw in the four screws F again. 11. Seal the two big holes using sealing caps B. Important! @@(Splash protection). 29 Where to install Important!

@@Frost damage or impaired operation! Frost damage is not covered by the warranty. @@Do not install the appliance on carpets or on soft floor coverings. @@@@If the appliance is to stand on a plinth: In order for the appliance to be secure on the plinth, fixing plates*) must be mounted, into which the appliance is inserted. If the appliance is to stand on floors that vibrate, e. g.

floors of wooden joists with deal boards: If possible, install the appliance in one corner of the room. 1. Screw a water-resistant wooden board (at least 15 mm thick) onto at least 2 of the floor joists. 2. Affix fixing plates *) onto the wooden board, into which the appliance is inserted.

*) The fixing plates can be obtained from the Customer Care Department.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)
<http://yourpdfguides.com/dref/1310473>

30 Making the appliance level The four feet of the appliance are pre-adjusted. Large degrees of unevenness can be compensated for by individually adjusting the height adjustable screw feet. Use the special spanner supplied to do this. Important! Do not use pieces of wood, cardboard or such like to level out unevenness in the floor, but adjust the height adjustable screw feet instead.

Electrical connection Details about the voltage, type of supply and the fuses required are to be found on the rating plate. The rating plate is next to the doorway. Connecting to the water supply Important! · This appliance must not be connected to the hot water system. · When connecting it, use only new hose kits. · Only connect the appliance to the drinking water supply. Rain water or water for industrial use may only be used if it fulfils the requirements of DIN1986 and DIN1988. · Do not kink or crush the water inlet hose or drain hose. Permitted water pressure The water pressure must be at least 1bar (=10N/cm² =0.1MPa) and may be a maximum of 10bar (=100N/cm² =1MPa). If more than 10bar: Connect a pressure reduction valve.

If less than 1bar: Disconnect the appliance end of the inlet hose from the solenoid inlet valve and remove the flow meter. (In addition remove the filter using pointed pliers and take out the rubber gasket behind it.) Re-insert the filter. 31 Water inflow A 1.35 m long pressure hose is supplied with the appliance. If a longer water inlet hose is required, only original hoses are to be used. The Customer Care Department stocks hose kits of different lengths. Sealing rings are either inserted in the plastic nuts of the threaded hose fitting or are included as spare parts. Do not use any other seals. Important! All threaded hose fittings must only be tightened by hand.

1. Connect the hose with the right-angle connector to the machine. Important! Do not position the inlet hose vertically downwards. Position it to the right or the left as shown in the illustration. 3 2.

Connect the hose with the straight connector to a water tap with an R ¾ (inch) screw thread. 3. Open the water tap slowly and check all connections for water tightness. 32 Water drainage The maximum permitted difference between the height of the surface on which the appliance is installed and the water outlet is 1 metre. Only original hoses may be used to extend hoses.

(A maximum of 3 m laid on the floor and then 80 cm vertically). The Customer Care Department stocks outlet hoses of different lengths. Draining water into a sink outlet Secure the outlet/sink outlet joint with a hose band clip (available from your dealer). 1 Draining water into a wash basin/bath Important! Small basins are not suitable. Water may overflow. The end of the drain hose must not be in the water that has been pumped out. Otherwise water could be sucked back into the appliance. When draining into a wash basin or a bath, secure the drain hose with the supplied elbow to stop it slipping. Otherwise the water running out can force the hose out of the basin. When pumping the water out, check that the water is running away fast enough.

Pumping heights over 1 m The washing machine's drain pump is able to pump water to a height of 1 metre, calculated from the surface on which the appliance is installed. Warning! If pumping height is over 1 metre, malfunctions and damage to the appliance may arise. For pumping heights over 1 metre a conversion kit can be obtained. Please contact the Customer Care Department. 33 Guarantee/Customer Service Weitere Kundendienststellen im Ausland In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden. Further after-sales service agencies overseas In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct. Autres agences étrangères assurant le service après-vente Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place. Otros puntos de Postventa en el extranjero En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo. Ulteriori uffici del servizio tecnico assistenza clienti all'estero In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminante sul luogo. Serviços de assistência técnica no estrangeiro Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

@@@Abu Dhabi Universal Trading Company P.O. @@- 2nd floor Heliopolis, Cairo Egypt Tel.: 2024181719 Jordan Jordan Household Supply Co. Ltd.

P.O. Box 3/68 Amman/Tel.: 69 70 50 Canada EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985 Malta ITC International Trading Company White House Building Mountbatte Street Blata L-Bajda/Tel.: 220644 Mauritius Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355 34 Australia The Andi-Co Group 1 Stamford Road Oakleigh VIC 3166 Tel.

: (03) 9569 1255 Fax: (03) 9569 1450 www.andico.com.au Bahrain/Arabian Gulf A.A. Zayani & Sons P.O. Box 9 32 Bahrain Tel.: 17311124 Korea (South) Core Incorp. 3/F Chewoo Bldg.

200 Nonhyun-Dong Kangnam-Ku 135-010 Seoul Telefon 82 2 549 89 61 Croatia Electrolux D.O.O. @@@@P.O.

@@@AEG Showroom Shariati, Balatar as Safar Teheran / Iran Phone No. Showroom: 021 / 285 513 / 4 Phone No. Service: 021 / 312 27 67 / 8 Poland Electrolux Poland Sp. z o.o.

ul. @@@16 Olympiysky prospekt 129090 Moscow Tel.: (095) 937 7837 Fax: (095) 926 5513 Saudi Arabia Awad Badi Nahas Est Shara Siteen Jeddah 21463 Phone: 6646583 Alia Trading Co Mecca Road Riyadh 11491 Phone 4645977 Bulgaria Electrolux Bulgaria E.O.O.D. 91 Levski Blvd. 1000 Sofia Tel.: 2 806676 Fax. 2 980 5276 Cyprus Hadjikyrlakos & Sons Ltd.

Prodromou 121 P.O. Box 21587 Nicosia 1511 Service Telephones: Nicosia 02 481226 Limassol 05 562182 Larnaca 04 633929 Paphos 06 932 699 Estonia Electrolux Estonia Ltd. Mustamäe tee 24 EE0006 Tallinn Tel.: (372) 6 650 090 Fax: (372) 6 650 092 Hong Kong Dah Chong Hong Ltd. 20 Kai Cheung Road Kowloon Bay Kowloon - Hong Kong Tel.: 0085222621620 Fax: 0085227550333 Israel Evis Ltd. Tadiran-Ampa Service 10 Gibonay Israel Street New Industrial Zone Netanya, 42504 Israel Kuwait/Arabian Gulf Ali Al-Ghanim Est. P.O.

Box 21540 - Safat Tel.: 4822190 Fax: 4820116 Lebanon Adib & Assaferi P.O. Box 539 Tripoli Latvia Electrolux Latvija Ltd. Kr.

Barona iela 130/2 Riga, LV-1012 Tel.: 371 7313626 Fax: 371 7845954 Lithuania Electrolux Lithuania Verkui 29 2600 Vilnius Tel.: 372 272 3326 Fax: 372 272 3366 Malaysia Arzbergh Engineering No. 49A/B, Jalan Petaling Utama 7 4600 Petaling Jaya Tel.: 3 795 1084 Fax: 3 795 1082 35 Japan Electrolux Japan Ltd.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)
<http://yourpdfguides.com/dref/1310473>

Domestic Appliances Department Maruzen Showa Warehouse Building Tookai 4-5-12, Ota-ku 143-006 Tokyo Tel.: 0120-13-7117 Fax: 03-3790-5257
Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334 Hungary
Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200 Singapore Group Pte Ltd. 833 Bukit Timah Road Unit no. 01-11
Royalville 279887 Singapore Tel.: 0065 64638484 Fax: 0065 64638488 Slovenia Electrolux Slovenia D.O.O.

Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238 Slovakia Rep. Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333
4322, 4355 Fax: 02 4333 6976 South Africa AEG (Pty) Ltd. 55, 12th Road P.O.

Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111 Czech Rep. ELECTROLUX DOMÁCĀ SPOTØEBIËE CZ DIVIZE ELECTROLUX S.R.O.
Customer Centre Hanusova ul. 140 21 Praha 4 Tel.: 2 6112 6112 Telefax: 2 6112 3504 36 37 38 Service In the event of technical faults, please first check
whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...

"). If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners. In order to be able to
assist you quickly, we require the following information: Model description Product number (PNC) Serial number (S No.) (for numbers see rating plate)
Type of fault Any error messages displayed by the appliance So that you have the necessary reference numbers from your appliance at hand, we recommend
that you write them in here: Model description: PNC: S No:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 39 From the Electrolux Group.

The world's No.1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55
million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a
value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH Postfach 1036 D-90327 Nürnberg <http://www.aeg-electrolux.de> © Copyright by AEG 105 177 091-01-181105-01 Subject to change
without notice .



[You're reading an excerpt. Click here to read official AEG-
ELECTROLUX LAVAMAT 52610 user guide](http://yourpdfguides.com/dref/1310473)

<http://yourpdfguides.com/dref/1310473>