



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LAVAMAT 54849 D. You'll find the answers to all your questions on the AEG-ELECTROLUX LAVAMAT 54849 D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX LAVAMAT 54849 D
User guide AEG-ELECTROLUX LAVAMAT 54849 D
Operating instructions AEG-ELECTROLUX LAVAMAT 54849 D
Instructions for use AEG-ELECTROLUX LAVAMAT 54849 D
Instruction manual AEG-ELECTROLUX LAVAMAT 54849 D

LAVAMAT 54849D

User manual

Washing Machine



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>

Manual abstract:

We wish you much joy with your new appliance. CONTENTS OPERATING INSTRUCTIONS 3 SAFETY INFORMATION 3 General safety 3 Installation 3 Use 4 Child Safety 4 PRODUCT DESCRIPTION 5 Detergent dispenser drawer 6 CONTROL PANEL 6 Display (6) 7 Indicator pilot lights (8) 8 PERSONALIZATION 8 Child safety lock 8 DAILY USE 8 Load the laundry 8 Measure out the detergent and the fabric softener 9 Select the required programme by means of programme selector dial (1) 9 Select the SPIN speed or the RINSE HOLD option (Button 2) 10 Programme option buttons 10 Select the PREWASH option (Button 3) 10 Select the STAIN option (Button 4) 10 Select the TIME SAVING option (Button 5) 10 Select an additional rinse (EXTRA RINSE) 11 Select the START/PAUSE (Button 7) 11 Select the DELAY START (Button 9) 11 Altering an option or a running programme 12 Interrupting a programme 12 Cancelling a programme 12 Opening the door after the programme has started 12 At the end of the programme 12 WASHING PROGRAMMES 13 CARE AND CLEANING 15 Descaling 15 After each wash 15 Maintenance wash 16 External cleaning 16 Detergent dispenser drawer 16 Washing drum 16 Door seal 17 Drain pump 17 Cleaning the water inlet filters 19 Emergency emptying out 20 Frost precautions 20 WHAT TO DO IF... 20 TECHNICAL DATA 23 CONSUMPTION VALUES 24 INSTALLATION INSTRUCTIONS 24 INSTALLATION 24 Unpacking 24 Positioning and levelling 27 Water inlet 27 Water-stop device 28 Water drainage 28 ELECTRICAL CONNECTION 30 ENVIRONMENT CONCERNS 30 Packaging materials 30 Ecological hints 30 Subject to change without notice Safety information 3 OPERATING INSTRUCTIONS SAFETY INFORMATION Read carefully & keep for future reference. · The safety of Your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes. @@@@Never connect up a damaged appliance. If parts are damaged, contact your supplier. · If the appliance is delivered in the winter months when there are minus temperatures. Store it at room temperature for 24 hours before using for the first time. General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · During high temperature wash programmes the door glass may get hot. Do not touch it! · Make sure that small pets and children do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. · Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. · Do not use your washing machine to wash articles with whalebones, material without hems or torn material. · Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.

4 Safety information · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall. · If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · Always be sure, that there is no water leakage from hoses and their connections after the installation. · If the appliance is installed in a location subject to frost, please read the "dangers of freezing" chapter. · Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label. · Do not overload the appliance. See the Washing Programme Table. · Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. · Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible. Child Safety · This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. Product description · Make sure that children or pets do not climb into the drum. To prevent children or pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical. 5 PRODUCT DESCRIPTION Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>

The ECO valve system allows total use of detergent and reduces water consumption so saving energy. 2 1 3 4 5 6 1 2 3 4 5 6 Detergent dispenser drawer Control panel Door opening handle Rating plate Drain pump Adjustable feet 6 Control panel Detergent dispenser drawer Compartment for prewash phase or stain remover. The prewash detergent is added at the beginning of the wash programme. The stain remover is added during the STAIN-Action phase in the main wash. Compartment for powder or liquid detergent used for main wash. Compartment for liquid additives (fabric softener, starch). Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer.

Any fabric softener or starching additives must be poured into the compartment before starting the wash programme. CONTROL PANEL Below is a picture of the control panel. It shows the programme selector dial as well as the buttons and the pilot lights. These are presented by relevant numbers on the following pages. 1 2 3 4 5 6 7 8 9 1 2 3 4 5 6 7 8 9 Programme selector dial SPIN button PREWASH button STAIN button TIME SAVING button DISPLAY START/PAUSE button Indicator pilot lights DELAY START button 7 Symbols on the control panel: = Handwash = Child Lock Display (6) 6.

2 6.3 6.1 6.1 Duration of selected programme : After selecting a programme, the duration is displayed). The duration is calculated automatically on the in hours and minutes (for example basis of the maximum recommended load for each type of fabric.

After the programme has started, the time remaining is updated every minute. Alarm codes In the event of operating problems, some alarm codes can be displayed, for example (see chapter «What to do if...»). End of programme When the programme has finished a blinking zero is displayed, the DOOR pilot light (8.2), the WASHING pilot light (8.1) and the pilot light of button 7 go out and the door can be opened. Incorrect option selection If an option which is not compatible with the set wash programme is selected, the message Err is displayed for about 2 seconds and the yellow pilot light of button 7 light starts blinking. 6.

2 Delayed start The selected delay (20 hours max) set by means of the relevant button appears on the display for about 3 seconds, then the duration of the previously selected programme is displayed. The symbol 6.2 will appear on the display. The delay time value decreases by one unit every hour. When only 1 hour remains, the time decreases every minute. 6.3 Child safety locksymbol See section "Child safety lock" for details. 8 Indicator pilot lights (8) After having pressed the button 7, the FUNCTIONING pilot light (8.1) comes on. When the pilot light 8.

comes on this means that the machine is operating. The DOOR pilot light (8.2) indicates if the door can be opened: · light on: the door cannot be opened · light blinking: the door is opening · light off: the door can be opened When the appliance is performing additional rinses the EXTRA RINSE pilot light (8.3) comes on. To add an additional rinse, please see chapter «Select an additional rinse».

PERSONALIZATION Child safety lock This device permits you to leave the appliance unattended and not to worry that children might be injured by or cause damage to the appliance. This function remains able also when the washing machine is not working. There are two different ways to set this option: · Before pressing button 7: it will be impossible to start the machine. · after pressing button 7: it will be impossible to change any other programme or option. To enable or disable this option press simultaneously for about 6 seconds buttons 4 and 5 until the symbol 6.

3 appears or disappears on or from the display. DAILY USE Load the laundry 1. Open the door by carefully pulling the door handle outwards. @@Close firmly the door. You must hear a click during closing. 2. WARNING! @@1. Pull out the dispenser drawer until it stops. @@@@This function stays permanently on. @@The pilot light 8.

1 is on to indicate that the applite that the water must be emptied out before opening the door. @@The pilot light 8.2 goes off and the door can be opened. Turn the programme selector dial to to switch the machine off. @@If you do not intend to carry out another wash, close the water tap. @@@@The brightness of the display is reduced. @@load 6 kg - Red. @@@@load 6 kg White and coloured cotton with slight or normal soil. @@The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy.

@@load 6 kg - Red. load 3 kg For coloured cotton (normally soiled items). @@load 3 kg - Red. @@@@load 1 kg Synthetic fabrics to be gentle washed and spun. @@In this way ironing is easier.

Furthermore the machine will perform additional rinses. @@load kg 3 - Red. load kg 1,5 Delicate fabrics: acrylics, viscose, polyester. @@load 2 kg; Silk: max. @@@@The machine performs some rinses, followed by a final spin.

DRAIN Draining of water Max. @@SPIN Drain and long spin Maximum spin speed at 1400 rpm Max. @@Before selecting this programme the selector dial . @@@@load 6 kg White and fast coloured cotton. @@The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy. / OFF For cancelling the programme which is running or to switch the machine off. 15 Options SPIN reduction Detergent Compartment SPIN reduction / RINSE HOLD, PREWASH1), STAIN, EXTRA RINSE 3) 1) Option PREWASH cannot be selected together with option STAIN. 2) If you select the Super Quick option by pressing button 5, we recommend that you reduce the maximum load as indicated. (Red.

load = reduced load). Full loading is possible however with somewhat reduced cleaning results. 3) If using liquid detergents, a programme without prewash must be selected. 4) This option is not available with a temperature lower than 40°C. CARE AND CLEANING You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. 16 Care and cleaning Maintenance wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: · The drum should be empty of laundry.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>

· Select the hottest cotton wash programme. · Use a normal measure of detergent, must be a powder with biological properties. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Do not use methylated spirits, solvents or similar products to clean the cabinet. Detergent dispenser drawer The detergent dispenser drawer should be cleaned regularly.

1. Remove the detergent dispenser drawer by pulling it firmly.
2. Remove the conditioner insert from the middle compartment.
3. Clean all parts with water.
4. Put the conditioner insert in as far as it will go, so that it is firmly in place.
5. 6.

Clean all parts of the washing machine, especially the nozzles in the top of the washing-in chamber, with a brush. Insert the detergent dispenser drawer in the guide rails and push it in. Washing drum Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron. Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool. 1. 2. Remove any rust deposits on the drum with a cleaning agent for stainless steel. Run a washing cycle without any washing to clean off any cleaning agent residues. Care and cleaning 17 Programme: Short Cotton Programme at maximum temperature and add approx. 1/4 measuring cup of detergent.

Door seal Check from time to time the door seal and objects that could be trapped in the fold. Drain pump The pump should be inspected regularly and particularly if: · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: 1. Disconnect the appliance.

2. If necessary wait until the water has cooled down.
3. Open the pump door.
- 4.

5. Place a container close to the pump to collect any spillage. Release the emergency emptying hose, place it in the container and remove its cap cover. 18 Care and cleaning 6. When no more water comes out, unscrew the pump and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump. 7. Remove any objects from the pump impeller by rotating it. 8. Put the cap back on the emergency emptying hose and place the latter back in its seat.

9. Screw the pump fully in.
10. Close the pump door. **WARNING!** @@@@To clean the water inlet filters: 1. Turn off the water tap.
2. Unscrew the hose from the tap.
3. Clean the filter in the hose with a stiff brush.

4. Screw the hose back onto the tap. Make sure the connection is tight.
5. 6.

Unscrew the hose from the machine. Keep a towel nearby because some water may flow. @@@@pull out the plug from the power socket; 2. close the water tap; 3. if necessary, wait until the water has cooled down; 4.

open the pump door; 5. @@Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out; 6. clean the pump if necessary as previously described; 7. @@@close the water tap and unscrew the water inlet hose from the tap; 2. @@@@By doing this, any water remaining in the machine is removed, avoiding ice forming and consequently damage to the appliance. When you use the machine again, make sure that the ambient temperature is above 0°C.

Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO Valve device avoiding that part of the detergent remains unused at next washing. **WHAT TO DO IF...** Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the yellow pilot light of button 7 blinks and one of the following alarm codes appears on the display to indicate that the machine is not working: · problem with the water supply · problem with the water draining · door open · Once the problem has been eliminated, press the button 7 to restart the programme. If after all checks, the problem persists, contact your local Service Centre. What to do if.

.. Problem Possible cause/Solution 21 The washing machine does not start: The door has not been closed. · Close firmly the door. The plug is not properly inserted in the power socket.

· Insert the plug into the power socket. There is no power at the socket. · Please check your domestic electrical installation. The main fuse has blown. · Replace the fuse.

The selector dial is not correctly positioned and the button 7 has not been depressed. · Please turn the selector dial and press the button 7 again. The delay start has been selected. · If the laundry is to be washed immediately, cancel the delay start. The CHILD SAFETY LOCK has been activated. · Deactivate this device. The water tap is closed. · Open the water tap. The inlet hose is squashed or kinked. · Check the inlet hose connection.

The filter in the inlet hose or the inlet valve filter are blocked. · Clean the water inlet filters. (See "Cleaning the water inlet filters" for more details) The door is not properly closed. · Close firmly the door. The end of the drain hose is too low. · Refer to relevant paragraph in «Water drainage» section. The drain hose is squashed or kinked. · Check the drain hose connection. The drain filter is clogged. · Clean the drain filter.

An option or a programme that ends with the water still in the tub or a that eliminates all the spinning phases has been selected. · Disable the option. · Select the draining or the spinning programme. The laundry is not evenly distributed in the drum. · Redistribute the laundry.

The machine does not fill: The machine fills then empties immediately: The machine does not empty and/or does not spin: 22 What to do if... Problem Possible cause/Solution Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one.

Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection. The drain hose is damaged. · Change it with a new one. The cap on the filter has not been replaced or the filter has not been properly screwed in after cleaning action. · Put the cap back on the filter or screw the filter fully in. Too little detergent or unsuitable detergent has been used. · Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing.

· Use commercial products to treat the stubborn stains.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>

The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load. · Introduce into the drum less laundry. The programme is still running. · Wait the end of washing cycle. The door lock has not been released. · Wait until the pilot light DOOR has gone off. There is water in the drum.

· Select drain or spin programme to empty out the water. The transit bolts and packing have not been removed. · Check the correct installation of the appliance. The support feet have not been adjusted · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum. · Load more laundry. There is water on the floor: Unsatisfactory washing results: The door will not open: The machine vibrates or is noisy: Technical data Problem Possible cause/Solution 23 Spinning starts late or the machine does not spin: The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum.

This may happen several times before the unbalance disappears and normal spinning can resume. If, after some minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. · Redistribute the laundry. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. The machine makes an unusual noise: No water is visible in the drum: If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information. TECHNICAL DATA Dimensions Width Height Depth 60 cm 85 cm 63 cm Electrical connection Voltage - Overall power - Fuse Water supply pressure Maximum Load Spin Speed Information on the electrical connection is given on the rating plate, on the inner edge of the appliance door. Minimum Maximum Cotton Maximum 0,05 MPa 0,8 MPa 6 kg 1400 rpm 24 Consumption values CONSUMPTION VALUES Programme 1) White Cottons 95 °C Cottons 60 °C Cottons 40 °C Synthetics 40 °C Delicates 40 °C Wool/ Handwash 30 °C Energy consumption (kWh) 2).

0 1.3 0.70 0.5 0.55 0.25 Water consumption (litre) 2) 61 58 58 50 60 53 1) Refer to the display for the programme time. 2) The consumption information shown in this chart is indicative. It can vary depending on the quantity and the type of laundry, on the temperature of the water supply and on the ambient temperature. Standard programmes for the Energy Label consumption values The cotton 60 °C economy and 4060 MIX are the standard cotton programmes for normally soiled cotton laundry. They are suitable to clean normally soiled cotton laundry and they are the most efficient programmes in terms of combined energy and water consumption for washing that type of cotton laundry.

They agree with EN60456. The actual water temperature may differ from the declared cycle temperature. INSTALLATION INSTRUCTIONS INSTALLATION Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. Installation 1.

After removing all the packaging, carefully lay machine on its back to remove the polystyrene base from the bottom. 25 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. 3. Unscrew the three bolts using the key supplied with the machine. 26 Installation 4. Slide out the relevant plastic spacers. 5. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted on the door seal. 6. 7. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Connect the water inlet hose as described under the paragraph «Water inlet». Installation 27 Positioning and levelling Install the machine on a flat hard floor. @@ Before placing it on small tiles, apply a rubber coating.

@@@The water inlet hose and the drain hose must not be kinked. Please ensure that when the appliance is installed, it is easily accessible for the engineer in the event of a breakdown. Carefully level by screwing the adjustable feet in or out. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Water inlet An inlet hose is supplied and can be found inside the machine drum. This appliance must be connected to a cold water supply. Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2.

Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 28 Installation 3. Set the hose correctly by loosening the ring nut.

@@4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. @@@@This fault is shown by a red sector in the window «A».

Should this occur, turn the water tap off and refer to your Service Centre to replace the hose. A Water drainage · The height of drain hose do not have to exceed 100 cm. · The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre. · The drain hose must not be kinked and must be fastened to prevent it falls down. The end of the drain hose can be positioned in three ways: Installation 29 Directly into a drain pipe. Attach the hook to drain hose and hang it in the drain pipe. Make sure that the drain hose doesn't fall down. The end of the drain hose must always be ventilated, i.e.

the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose. Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall. MAX 100cm You can connect the drain hose to a siphon. The drain hose must be above the siphon. Fix the drain hose to the siphon with a clamp. The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>

30 Electrical connection **ELECTRICAL CONNECTION** Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use. **WARNING!** Connect the machine to an earthed socket. **WARNING!** The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution. **WARNING!** The power supply cable must be easily accessible after installing the machine. **WARNING!** Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.

ENVIRONMENT CONCERNS The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Packaging materials The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: · Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). · The machine works more economically if it is fully loaded. 31 · With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. ·

Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed. 192991951-A-132011

www.aeg.com/shop .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 54849 D user guide](http://yourpdfguides.com/dref/3855077)
<http://yourpdfguides.com/dref/3855077>