



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LAVAMAT 75470 FL. You'll find the answers to all your questions on the AEG-ELECTROLUX LAVAMAT 75470 FL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX LAVAMAT 75470 FL
User guide AEG-ELECTROLUX LAVAMAT 75470 FL
Operating instructions AEG-ELECTROLUX LAVAMAT 75470 FL
Instructions for use AEG-ELECTROLUX LAVAMAT 75470 FL
Instruction manual AEG-ELECTROLUX LAVAMAT 75470 FL

L 75270 FL
L 75470 FL
L 75670 FL

WASHING MACHINE

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 75470 FL user guide](http://yourpdfguides.com/dref/3855083)
<http://yourpdfguides.com/dref/3855083>

Manual abstract:

@@@Please spend a few minutes reading to get the very best from it. **ACCESSORIES AND CONSUMABLES** In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: www.aeg.com/shop **VISIT OUR WEBSITE FOR:** - Products - Brochures - User manuals - Trouble shooter - Service information www.aeg.com **4 SAFETY INFORMATION** Before the installation and use, read this manual carefully: · For your safety and the safety of your property · To help the environment · For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or give it to a different person. The manufacturer is not responsible if an incorrect installation and use causes damage. **GENERAL SAFETY** · Do not use the appliance for professional use. The appliance is only for domestic use. · Do not change the specifications of this appliance.

There is the risk of injury and damage to the appliance. @@Risk of explosion or fire. @@@Hard and sharp material can cause damage to the appliance. @@The glass can be hot (only for front-loading appliances). **CHILDREN AND VULNERABLE PERSON SAFETY** · Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge use the appliance.

They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety. · Keep all packaging away from children. There is the risk of suffocation or injury. · Keep all detergents away from children. · Keep children and pets away from the appliance when the door is open. · Before you close the appliance door, make sure that children and pets are not into the drum. · If the appliance has a child safety device, we recommend to activate it. **CARE AND CLEANING** · Deactivate the appliance and disconnect the mains plug from the mains socket. · Do not use the appliance without the filters. Make sure that the installation of the filters is correct.

An incorrect installation causes water leakages. **CHILD SAFETY DEVICE** · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. **INSTALLATION** · The appliance is heavy, be careful when you move it. · Do not transport your appliance without the transit bolts, you can damage **ENGLISH 5** · · · · internal components and cause leakages or malfunctions. Do not install and connect a damaged appliance. Make sure to remove all packaging and transport bolts. Make sure that the mains plug is disconnected from the mains socket during installation.

Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury. Do not install or use the appliance where the temperature is less than 0 °C. When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet.

Water connection · Do not connect the appliance with old hoses already used. Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages. · Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable. Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance.

Always pull the mains plug. · Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse. · Permanent connection. To connect the appliance permanently, install a double-pole isolating switch between the appliance and the electricity supply. It must have a minimum distance of 3 mm between the switch contacts and it must be the correct type for the necessary load. It must agree with the last electrical legislation. The switch must not break the yellow and green ground cable. Only a qualified electrician must install this type of device.

DISCARD THE APPLIANCE 1. Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it. 3.

Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

Electrical connection · Make sure that the appliance is earthed. · Make sure that the electrical information on the rating plate agrees with the power supply. **6 ENVIRONMENT CONCERNS PACKAGING MATERIALS** Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. · Always start a washing programme with the maximum load of laundry. · If necessary, use a stain remover when you set a programme with a low temperature. · To use the correct quantity of the detergent, check the water hardness of your domestic system **ECOLOGICAL HINTS** To help the environment, use less water and energy, obey these instructions: · Set a programme without the prewash phase to wash laundry with normal soil. **IN THE INTEREST OF THE ENVIRONMENT** · Connect the appliance to the **FOUL** system for the drain water. The sewage works keeps the drain water for the treatment before to release safely it into a river. Do not connect this appliance to the surface drain system of the water because it releases the drain water directly into a river or stream without a treatment and this can cause of pollution. Contact your local water authority to have more information. The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 75470 FL user guide](http://yourpdfguides.com/dref/3855083)
<http://yourpdfguides.com/dref/3855083>

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. ENGLISH 7 TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 605 / 850 / 605 mm 230-240 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Water supply 1) Maximum load Spin speed Cotton Maximum Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 7 kg 1200 rpm (L 75270 FL) 1400 rpm (L 75470 FL) 1600 rpm (L 75670 FL) 1) Connect the water inlet hose to a water tap with a 3/4" thread. 8 PRODUCT DESCRIPTION 1 2 3 8 9 10 4 5 6 7 11 12 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Rating plate 6 Drain pump 7 Feet for the appliance level 8 Water drain hose 9 Water inlet valve 10 Mains cable 11 Transit bolts 12 Feet for the appliance level ACCESSORIES 1 2 4 3 1 Spanner To remove the transit bolts. 2 Plastic caps To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. ENGLISH 9 CONTROL PANEL 1 2 3 Economy Super Eco 20 Min. - 3 kg Quick Intensive Jeans Curtains Rinse Spin/Drain Cottons + Prewash Extra Silent Synthetics + Prewash Easy Iron Delicates Wool/Silk On/Off Temp. Spin Stains Extra Rinse Time Save Delay Start Start/Pause 10 9 8 7 6 5 4 1 On/Off button 2 Programme knob 3 Display 4 Start Pause button 5 Delay start button 6 Time saving button 7 Extra rinse button 8 Stain button 9 Spin reduction button 10 Temperature button Press button 1 to activate the appliance again.

· After 5 minutes from the end of the washing programme. Refer to 'At the end of programme'. ON/OFF BUTTON 1 Press this button to activate or deactivate the appliance. A tune sounds when the appliance is activated. The AUTO OFF function automatically deactivates the appliance to decrease energy consumption when: · Before press button 4, you do not use the appliance for five minutes.

PROGRAMME KNOB 2 Turn this knob to set a programme. The related programme indicator comes on. DISPLAY 3 A B C D The display shows: A B · The maximum temperature of the programme. · The default spin speed of the programme. · 'No Spin' 1) and 'Rinse Hold' symbols. 10 C · The display symbols. 2) Symbols Description Washing phase Rinse phases Spin phase Child lock You cannot open the appliance door when the symbol is on. You can open the door only when the symbol goes off. If the programme is completed but the symbol stays on: · There is water in the drum. · The 'Rinse Hold' function is on. Delay start D · The programme time When the programme starts, the time decreases with steps of 1 minute. · The delay start When you press the delay start button, the display shows the delay start time. @@ Refer to 'Troubleshooting' chapter. @@ You change the programme while it operates. The indicator of the Start/Pause button 4 flashes.

@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@ Do not put the detergent into the prewash compartment. max. 2 kg All items in jeans. Jersey made items with hi-tech materials. max. 7 kg Quick washing programme, to be used for lightly soiled white/fast coloured cottons and mixed fabrics. max. 5 kg Jeans 60° - Cold Wash Rinses Short spin SPIN REDUCTION RINSE HOLD EXTRA RINSE TIME SAVE 1) SPIN REDUCTION RINSE HOLD EXTRA RINSE Quick Intensive 60°-40&5. 6. Measure out the detergent and the fabric conditioner.

Carefully close the detergent dispenser. @@ Turn the programme knob. The related programme indicator comes on. 2. The indicator of button 4 flashes with red colour.

3. The display shows the default temperature and spin speed. @@ 4. Set the available functions. @@ 5. Press button 4 to start the programme. The indicator of button 4 is on. INTERRUPT A PROGRAMME 1. Press button 4. The indicator flashes. 2. Press button 4 again. The washing programme continues. CANCEL A PROGRAMME 1. @@ 2.

Press button 1 again to activate the appliance. Now, you can set a new washing programme. @@ 1. Press button 4. The indicator flashes. 2. Change the function set. 2. Press button 5 again and again until the display shows '0'. 3. Press button 4. @@ To open the appliance door: 1. Press button 4. The door lock symbol in the display goes off. 2. Open the appliance door. 3. Close the appliance door and press button 4. The programme or the delay start continues. @@ To open the door do the steps that follow: 1. Deactivate the appliance. 2. Wait for some minutes. 3. Make sure that no water is in the drum. @@@@ The related symbols comes on. 2. @@ When the countdown is completed, the programme starts automatically. @@@@ Press button 4. @@ The acoustic signals operate.

In the display comes on. The indicator of the Start/Pause button 4 goes off. · The door lock symbol goes off. · Press button 1 to deactivate the appliance. @@@@ Turn the programme knob to set a new cycle. @@ Make sure that the drum is empty. · Keep the door ajar, to prevent mildew and odours. · Close the water tap. The washing programme is completed, but there is water in the drum: The drum turns regularly to prevent the creases in the laundry. The door stays locked.

You must drain the water to open the door. ENGLISH 19 To drain the water: 1. If necessary, decrease the spin speed. 2. Press the Start/Pause button 4. The appliance drain the water and spin. 3. When the programme is completed and the door lock symbol goes off, you can open the door 4. Deactivate the appliance. The appliance drain and spin automatically after approximately 18 hours.

20 HELPFUL HINTS AND TIPS THE LAUNDRY LOAD · Divide the laundry in: white, coloured, synthetics, delicates and wool. · Obey the washing instructions that are on the laundry care labels. · Do not wash together white and coloured items. · Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times. · Button up pillowcases, close zippers, hooks and poppers. Tie up belts. · Empty the pockets and unfold the items. · Turn inside out multilayered fabrics, wool and items with painted illustrations. · Remove hard stains.

· Wash with a special detergent heavy soil stains. · Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase. · Do not wash in the appliance : Laundry without hems or with cuts Underwired bras. Use a washing bag to wash small items.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 75470 FL user guide](http://yourpdfguides.com/dref/3855083)
<http://yourpdfguides.com/dref/3855083>

· A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.
DETERGENTS AND ADDITIVES · Only use detergents and additives specially made for washing machines. · Do not mix different types of detergents. · To help the environment, do not use more than the correct quantity of detergent.

· Obey the instructions that you find on the on packaging of these products. · Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil. · If you use liquid detergents, do not set the prewash phase. · If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball. **WATER HARDNESS** If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines.

In areas where the water hardness is soft it is not necessary to use a water softener. To know the water hardness in your area, contact your local water authority. Obey the instructions that you find on the packaging of the products. Equivalent scales measure the water hardness: · German degrees (°dH). · French degrees (°TH).

· mmol/l (millimol for each litre - international unit for the hardness of water). · Clarke degrees. **STUBBORN STAINS** For some stains, water and detergent is not sufficient. We recommend that you remove these stains before you put the items in the appliance. Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric. **ENGLISH 21** Water hardness table Level 1 2 3 4 Type soft medium hard very hard Water hardness °dH 0-7 8-14 15-21 > 21 °T.H. 0-15 16-25 26-37 > 37 mmol/l 0-1.5 1.

6-2.5 2.6-3.7 >3.7 Clarke 0-9 10-16 17-25 >25 22 **CARE AND CLEANING WARNING!** Disconnect the appliance from the mains supply before you clean it. **CAUTION!** @@Make regularly a maintenance wash. To do this: · Empty the laundry from the drum. @@@@If it becomes necessary, use a water softener to remove limescales. Use a special product made for washing machines. @@@@Only use special products to remove rust particles from the drum. @@@@Press the lever. 2. Pull the dispenser out. 2 3. 4.

Remove the top part of the liquid additive compartment. Clean all the parts with water. 5. 6. Clean the dispenser recess with a brush.

@@Clean the pump if: · The appliance does not drain the water. · The drum cannot turn. @@@@1. Disconnect the mains plug from the mains socket. 2. Do not remove the filter while the appliance operates. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump. 24 To clean the drain pump: 1. Open the drain pump door.

2. Pull the flap out to remove it. 3. 4. Put a container below the recess of the drain pump to collect the water that flows out. Press the two levers and pull forward the drainage duct to let the water flow out. 1 5. 6. 2 When the container is full of water, put the drainage duct back again and empty the container. Do steps 4 and 5 again and again until no more water flows out from the drain pump.

Pull back the drainage duct and turn the filter to remove it. Remove fluff and objects from the pump. 7. 8. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre. **ENGLISH 25 2 1** Clean the filter under the water tap and put it back in the pump into the special guides. 10. Make sure that you tighten correctly the filter to prevent leakages. 11.

Put the flap back and close the drain pump door. 9. **THE INLET HOSE FILTER AND THE VALVE FILTER** It could be necessary to clean the filters when: · The appliance does not fill with water. · The appliance fills with the water for a long time. To clean the water inlet filters: · The indicator of button 4 flashes and the display shows the related alarm. Refer to 'Troubleshooting'. **WARNING!** Disconnect the mains plug from the mains socket. 1. Close the water tap. 2.

Remove the water inlet hose from the water tap. 3. Clean the filter in the inlet hose with a stiff brush. 4. 5. Remove the inlet hose behind the appliance. Clean the filter in the valve with a stiff brush or a towel. 6. 7. 45° Install again the inlet hose.

Make sure that the couplings are tight to prevent leakages. Open the water tap. 35° **EMERGENCY DRAIN** Because of a malfunction, the appliance cannot drain the water. If this occurs, do steps (1) through (6) of 'To clean the drain pump'. If necessary, clean the pump.

Put the drainage duct back and close the drain pump flap. 26 When you drain the water with the emergency drain procedure, you must activate again the drain system: 1. Put 2 litres of water in the main wash compartment of the detergent dispenser. 2. Start the programme to drain the water.

FROST PRECAUTIONS If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump. 1. Disconnect the mains plug from the mains socket. 2. Close the water tap. 3. Remove the water inlet hose 4. Put the two ends of the inlet hose in a container and let the water flow out of the hose. 5. Empty the drain pump.

Refer to the emergency drain procedure 6. When the drain pump is empty, install the inlet hose again. **WARNING!** Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures. **ENGLISH 27**

TROUBLESHOOTING The start of the appliance does not occur or it stops during operation. First try to find a solution to the problem (refer to the table). If not, contact the service centre. With some problems, the acoustic signals operate and the display shows an alarm code: · - The appliance does not fill with water. Problem The appliance does not fill with water. Possible cause The water tap is closed.

· - The appliance does not drain the water. · - The appliance door is open or not closed correctly. · - The anti-flood device is on. **WARNING!** Deactivate the appliance before you do the checks. Possible solution Open the water tap.

· The water inlet hose is damaged. Make sure that the water inlet hose has no damages. The filters in the water in- Clean the filters. Refer to 'Care let hose is blocked . and cleaning'.

The water tap is blocked or is furred with limescale. The connection of the water inlet hose is not correct. Clean the water tap. Make sure that the connection is correct. The water pressure is too Contact your local water authorilow. ty. The appliance does not drain the water. The water drain hose is damaged. The filter of the drain pump is blocked. The connection of the water drain hose is not correct.

A washing programme without the drain phase is set.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 75470 FL user guide](http://yourpdfguides.com/dref/3855083)
<http://yourpdfguides.com/dref/3855083>

The function Rinse & Hold is on. The appliance door is open or not closed correctly. Make sure that the water drain hose has no damages. Clean the filter of the drain pump. Refer to 'Care and cleaning'. Make sure that the connection is correct. Set the drain programme. Set the drain programme. Close the door correctly.

28 Problem The anti-flood device is on. The spin phase does not operate. Possible cause Possible solution · Disconnect the appliance. · Close the water tap. · Contact the service centre.

The spin phase is off. The filter of the drain pump is blocked. Balance problems with the laundry load. Set the spin programme. Clean the filter of the drain pump.

Refer to 'Care and cleaning'. Adjust manually the items in the tub and start the spin phase again. @@@@4. The delay start is set. The Child Lock function is activated. There is water on the floor. Leakages from the couplings of the water hoses. Leakages from the drain pump. The water drain hose is damaged. You cannot open the appliance door.

To start immediately the programme, cancel the delay start. Deactivate the Child Lock function. Make sure that the couplings are tight. Make sure that the drain pump filter is tight. @@ is in operation. There is water in the drum. Set the drain or the spin programme. Adjust the level of the appliance. Refer to 'Installation'. Remove the packaging and/or the transit bolts.

Refer to 'Installation'. @@ You did not remove the packaging and/or the transit bolts. The load is very small. ENGLISH 29 Problem The appliance fills with water and drain immediately. The washing results are not satisfactory.

Possible cause The end of the drain hose is too low. The detergent you used was not sufficient or correct. You did not remove the stubborn stains before you wash the laundry. Incorrect temperature was set. Too much laundry load.

Possible solution Make sure that the drain hose is in the correct position. Increase the detergent quantity or use a different one. Use special products to remove the stubborn stains. Make sure that you set the correct temperature. Decrease the laundry load. If the display shows other alarm codes, contact the service centre. After the check, activate the appliance. The programme continues from the point of interruption. @@ Use the gloves. Remove the external film.

If necessary, use a cutter. 2. 3. Remove the cardboard top. @@@@ Carefully put down the appliance with the rear side on it. Make sure not to damage the hoses. 7. 8. 1 Remove the polystyrene protection from the bottom. Pull up the appliance in vertical position.

2 9. @@ Remove the three bolts. Use the key supplied with the appliance. 11. Pull out the plastic spacers.

32 12. Replace the plastic spacers with the plastic caps. You can find these caps in the user manual bag. WARNING! Remove all the packaging and the transit bolts before you install the appliance. We recommend that you keep the packaging and the transit bolts for when you move the appliance.

POSITIONING AND LEVELLING · Install the appliance on a flat hard floor. · Make sure that carpets do not stop the air circulation below the appliance. · Make sure that the appliance does not touch the wall or other units · Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents the vibration, noise and the movement of the appliance when in operation. x4 · The appliance must be level and stable. CAUTION! Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level. Make sure that there is sufficient access after the installation for possible repairs by a qualified person. ENGLISH 33 Installation on a not hard floor When you install the appliance on a not hard floor (wooden planks floor), put a rigid support plinth under the appliance feet to prevent the noise and the vibration. Assemble the plinth with a waterproof wood panel (min. 15 mm thick) and at- tach it to the beams of the floor with minimum 2 screws.

The plinth must extend of some cm more than the edges of the appliance. We recommend you to install the appliance in one of the corners of the room, where the floor is more stable. THE INLET HOSE · Connect the hose to the appliance. Turn the inlet hose only left or right. Loose the ring nut to set it in the correct position. 35 O 45 O · Connect the water inlet hose to the cold water tap with 3/4 thread. CAUTION! Make sure that there are no leaks from the couplings. Do not use an extension hose if the inlet hose is too short. Contact the service centre for the replacement of the inlet hose. Water pressure The appliance works correctly if the water pressure is not less than 0.

05 MPa (0.5 bar). If you can not connect the water inlet hose to the cold water tap of the primary hydraulic system, connect it to your domestic cold water storage system. Make sure not to have more than a distance of 5.02 m (16.

5 ft) between the appliance inlet hose and the bottom of the water storage tank. 34 Water-stop device The inlet hose has a water stop device. This device prevents water leaks in the hose because of its natural ageing. The red sector in the window «A» shows this fault . If this occur, close the water tap and contact the service centre to replace the hose.

A WATER DRAINAGE There are different procedures to connect the drain hose: With the plastic hose guide. · On the edge of a sink. · Make sure that the plastic guide cannot move when the appliance drains. Attach the guide to the water tap or the wall. · To a stand pipe with vent-hole. Refer to the illustration. Directly into a drain pipe at a height of not less than 60 cm (23.6") and not more than 100 cm (39.3"). The end of the drain hose must always be ventilated , i.

e. the inner diameter of the drainpipe (min. 38 mm -- min. 1.5") must be larger than the external diameter of the drain hose. ENGLISH 35 · If the end of the drain hose is this (see the drawing), you can push it directly into the stand pipe. Without the plastic hose guide. · To a sink spigot. Refer to the illustration. Put the drain hose in the spigot and tighten it with a clip.

Make sure that the drain hose makes a loop to prevent that remaining particles go in the appliance from the sink. · Directly to a built-in drain pipe in the room wall and tighten it with a clip. You can extend the drain hose to maximum 400 cm. Contact the service centre for the other drain hose and the extension. www.aeg.com/shop 132939750-A-112011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVAMAT 75470 FL user guide](http://yourpdfguides.com/dref/3855083)
<http://yourpdfguides.com/dref/3855083>