



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LAVATHERM 59880. You'll find the answers to all your questions on the AEG-ELECTROLUX LAVATHERM 59880 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX LAVATHERM 59880
User guide AEG-ELECTROLUX LAVATHERM 59880
Operating instructions AEG-ELECTROLUX LAVATHERM 59880
Instructions for use AEG-ELECTROLUX LAVATHERM 59880
Instruction manual AEG-ELECTROLUX LAVATHERM 59880

LAVATHERM 59880

Benutzerinformation
User manual
Notice d'utilisation
Gebruiksaanwijzing

Wäschetrockner
Tumble dryer
Sèche-linge
Droogtrommel



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVATHERM 59880 user guide](http://yourpdfguides.com/dref/3859992)
<http://yourpdfguides.com/dref/3859992>

Manual abstract:

@@@ and please pass it to any future owner of the appliance. We wish you much joy with your new appliance. @@) 47 DELAY START (STARTUITSTEL) 48 Setting child lock 48 Starting the programme 48 Changing programme 48 Programme complete / Laundry unloading 48 DRYING RACK 49 CARE AND CLEANING 51 Cleaning fluff filter 51 Cleaning the door seal 52 Emptying the water reservoir 52 Cleaning heat exchanger filters 53 To clean the drum 55 Clean operating screen and housing 55 WHAT TO DO IF . 56 MACHINE SETTINGS 57 TECHNICAL INFORMATION 58 SERVICE 58

Subject to change without notice In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. - Please read the instruction book before using this appliance.

It is dangerous to alter the specifications or attempt to modify this product in any way. â· This appliance is not intended for use by persons (including children) with reduced physical and sensory conditions or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. â· Make sure that small children and pets do not climb inside the drum. To avoid this, please check into the drum before using. â· Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. â· In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts etc. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. â· Always unplug the appliance after use, cleaning and maintenance.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. contact your local Service Centre. Always insist on genuine spare parts. â· Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. â· Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like).

As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water. @@@@Do not spray down the appliance with jets of water. â· The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that items will not be damaged. â· The tumble dryer is not to be used if industrial chemicals have been used for cleaning. â· Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Care should be taken when moving it. â· When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. â· All packaging must be removed before use.

Serious damage can occur to the product and to property if this is not adhered to. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. â· If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. â· After having installed the appliance, check that it is not pressing or standing on its electrical supply cable. It must not be used for purposes other than those for which it was designed. â· Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label. Clothes which are dripping wet should not be placed in the dryer. â· Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. â· Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. â· Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.

@@@@@For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. The packaging materials are environmentally friendly and can be recycled.

The heat pump of your tumble dryer contains a closed refrigerant circuit filled with a refrigerant which is free from fluoro-chloro-hydrocarbons.

The refrigerant circuit in the heat pump must not be damaged. WARNING! When a unit is no longer being used: Â· Pull the plug out of the socket. This prevents children from trapping themselves inside and endangering their lives. Fabric softeners are not therefore needed when washing. â· Your dryer will function most economically if you: Â Always keep the ventilation slots on the base of the dryer unobstructed; Â Use the loading volumes specified in the programme overview; Â Ensure you have good ventilation in the installation room; Installation Â Clean the micro-fine filter and fine strainer after each drying cycle; Â Spin the laundry well before drying.

Energy consumption depends on spinning speed set in washing machine. Higher spinning speed - lower energy consumption. Only tip the appliance on its left side to transport (see illustration), if it cannot be transported in an upright position. WARNING! If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged. It is recommended that, for your convenience, the appliance is positioned close to your washing machine. â· The tumble dryer must be installed in a clean place, where dirt does not build up. â· Air must be able to circulate freely all round the appliance.



[You're reading an excerpt. Click here to read official AEG-](#)

[ELECTROLUX LAVATHERM 59880 user guide](#)

<http://yourpdfguides.com/dref/3859992>

Do not obstruct the front ventilation grille or the air intake grilles at the back of the appliance. To keep vibration and noise to a minimum when the tumble dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the tumble dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance. The appliance must therefore not be installed on floors which are not resistant to high temperatures. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance. Should the appliance be moved, it must be transported vertically. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the tumble dryer is restricted. Before use all parts of the transport packaging must be removed.

Pull off adhesive strips from inside appliance on top of drum. The inside of the drum must be clean. Lift slightly rack and take it carefully out from the drum. **WARNING!** The plug must be accessible after installing the machine.

5. 6. 7. e 8. 9.

10. 11. On the applicable to tumble dry. Do not dry cotton jersey and knitwear with the EXTRA programme (1200 rpm). Please dry heavy laundry items made of wool separately. Turn items with double-layered fabrics inside out (e. g. With cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

the appliance has been switched on. When the loading door is opened, the drum light is illuminated. Do not jam the laundry in between the loading door and rubber seal. Load the laundry (do not force it in). Use the programme selector to set the programme you require. The higher spin speed was, the shorter drying cycle length. This option helps to keep laundry free from creases. Laundry can be removed at any time during the anti-crease phase. the child lock function locks all buttons and the programme dial. Once the drying cycle is complete, display shows a blinking , under anti-crease icon appears dash.

If the buzzer the pressure points on the sides and pull the filter frame up and out of the housing. Remove fluff from the fluff filter with a moist hand. Use a moist hand to remove the fluff from the filter in the base. Care and cleaning If necessary pull out and clean the filter with warm water using a wiper or brush. Clean the inside of the door, the fluff filter chamber and the rubber seals of fluff.

Insert the second fluff filter into the filter housing (it has to audibly lock) and slide it inside the filter chamber b. close the door in plinth. Note: If the fluff filter is not inserted in the filter housing, the filter housing cannot be slide into the appliance base. Once every 6 months, remove the fluff from the heat exchanger using the sponge supplied. When doing this, please use rubber gloves.

Tip: The fluff can be removed more easily if it is first dampened (e. g. With a laundry dampener) or with the help of vacuum cleaner. Do not use abrasive materials to clean the drum. keep the inner surface of the drum and the drum blades clean. This cause that the laundry is not sufficient dry. Use a damp cloth to wipe down the operating screen and housing. Turn the dryer off and on. set requested parameters. Turn it to DRUM LIGHT (if available) or to any programme.

Replace light bulb (see next section). Automatic process; this is not a machine fault. empty water reservoir3), press START PAUSE button. Select time programme or higher drying level (e. Lower the room temperature if possible. Loading door does not close Filters not locked in place. E51- only dryers with the LCD): Switch the dryer off and on. Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local service centre. When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.

These develop too much heat and may damage the appliance! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse. 1. Unscrew cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section. Screw cover back down. Check the correct positioning of o-ring gasket before screwing back the door light cover.

Do not operate the dryer when missing o-ring gasket on door light cover. **WARNING!** For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated. Turn the programme dial to any programme. 2.

Push at the same time the DRYNESS (DROOGTEGRAAD) and SPIN SPEED (T/ MIN) buttons and hold down for approx. You can use the buzzer option to activate or deactivate sound but the machine does not memorise your selection. 1. Turn the programme dial to any programme. Turn the programme dial to any programme. (2) By default the warning LED is always on at the end of the drying cycle or during the cycle if the water reservoir is full.

When using an external drain for the condensed water warning can be offi Height x width x depth drum volume depth with the load door opened adjustable height the appliance weight maximum load volume voltage necessary fuse total power energy efficiency class energy consumption kWh/cycle 1) annual energy consumption type of use permitted ambient temperature If there are technical faults, first check if you can remedy the problem yourself with the help of the operating instructions - see chapter What to do if. If you cannot remedy the problem on your own, get in touch with the Customer Care Department or one of our service partners. To assist you quickly, these data are necessary: Model description Product number (PNC) Serial number (S No. is on rating plate stuck to the product - to find it see chapter Product description)) Type of failure Any error messages shown by the display.

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here: This appliance is not intended for use by persons (including children) with reduced physical and sensory conditions or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Make sure that small children and pets do not climb inside the drum. To avoid this, please check into the drum before using.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVATHERM 59880 user guide](http://yourpdfguides.com/dref/3859992)
<http://yourpdfguides.com/dref/3859992>

*Please make sure that no gas lighters or matches have accidentally been left in pockets of garments incase they are loaded into appliance AVERTISSEMENT
Â· risk of fire! Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. .*



[You're reading an excerpt. Click here to read official AEG-
ELECTROLUX LAVATHERM 59880 user guide
http://yourpdfguides.com/dref/3859992](http://yourpdfguides.com/dref/3859992)