



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LAVATHERM 65170 AV. You'll find the answers to all your questions on the AEG-ELECTROLUX LAVATHERM 65170 AV in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX LAVATHERM 65170 AV**  
**User guide AEG-ELECTROLUX LAVATHERM 65170 AV**  
**Operating instructions AEG-ELECTROLUX LAVATHERM 65170 AV**  
**Instructions for use AEG-ELECTROLUX LAVATHERM 65170 AV**  
**Instruction manual AEG-ELECTROLUX LAVATHERM 65170 AV**

LAVATHERM 65170AV	NL DROOGTROMMEL	GEbruiksAANWIZING	2
	EN TUMBLE DRYER	USER MANUAL	23
	FR SECHE-LINGE	NOTICE D'UTILISATION	42
	DE WÄSCHETROCKNER	BENUTZERINFORMATION	62



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVATHERM 65170 AV user guide](http://yourpdfguides.com/dref/3855064)  
<http://yourpdfguides.com/dref/3855064>

**Manual abstract:**

The information can be found on the rating plate. Model PNC Serial Number The following symbols are used in this user manual: Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler. Features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it. In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags. In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Make sure that there is access to the mains plug after the installation.

• Always unplug the appliance after use, cleaning and maintenance. • Contact your local Service Centre. Always insist on genuine spare parts.

• As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.

• If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. • Please make sure that no gas lighters or matches have accidentally been left in pockets of garments in case they are loaded into appliance. • The condensed water is not applicable to drink or to prepare food. It can cause health problems to people and pets. • Do not seat or lean on the load door. It is dangerous to alter the specifications or attempt to modify this product in any way.

• To avoid this, please check into the drum before using. • Items such as foam rubber (latex foam), shower caps, waterproof textiles (if there is no special drying programme), rubber backed articles and clothes or pillows fitted with foam rubber pads must not be dried in the tumble dryer. To prevent from the risk of self combustion do not stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. • Lint must not be allowed to accumulate around the tumble dryer. Do not spray down the appliance with jets of water. • The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. • The tumble dryer is not to be used if industrial chemicals have been used for cleaning. • Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Air must flow freely below the appliance. • After the appliance installation, check that it is not squeeze or stay on the electrical supply cable.

• If the tumble dryer is put on top of a washing machine, it is mandatory to use the stacking kit (optional accessory - see chapter: "ACCESSORIES"). • After having installed the appliance, check that it is not pressing or standing on its inlet hose. This appliance is for domestic use only. It must not be used for other functions. • Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on each piece of clothing label. • Do not dry not washed items in the tumble dryer. • Do not put more load than recommended. Clothes which are dripping wet must not be put in the tumble dryer.

• Be careful when you move the appliance.

• If in doubt, do not use it and contact the Service Centre. • All packaging must be removed before use. • The rear surface of the appliance must be put against the wall. • Hot surface: Do not touch the door light cover surface when the light is switched on. • Hot surface: Do not touch the back of the appliance while it is operating! Keep all detergents in a safe place out of children's reach. • Make sure that children or pets do not climb inside the drum. This prevents children or pets to be closed in the appliance. There is a risk of suffocation. This machine is not intended for use by young children or infirm persons without supervision. • Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.

Plastic film, polystyrene) can be dangerous to children Keep them out of children's reach. On the product or on its The symbol packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Read carefully the instructions supplied with the kit. • The drawer can be use for laundry storage e. Read carefully the instructions supplied with the accessory. • Read carefully the instructions supplied with the kit. • g.

30 minutes time programme) with the load of moist cloths. To dry thin fabrics which are not ironed, e. g. • To dry thin fabrics which are also to be ironed, e. • put fabrics in the tumble dryer straight. • Dry only the laundry applicable to dry in the tumble dryer. Make sure if the laundry is applicable to dry in the tumble dryer. do the check of the fabric mark on the clothes. • Turn items with 2 fabric layers inside out (e. • This function prevents laundry from creases.

Laundry can be removed during the anti-crease phase. • To dry lightly of fabrics that are frequently worn. Programme starts on full heat setting, which is then decrease as To activate the programme push the Start/Pauze (Start/Pause) button. The LED above the push button changes the colour to red. To change a programme, turn the pro(off) and then set the gramme dial to programme again.

When the drying cycle is complete, LEDs Einde (End) and Filter are on .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVATHERM 65170 AV user guide](http://yourpdfguides.com/dref/3855064)  
<http://yourpdfguides.com/dref/3855064>

@@@@@@@Do not use fabric softener to wash and then dry. If necessary clean the condensate before (e. g. With a coffee filter) to remove possible small pieces of fluff.

@@@@@ Clean the filter after each drying cycle. Spin good the laundry before drying. @ The temperature of the hot air which occurs in the tumble dryer can increase to 60 °C. The appliance must not be installed on the floor which is not resistant to high temperatures. When the tumble dryer operates, the room temperature must not be lower than +5 °C and higher than +35 °C. If it is necessary to move the appliance, it must be moved vertically. The appliance must not be installed behind a lockable door, a sliding door, a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the tumble dryer is restricted. Before use all parts of the transport packaging must be removed. Pull off adhesive strips from inside machine on top of drum. There are 3 vent outlets: on the left, right side and at the rear.

1. Pull the ring nut A from the vent outlet at the rear. Make sure that the vent hose length is less than 2 m, and that it contains no more than 2 bends. As to the outlet itself, if you have decided on a install wall/window grille, a good local builder's merchant can supply you with the necessary fittings and installation advice. **wARNING!** It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to transmit the exhaust from a fuel burning appliance. Screw on the ring nut to the hose and push it into position. The not used vents must be sealed with supplied covers. If the hose is long and the room temperature low, the moisture might condense to water inside the hose. This is an usual occurrence. @@@@In order to prevent the appliance from overheating, it is important Thus, if a permanent hose installed to an external wall or ceiling, it must be ensured an exhaust capacity of minimum 150 m<sup>3</sup>/h.

If the dryer is installed adjacent to kitchen units, make sure that the vent hose is not squashed. If the hose is not fully squashed, drying efficiency will be decreased, resulting in longer drying times and higher energy consumption. If the hose is fully squashed, the automatic cut-outs with which the appliance is fitted can operate. When operating the tumble dryer, the room temperature must not be lower than +5 °C and higher than +35 °C, as it can affect the performance of the appliance. Unscrew hinge A from the front of the appliance and remove the load door.

To do this, put a thin screwdriver into the slots as shown in the illustration, push down lightly and remove the cover plates. Use an applicable tool and apply pressure to unlock part C, remove and turn it through 180°, then put on the other side. **cAUTION!** There is a small spri.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LAVATHERM 65170 AV user guide](http://yourpdfguides.com/dref/3855064)  
<http://yourpdfguides.com/dref/3855064>