



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX LN58460. You'll find the answers to all your questions on the AEG-ELECTROLUX LN58460 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX LN58460
User guide AEG-ELECTROLUX LN58460
Operating instructions AEG-ELECTROLUX LN58460
Instructions for use AEG-ELECTROLUX LN58460
Instruction manual AEG-ELECTROLUX LN58460

LAVAMAT LN 58460

DA VASKEMASKINE

BRUGSANVISNING



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LN58460 user guide](http://yourpdfguides.com/dref/5121554)
<http://yourpdfguides.com/dref/5121554>

Manual abstract:

Tryk en eller flere gange på knappen 2 for at ændre hastighed, hvis tøjjet skal centrifugeres ved en anden hastighed end den, som er standard for programmet.
@@For at slukke for maskinen. @@@@ @@@@ @ niveller ved at skrue benene ind eller ud. Placér aldrig pap, træ eller lignende materialer under maskinen for at kompensere for ujævnheder i gulvet. @@.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX LN58460 user guide](http://yourpdfguides.com/dref/5121554)
<http://yourpdfguides.com/dref/5121554>