



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX T75470AH. You'll find the answers to all your questions on the AEG-ELECTROLUX T75470AH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX T75470AH**  
**User guide AEG-ELECTROLUX T75470AH**  
**Operating instructions AEG-ELECTROLUX T75470AH**  
**Instructions for use AEG-ELECTROLUX T75470AH**  
**Instruction manual AEG-ELECTROLUX T75470AH**

LAVATHERM 75470AH

TUMBLE DRYER

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T75470AH user guide](http://yourpdfguides.com/dref/3965755)  
<http://yourpdfguides.com/dref/3965755>

**Manual abstract:**

@@@@@Please spend a few minutes reading to get the very best from it. **ACCESSORIES AND CONSUMABLES** In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: [www.aeg.com/shop](http://www.aeg.com/shop) **VISIT OUR WEBSITE FOR:** - Products - Brochures - User manuals - Trouble shooter - Service information [www.aeg.com](http://www.aeg.com) **4 SAFETY INFORMATION** In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. - Read the instruction manual before the appliance use. - Make sure that there is access to the mains plug after the installation. - Always unplug the appliance after use, cleaning and maintenance.

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. - Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water. - **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. - If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. - Please make sure that no gas lighters or matches have accidentally been left in pockets of garments in case they are loaded into appliance - The condensed water is not applicable to drink or to prepare food. It can cause health problems to people and pets. - Do not seat or lean on the load door. The appliance can tilt. **GENERAL SAFETY** - It is dangerous to alter the specifications or attempt to modify this product in any way.

@@@@@To avoid this, please check into the drum before using. @@@@ - **Risk of fire!** To prevent from the risk of self combustion do not stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. - Lint must not be allowed to accumulate around the tumble dryer. - **Risk of electric shock!** Do not spray down the appliance with jets of water. - The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. - The tumble dryer is not to be used if industrial chemicals have been used for cleaning. - Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Air must flow freely below the appliance. - After the appliance installation, check that it is not squeeze or stay on the electrical supply cable. - If the tumble dryer is put on top of a washing machine, it is mandatory to use the stacking kit (optional accessory - see chapter: "ACCESSORIES").

**USE** - This appliance is for domestic use only. It must not be used for other functions. - Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on each piece of clothing label. - Do not dry not washed items in the tumble dryer.

- Do not put more load than recommended. Obey the maximum load volume. See the related chapter in the user manual. - Clothes which are dripping wet must not be put in the tumble dryer. - Garments which have been in contact with volatile petroleum products should not be machine dried.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the appliance. - Do not use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.

@@ - **Risk of fire!** @@@@Be careful when you move the appliance. - When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. - All packaging must be removed before use. @@See relevant section in the user manual. @@@@ @@@@ **WARNING!** - **Danger of suffocation!** The packaging components (e.g. @@@@ - Cut off the mains cable and discard it.

- Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation. **ENVIRONMENT CONCERNS** **PACKAGING MATERIALS** Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. on the product or on its The symbol packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. **ENGLISH 7 PRODUCT DESCRIPTION** 1 2 3 4 11 10 9 8 5 6 7 1 Water container 2 Control panel 3 Load door (reversible) 4 Primary filter 5 Sliding button to open the heat exchanger door 6 Airflow slots 7 Adjustable feet 8 Heat exchanger door 9 Heat exchanger filters cover 10 Lock knob 11 Rating plate 8 **ACCESSORIES** **STACKING KIT** 1 m from floor level.

The hose cannot be in loop. If possible decrease the length of the hose. Read carefully the instructions supplied with the kit. **PEDESTAL WITH THE DRAWER** Product name: SKP11 Available from your authorized dealer. Stacking kit can be used only with the washing machines specified in the leaflet. See leaflet attached. Read carefully the instructions supplied with the kit.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T75470AH user guide](http://yourpdfguides.com/dref/3965755)  
<http://yourpdfguides.com/dref/3965755>

**DRAINING KIT** Product name: PDSTP10. Available from your authorized dealer. To put the appliance higher at the level which helps to easy load and remove the laundry .

The drawer can be use for laundry storage e.g. : towels, cleaning products and more. Read carefully the instructions supplied with the accessory. **DRYING RACK** Product name: DK11. Available from your authorized dealer (can be attached to some types of the tumble dryers) Installation kit for through draining of the condensed water into a basin, siphon, gully, etc. After installation the water container is drained automatically. The water container must stay in the appliance. Installed hose must be on the height from minimum of 50 cm to maximum of ENGLISH 9 Available from your authorized dealer (can be attached to some types of the tumble dryers) Drying rack accessory let to dry safely in the tumble dryer: · sport shoes · wool · soft toys · lingerie Read carefully the instructions supplied with the kit. 10 **CONTROL PANEL** 1 2 3 4 5 6 7 8 9 10 11 12 1 Programme dial On/Off 2 Push button Programme indicators 3 4 Push button 5 Push button 6 Push button 7 Push button 8 Push button 9 Push button 10 Display Dry Plus Reverse Plus Antcrease Buzzer Time Drying Delay Start Symbol Description maximum extra dryness reverse plus m/ m anti-crease time drying cycle phase indicator cooling cycle phase indicator crease guard cycle phase indicator child lock activated delay start cycle time indication Start/Pause 11 Push button drain the wa12 Indication lamps: ter container, clean the primary clean the heat exchangfilter, er filters **DISPLAY** Symbol Description default dryness level moderate extra dryness time programme selection (10 min.

- 2h.) delay start selection (30 min. 20h.) ENGLISH 11 **BEFORE FIRST USE** Clean the tumble dryer drum with a moist cloth or set a short programme (e.g. 30 minutes time programme) with the load of moist cloths. **CAUTION!** The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chlorohydrocarbons. This system must stay tight. The damage of the system can cause the leakage and damage of the appliance. At the beginning of drying cycle (3-5 min.

) there could be a slightly higher sound level. @@Drying level: extra dry. To dry cotton pieces of clothing. Drying level: cupboard dry. To dry cotton pieces of clothing.

Drying level: applicable to iron. all except Reverse Plus and Time Drying all coloured textiles colours can bleed · cotton jersey and knitwear only with the applicable programmes - items can shrink Do not put more laundry than the maximum load which is 7kg. 14 **LOADING THE LAUNDRY** Push the On/Off button to activate the appliance. **SETTING A PROGRAMME** 1. Pull the appliance door 2.

Load loosely the laundry. 3. Close the appliance door. **CAUTION!** @@@@-- the selection to get the laundry lightly dried. @@1. Set the drying programme and functions. 2. @gramme has to start after 12 hours.) 3. To activate the Delay start function, push the Start/Pause button.

@@acrylic, viscose). This function helps also to decrease the creases on the laundry. @@@@This function prevents laundry from creases. @@@@to maximum of 2 hours (in 10 min. steps). To activate the programme push the Start/Pause button. The LED above the push button changes the colour to red. 16 **CHANGE A PROGRAMME** To change a programme, push the On/ Off button to deactivate appliance. @@Push the On/Off button for 2 seconn the water container and press the start button. @@Pull the water container.

2. Move the water container in horizontal position. 3. @@Move plastic connection in and install water container. **WARNING!** Risk of poisoning. The condensed water is not applicable to drink or to prepare food. The condensed water can be used as distilled water, e.g. for steam ironing. If necessary filter the condensed water (e.

g. @@Open the loading door. 2. @@Turn the blockage to unlock the heat exchanger cover. 4. Lower the heat exchanger filters cover. ENGLISH 23 5. Lift the primary filter. @@Push the hook to open the filter. 7.

Use a moist hand to clean the filter. If necessary clean the filter with warm water using a brush. Close the filter. 24 8. Clean the small filter from the base 9. @@You can use a vacuum cleaner. 10. Put the small filter and heat exchanger filter back. 11. Close the heat exchanger cover.

12. Lock the blockage until it snaps. 13. Close the heat exchanger filters cover. 14.

Close the heat exchanger door. 15. Put the primary filter. **CAUTION!** @@This could cause the damage to the tumble dryer. This also increases energy consumption.

Do not use sharp objects to clean the heat exchanger compartment. @@Disconnect the appliance before you clean it. @@Dry the cleaned surfaces with a soft cloth. **CAUTION!** Do not use abrasive materials or steel wool to clean the drum. ENGLISH 25 **CLEANING THE CONTROL PANEL AND HOUSING** Use a standard neutral soap detergent to clean the control panel and housing. Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth. **CAUTION!**

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance. 26 **TROUBLE SHOOTER AND SERVICE TROUBLESHOOTING** Problem1) Possible cause The tumble dryer is not connected to mains supply. The loading door is opened.

The tumble The On/Off button was not dryer does pushed. not operate. The Start/Pause button was not pushed. The appliance is in the standby mode. Incorrect programme selection. The filter is clogged. The Dry Plus function was in minimum mode. Unsatisfactory drying results. The condenser is clogged. Too high volume of the load.

The airflow grill is clogged. Dirt on the inner surface of the drum. Too high water hardness. The door does not close. The filter not locked in the position. The laundry is locked between the door and the seal. You try to change the programme or the function after the start of the cycle. @@Defective drum light. Remedy Connect in at mains socket. Check fuse in fuse box (domestic installation).

Close the loading door. Push the On/Off button. Push the Start/Pause button. Push the On/Off button. Do the selection of the applicable programme. 2) Clean the filter. 3) Change the Dry Plus function to the moderate or maximum mode. Clean the condenser. 3) Obey the maximum load volume. Clean the airflow grill in the bottom of the appliance.

Clean the inner surface of the drum. Set applicable water hardness4). Put the filter in the correct position. Put the load correctly in the drum. Turn the tumble dryer off and on. Make the new selection. Turn the tumble dryer off and on. Make the new selection. @@dampness of the laundry. The water container is full. Drain the water container3) , push the Start/Pause button. Do the selection of time programme. The time value must be related to the load. @@Do the selection of time programme or higher drying level (e.g.

Extra Dry ) Clean the filter.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T75470AH user guide](http://yourpdfguides.com/dref/3965755)  
<http://yourpdfguides.com/dref/3965755>

Obey the maximum load volume. Spin correctly the laundry. If possible, lower the room temperature. Too small laundry volume. Drying cycle too short. The laundry is too dry. The filter is clogged. Too high volume of the load. Drying cycle too long 6) The laundry not spun sufficiently. @@E51): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? contact the service centre and give the error code. 2) follow the programme description -- see PROGRAMMES chapter 3) see CARE AND CLEANING chapter 4) see section WATER HARDNESS in HINTS AND TIPS chapter 5) Only the tumble dryers with drum light.

6) Note: After maximum 5 hours the drying cycle ends automatically (see Drying cycle complete section). 28 TECHNICAL INFORMATION height x width x depth drum volume maximum depth with the load door opened maximum width with the load door opened adjustable height the appliance weight maximum load volume voltage frequency necessary fuse total power energy efficiency class energy consumption kWh/cycle 1) annual energy consumption type of use permitted ambient temperature 850 x 600 x 600 mm (maximal 640 mm) 118 l 1090 mm 950 mm 850 mm (+ 15 mm - feet regulation) 59 kg 7 kg 230 V 50 Hz 4A 800 W A 1,85 kWh 121,8 kWh Domestic + 5°C to + 35°C 1) 7 kg of cotton, centrifuged at 1000 rpm with reference to EN 61121 ENGLISH 29

INSTALLATION APPLIANCE POSITIONING · The tumble dryer must be installed in a clean position, where dirt does not collect. · Air must flow freely around the appliance. Make sure that the front airflow slots in the bottom of the appliance are not blocked. · To keep vibration and noise at the minimum, when the tumble dryer operates, it must be put on a stable and flat surface. · When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is. · Do not remove the feet. Do not decrease the floor clearance through thick carpets, bar of wood or equivalent. This can increase the heat which can cause interference with the operation of the appliance.

@@@@@This can cause unwanted effect on the performance of the appliance. @@ · The appliance must not be installed behind a lockable door, a sliding door, a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the tumble dryer is restricted. It is possible to adjust the height of the tumble dryer. To do that adjust the feet (see picture). 15mm UNPACKING CAUTION! Before use all parts of the transport packaging must be removed.

To remove the polystyrene blockages: 1. Open the load door. 2. Pull 2 plastic hoses with the polystyrene blockages out from the drum. x2 30 INSTALLATION UNDER A COUNTER The appliance can be installed as freestanding or below the kitchen counter with correct space (see picture).

600 mm ELECTRICAL CONNECTION · Connect the machine to an earthed socket, in accordance with current wiring regulations. · Make sure that the electrical data on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables. There is a risk of fire. · Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. · Make sure not to squash or cause damage to the mains plug and cable behind the appliance. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. · The plug must be dry.

> 850 mm 600 mm THE LOAD DOOR REVERSAL The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance. (see separate leaflet). ENGLISH 31 [www.aeg.com/shop/136917040-A-212011](http://www.aeg.com/shop/136917040-A-212011) .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T75470AH user guide](http://yourpdfguides.com/dref/3965755)  
<http://yourpdfguides.com/dref/3965755>