



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX T96699IH. You'll find the answers to all your questions on the AEG-ELECTROLUX T96699IH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AEG-ELECTROLUX T96699IH**  
**User guide AEG-ELECTROLUX T96699IH**  
**Operating instructions AEG-ELECTROLUX T96699IH**  
**Instructions for use AEG-ELECTROLUX T96699IH**  
**Instruction manual AEG-ELECTROLUX T96699IH**

LAVATHERM 96699IH

TUMBLE DRYER

USER MANUAL



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T96699IH user guide](http://yourpdfguides.com/dref/3978218)  
<http://yourpdfguides.com/dref/3978218>

**Manual abstract:**

@@@@@Please spend a few minutes reading to get the very best from it. **ACCESSORIES AND CONSUMABLES** In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags... Visit the webshop at: [www.aeg.com/shop](http://www.aeg.com/shop) **VISIT OUR WEBSITE FOR:** - Products - Brochures - User manuals - Trouble shooter - Service information [www.aeg.com](http://www.aeg.com) **4 SAFETY INFORMATION** In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. - Read the instruction manual before the appliance use. - Make sure that there is access to the mains plug after the installation. - Always unplug the appliance after use, cleaning and maintenance.

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts. - Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water. - **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer. - If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer. - Please make sure that no gas lighters or matches have accidentally been left in pockets of garments incase they are loaded into appliance - The condensed water is not applicable to drink or to prepare food. It can cause health problems to people and pets. - Do not seat or lean on the load door. The appliance can tilt. **GENERAL SAFETY** - It is dangerous to alter the specifications or attempt to modify this product in any way.

@@@@@To avoid this, please check into the drum before using. @@@@ - **Risk of fire!** To prevent from the risk of self combustion do not stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. - Lint must not be allowed to accumulate around the tumble dryer. - **Risk of electric shock!** Do not spray down the appliance with jets of water. - The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. - The tumble dryer is not to be used if industrial chemicals have been used for cleaning. - Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires. Air must flow freely below the appliance. - After the appliance installation, check that it is not squeeze or stay on the electrical supply cable. - If the tumble dryer is put on top of a washing machine, it is mandatory to use the stacking kit (optional accessory - see chapter: "ACCESSORIES").

**USE** - This appliance is for domestic use only. It must not be used for other functions. - Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on each piece of clothing label. - Do not dry not washed items in the tumble dryer.

- Do not put more load than recommended. Obey the maximum load volume. See the related chapter in the user manual. - Clothes which are dripping wet must not be put in the tumble dryer. - Garments which have been in contact with volatile petroleum products should not be machine dried.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the appliance. - Do not use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. -

Fabric softener or equivalent products must be used as specified by the fabric softener manufacturer. - **Risk of fire!** Do not dry the damaged items which contain padding or fillings (pillows, jackets, duvets, etc.). The padding or fillings can get out and cause the fire. **INSTALLATION** - This appliance is heavy. Be careful when you move the appliance. - When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.

- All packaging must be removed before use. Dangerous damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. - Each electrical work necessary to install this appliance must be done by a qualified electrician or competent person. - The rear surface of the appliance must be put against the wall - If the appliance is installed on the carpet or equivalent, adjust the feet. **6 CHILD SAFETY** - This machine is not intended for use by young children or infirm persons without supervision. @@@@ **WARNING!** - Danger of suffocation! The packaging components (e.g. @@@@ - Cut off the mains cable and discard it. - Discard the door catch.

This prevents children or pets to be closed in the appliance. @@Put the packaging in applicable containers to recycle it. @@@@The hose cannot be in loop. If possible decrease the length of the hose. @@@@See leaflet attached.

Read carefully the instructions supplied with the kit. **DRAINING KIT** Product name: PDSTP10. Available from your authorized dealer. To put the appliance higher at the level which helps to easy load and remove the laundry. The drawer can be use for laundry storage e.

g. : towels, cleaning products and more. Read carefully the instructions supplied with the accessory. **DRYING RACK** Product name: DK11. Available from your authorized dealer (can be attached to some types of the tumble dryers) Installation kit for through draining of the condensed water into a basin, siphon, gully, etc.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T96699IH user guide](http://yourpdfguides.com/dref/3978218)  
<http://yourpdfguides.com/dref/3978218>

After installation the water container is drained automatically. The water container must stay in the appliance. Installed hose must be on the height from minimum of 50 cm to maximum of ENGLISH 9 Available from your authorized dealer (can be attached to some types of the tumble dryers) Drying rack accessory let to dry safely in the tumble dryer: · sport shoes · wool · soft toys · lingerie Read carefully the instructions supplied with the kit. 10 CONTROL PANEL 1 2 4 3 4 Push button On/Off 1 Programme dial 2 Touch panel with display 3 Programme indicators with Auto Off function TOUCH PANEL SensiDry As alternative for the buttons to set the function you must touch the area with the function name. Each area between the vertical marks senses the user finger.

For accurate selection touch the center point of the area between the vertical marks. Do not wear gloves when you touch the panel to set the function. Make sure the panel is always clean and dry. ENGLISH 11 DISPLAY Symbol text bar clock programme duration Description estimated hour of the end of the programme estimated hour of the end of the time programme (time programme interval 10 min. -- 120 min.) estimated hour of the end of the programme with delayed start (delay star interval 30 min. - 20 h.) Symbol , , - - - , - - Description extra dryness level: minimum, moderate, maximum anti-crease time: default, interval (30 min. -- 120 min.) initial laundry centrifugation (800 -- 1800 rpm) default 12 Symbol Description drain the water container indicator clean the main filter indicator clean the heat exchanger filters indicator buzzer activated child lock activated time drying function activated ENGLISH 13 BEFORE

FIRST USE Clean the tumble dryer drum with a moist cloth or set a short programme (e.g. 30 minutes time programme) with the load of moist cloths. CAUTION! The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chlorohydrocarbons. This system must stay tight. The damage of the system can cause the leakage and damage of the appliance. At the beginning of drying cycle (3-5 min.) there could be a slightly higher sound level. It is because of startbrics, microfiber, polyester, which are not ironed. all except Time Drying and Extra Silent all except: Anticrease , Time Drying , Extra Silent Active Wear 2 kg Sports 2 kg Silk/ Lingerie 1 kg To dry silk/lingerie with warm air and gentle movement. 16 Programmes Load 1) Properties Available functions Fabric mark Wool 1 kg To dry the cloths made of wool .

The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end. The wool drying cycle of this tumble drying machine has been tested and approved by The WoolDry mark Company. The cycle is suitable to dry wool garments which Buzzer , are labelled "hand wash" proviTime Drying ded that the garments are washed 3), Delay in a Woolmark endorsed hand Start washing cycle and tumble dried according to the instructionirflow in the appliance installation position. · Clean the filter after each drying cycle. · Spin good the laundry before drying. operation of the conductivity sensor in the appliance. If you know the value of the water conductivity you can adjust the sensor to dry with the better results. To change the sensor conductivity: 1. Turn the programme dial to available programme.

2. Touch at the same time 2 functions (see the illustration). SensiDry AVERAGE LAUNDRY WEIGHTS bathrobe quilt cover man's work shirt man's pyjamas sheet tablecloth man's shirt night dress pillow case towelling towel blouse ladies' briefs men's underpants napkin tea cloth 1200 g 700 g 600 g 500 g 500 g 250 g 200 g 200 g 200 g 100 g 100 g 100 g 100 g 100 g 4. SensiDry 3. Hold down until one of the symbols come into view on the display: low conductivity <300 S/cm moderate conductivity 300-600 S/cm high conductivity >600 S/cm Touch the Start/Pause again and again until you set necessary level: To memorise the setting touch at the same time 2 functions as are specified in the point 2. WATER CONTAINER FULL -- INDICATION By default the indication is always on. It comes into the view at the end of the cycle or when the water container is full. When you use an external equipment to drain the container, the indication can be off. To activate or deactivate the indication: WATER HARDNESS AND CONDUCTIVITY Water hardness can be different for different locations. @@2.

Turn the programme dial to available programme. @@To permanently activate or deactivate the buzzer function: 1. @@@@To clean the primary filter: 1. The filter collects the fluff. @@Close the filter.

6. 7. Remove fluff from the filter socket. For this a vacuum cleaner can be used. Put the filter inside the filter socket. CAUTION! @@Clean the primary filter after each drying cycle. @@@@@@@Risk of poisoning. The condensed water is not applicable to drink or to prepare food. The condensed water can be used as distilled water, e.g. for steam ironing. If necessary filter the condensed water (e.g. @@@@If necessary clean the filter with warm water using a brush. Close the filter.

ENGLISH 27 8. Clean the small filter from the base 9. If necessary, one time for each 6 months, remove the fluff from the heat exchanger compartment. You can use a vacuum cleaner. 10. 11. 12. 13. 14. 15. Put the small filter and heat exchanger filter back. Close the heat exchanger cover. Lock the blockage until it snaps. Close the heat exchanger filters cover. Close the heat exchanger door.

Put the primary filter. CAUTION! Do not operate the tumble dryer when the heat exchanger filters are blocked with fluff. This could cause the damage to the tumble dryer. This also increases energy consumption. Do not use sharp objects to clean the heat exchanger compartment. Do not operate the tumble dryer without the filters. CLEANING THE DRUM WARNING! Disconnect the appliance before you clean it. Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth. CAUTION! Do not use abrasive materials or steel wool to clean the drum. 28 CLEANING THE CONTROL PANEL AND HOUSING Use a standard neutral soap detergent to clean the control panel and housing. Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth. CAUTION! Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance. ENGLISH 29 TROUBLESHOOTING TROUBLESHOOTING Problem1) Possible cause The tumble dryer is not connected to mains supply.

The loading door is opened. The tumble The On/Off button was not dryer does not operate. pushed. The Start/Pause function was not activated. The appliance is in the stand-by mode. Incorrect programme selection.



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T96699IH user guide](http://yourpdfguides.com/dref/3978218)  
<http://yourpdfguides.com/dref/3978218>

The filter is clogged. The Dry Plus function was in minimum mode. Unsatisfactory drying results. The condenser is clogged.

Too high volume of the load. The airflow grill is clogged. Dirt on the inner surface of the drum. Too high water hardness. The door does not close. The filter not locked in the position. The laundry is locked between the door and the seal. You try to change the programme or the function after the start of the cycle. The function you try to activate is not applicable with the selected programme. Defective drum light.

Remedy Connect in at mains socket. Check fuse in fuse box (domestic installation). Close the loading door. Push the On/Off button. Activate the Start/Pause function. Push the On/Off button. Do the selection of the applicable programme. 2) Clean the filter. 3) Change the Dry Plus function to the moderate or maximum mode. Clean the condenser.

3) Obey the maximum load volume. Clean the airflow grill in the bottom of the appliance. Clean the inner surface of the drum. Set applicable water hardness4). Put the filter in the correct position. Put the load correctly in the drum. Turn the tumble dryer off and on. Make the new selection. Turn the tumble dryer off and on. Make the new selection.

Contact the service centre to replace the drum light. Err (Error) on the display. No drum light 30 Problem1) Abnormally elapsing time on the display.) Programme inactive. Possible cause Remedy The time to end is calculated on The automatic procedure -- this the basis of the volume and is not the appliance malfunction.

dampness of the laundry. The water container is full. Too small laundry volume. Drain the water container3) , activate the Start/Pause function. Do the selection of time programme.

Do the selection of time programme or higher drying level (e.g. Extra Dry ) Clean the filter. Obey the maximum load volume. Spin correctly the laundry. @@The filter is clogged. @@@@E51 ): Turn the tumble dryer off and on. Make a selection of the new programme. Activate the Start/Pause function. Does not operate? - contact the service centre and give the error code.

@@WARNING! Do not look directly into the beam of the lamp. To replace the internal lamp, contact the service centre. Disconnect the mains plug from the mains socket before the replacement of the internal lamp. ENGLISH 31 TECHNICAL INFORMATION height x width x depth drum volume maximum depth with the load door opened maximum width with the load door opened adjustable height the appliance weight maximum load volume voltage frequency necessary fuse total power energy efficiency class energy consumption kWh/cycle 1) annual energy consumption type of use permitted ambient temperature 850 x 600 x 600 mm (maximal 640 mm) 118 l 1090 mm 950 mm 850 mm (+ 15 mm - feet regulation) 56 kg 9 kg 230 V 50 Hz 4A 800 W A 2,05 kWh 102,3 kWh Domestic + 5°C to + 35°C 1) 9 kg of cotton, centrifuged at 1000 rpm with reference to EN 61121 32 INSTALLATION APPLIANCE POSITIONING · The tumble dryer must be installed in a clean position, where dirt does not collect. · Air must flow freely around the appliance. Make sure that the front airflow slots in the bottom of the appliance are not blocked. · To keep vibration and noise at the minimum, when the tumble dryer operates, it must be put on a stable and flat surface. · When the appliance is put in its permanent position, check if is fully level with the aid of a spirit level. If it is not, adjust the feet until it is. ·

Do not remove the feet.

Do not decrease the floor clearance through thick carpets, bar of wood or equivalent. This can increase the heat which can cause interference with the operation of the appliance. @@@@This can cause unwanted effect on the performance of the appliance. @@· The appliance must not be installed behind a lockable door, a sliding door, a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the tumble dryer is restricted. UNPACKING CAUTION! Before use all parts of the transport packaging must be removed.

To remove the polystyrene blockages: 1. Open the load door. 2. Pull 2 plastic hoses with the polystyrene blockages out from the drum. x2 It is possible to adjust the height of the tumble dryer.

To do that adjust the feet (see picture). 15mm ENGLISH 33 INSTALLATION UNDER A COUNTER The appliance can be installed as freestanding or below the kitchen counter with correct space (see picture). 600 mm ELECTRICAL CONNECTION · Connect the machine to an earthed socket, in accordance with current wiring regulations. · Make sure that the electrical data on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables. There is a risk of fire. · Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. · Make sure not to squash or cause damage to the mains plug and cable behind the appliance. · Do not pull the mains cable to disconnect the appliance.

Always pull the mains plug. · The plug must be dry. > 850 mm 600 mm THE LOAD DOOR REVERSAL The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance. (see separate leaflet). 34 ENGLISH 35  
www.aeg.com/shop 136918620-A-322011 .



[You're reading an excerpt. Click here to read official AEG-ELECTROLUX T96699IH user guide](http://yourpdfguides.com/dref/3978218)  
<http://yourpdfguides.com/dref/3978218>