



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE HCE-C210RD. You'll find the answers to all your questions on the ALPINE HCE-C210RD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ALPINE HCE-C210RD
User guide ALPINE HCE-C210RD
Operating instructions ALPINE HCE-C210RD
Instructions for use ALPINE HCE-C210RD
Instruction manual ALPINE HCE-C210RD



[You're reading an excerpt. Click here to read official ALPINE HCE-C210RD user guide](#)

<http://yourpdfguides.com/dref/5234318>

Manual abstract:

70g (including the cable without the bracket and Screw) HCE-C210RD REAR VIEW CAMERA HCE-C212F FRONT VIEW CAMERA • OWNER'S MANUAL

Please read before using this equipment. 300 TV lines or more (centre area) Alcance de la iluminación . 300 TV lines or more (centre area) Illumination Range . 70g (including the cable without the bracket and Screw) • Power Section . Failure to heed them can result in serious injury or death. A camera assists the driver by sending images to the screen showing conditions in view of the camera. the camera uses a wide-angle lens. Therefore, there is a difference in distance perspective between what is normally seen and what appears on the screen. Also, the images shown by the rearview camera are reversed, so as to appear the same as what is seen through the rearview mirror. The camera may not perform to full capability due to variables such as: ••••• weather conditions such as hard rain, snow, fog or mud extremely high or low temperatures near camera slope of vehicle and/or roadway direct exposure to very bright light such as headlamp or bright sunlight moving from very dark to very bright light and vice versa such as in parking garages or tunnels extremely low light areas walls or objects that are located diagonally in relation to the camera retracted mirrors that change camera viewing angle open doors or trunks changes to height of vehicle due to loading capacity or hydraulic suspensions obstacles located at the corner of the vehicle Français

HCE-C210RD (caméra arrière) Alimentation Nécessaire .

Failure to heed them can result in injury or material property damage. HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS. The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done. ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

@@This will prevent crimping and damage to the wiring. USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY. Be sure to use only the specified accessory parts. @@@@Incorrect connections may cause the unit to malfunction or cause damage to the vehicle's electrical system. HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing. Doing so reduces the strength of the camera's mounting. This could cause it to fall off and cause injury or damage to the car's body. DO NOT ATTACH THE CAMERA TO ANY SURFACE WHERE THE ENTIRE ADHESIVE SURFACE CANNOT BE APPLIED. Doing so reduces the strength of the camera's mounting. This could cause it to fall off and cause injury or damage to the car's body. Doing so may result in an accident, fire or electric shock.

KEEP SMALL OBJECTS SUCH AS BOLTS OR SCREWS OUT OF THE REACH OF CHILDREN. Swallowing them may result in serious injury.

(Check with your dealer if you are not sure. Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc. DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES. When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire. MINIMIZE DISPLAY VIEWING WHILE DRIVING. Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident. DO NOT SPLICE INTO ELECTRICAL CABLES. Never cut away cable insulation to supply power to other equipment.

Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock. DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION , SUCH AS THE STEERING WHEEL OR GEAR LEVER. Doing so may obstruct forward vision or hamper movement etc. Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc.

can be extremely hazardous. DO NOT ROUTE ELECTRICAL CABLES NEAR HOT OR MOVING PARTS Route the cables and wiring away from hot or moving parts, and fix them securely to avoid heat/mechanical damage to the cable insulation, which may result in shortcircuit, fire or electric shock. MAKE THE CORRECT CONNECTIONS. When making connections to the vehicle's electrical system, be aware of the factory installed components (e. Do not tap into these leads to provide power for this unit.

When connecting the device to the fuse box, make sure the fuse for the intended circuit of the device has the appropriate amperage. Failure to do so may result in fire or damage to the unit and/or the vehicle. When in doubt, consult your Alpine dealer. USE THIS PRODUCT FOR MOBILE 12 VOLT APPLICATIONS. Use for other than its designed application may result in fire, electric shock or other injury. NOTICE • About Care of Device Do not assert any excess pressure to the camera or the mounting, as this could cause the camera direction to shift, or the camera mounting bracket to come off. □ To prevent the camera lens, mounting and cords from changing colour or shape, or from deteriorating, wipe with a chemicalfree, damp cloth. □ Do not use an automatic car wash or high-pressure washer. @@@@Do not tap into these leads to provide power for this unit. @@Failure to do so may result in damage to the unit and/or the vehicle.

When in doubt, consult your Alpine dealer. @@As a dedicated product, it should not be used in other systems. @@Consult your Alpine dealer for details. @@□ Do not use mobile phones and wireless devices near the camera. Doing so may result in noise on the screen or malfunction. @@@@If possible, install the camera in the center of the bumper. @@ calibration is necessary. @@300 TV lines or more (centre area) Alcance de la iluminación . @@@@Its surroundings are displayed while in reverse. 4 English 1 Secure the camera cable while referring to Fig.

4. @@@@□ Refer also to the Owner's Manual of the la marche arrière, le moniteur connected monitor/navigation system. • Consulte el Manual de instrucciones del revient à l'écran précédent. □ Be sure to also check behind and around the sistema de monitor o navegación conectado. X4 x5 x2 I Switch adhesive sheet I Feuille adhésive de l'interrupteur I Lámina adhesiva para el interruptor J Wire clamp J Attache fils J Fijador de cables K Velcro fastener K Bande velcro K Fijador de velcro L Self-tapping screw L Vis autotaraudeuse L Tornillo macho roscador x3 Connections /Raccordements /Conexiones AV head unit or Navigation with direct connection.



[You're reading an excerpt. Click here to read official ALPINE HCE-C210RD user guide](http://yourpdfguides.com/dref/5234318)

<http://yourpdfguides.com/dref/5234318>

* Water-proof connector / * Connecteur étanche / * Conector resistente al agua Installing the Power Unit /Installation du bloc d'alimentation /Instalación de la unidad de alimentación Bottom of power unit/ Sous de bloc d'alimentation/ Parte inferior de unidad de alimentación Velcro fastener (hard side)/ Bande velcro (côté rugueux)/ Fijador de velcro (cara dura) A V. OUT Terminal Connect this to the camera terminal of the AV head unit or navigation. b OTHER CAMERA Terminal Not used. C FRONT CAMERA Terminal Connect this to the frontview camera (HCE-C212F) D REAR CAMERA Terminal Connect this to the rearview camera (HCE-C210RD) E Switch Terminal Connect this to the switch (HCE-C210RD included) F Reverse Output Lead (Orange/Black) Sends the reverse signal to the monitor or navigation system. G Reverse Input Lead (Orange/White) Connect to the plus side of the car's reverse lamp that lights when the transmission is shifted into reverse (R).

Switches the video picture to the back-up camera. This is linked with putting the car into reverse (R). H Switched Power Lead (Ignition) (Red) Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+)12V only when the ignition is turned on or in the accessory position I Fuse (7. 5A) J Ground Lead (Black) Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided. 6 English 1 Attach the velcro fastener (hard side) K to the bottom of the power unit B (see Fig. 6). 2 Attach the velcro fastener (soft side) K to the floor, and secure the power unit B. 6). Use this when backing into a parking trouvant derrière le véhicule.

[Panorama]: Panorama View Displays a general perspective of what is [Panorama]: Vue panoramique Affiche une perspective générale de ce qui behind the car. Use this when you want to se trouve à l'arrière du véhicule. The displayed image of the rear camera. 5 English • For details on connection, refer to the installation manual of the HCE-C210RDcompatible product. * Connect the water-proof connector for the camera and camera extension cable securely. When disconnecting the water-proof connector, use a flat-blade screwdriver. □ REAR VIEW CAMERA (HCE-C210RD) is designed for use with Alpine AV head units or navigation systems (INA-W910, etc. @@@@□ When attaching the velcro fastener (hard side) K to the floor carpet, do so without the rugueux) K au sol, quired, fix the camera mounting bracket using self-tapping screws. 13 • Never depend on the camera's view alone. @@@@The image configuration changes every time MODE is pressed.

I Put the gear shift into reverse (R) or press ON/OFF, and check the image from the camera on the display. Angle so that the road may be roughly viewed horizontally (Fig. 2 Loosen the camera mounting bracket B and angle 2 Déserrez le support de la 2 Afloje el soporte de la cámara adjustment screw. Determine caméra B et insérez en angle la B e inserte en ángulo el tornillo the viewing angle, and carefully vis de réglage. Panorama View: Displays a general perspective of what is ahead of the car.

Use this when you want to check mainly ahead of the car. Corner View: Displays a divided image left and right of centre. Use this mainly when checking left and right directional view. Ground View: Displays an image from above down to the Vue Plongeante: lower section of the car. .



[You're reading an excerpt. Click here to read official ALPINE HCE-C210RD user guide](http://yourpdfguides.com/dref/5234318)
<http://yourpdfguides.com/dref/5234318>