



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE IVA-D300. You'll find the answers to all your questions on the ALPINE IVA-D300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ALPINE IVA-D300
User guide ALPINE IVA-D300
Operating instructions ALPINE IVA-D300
Instructions for use ALPINE IVA-D300
Instruction manual ALPINE IVA-D300



Mobile Multimedia Station

IVA-D300



MP3

MX

disc
DIGITAL
MEDIA

(((X M)))
READY

DVD
VIDEO

disc
DIGITAL
VIDEO

DOLBY
DIGITAL

disc
DIGITAL
MEDIA

EN

FR

ES

- OWNER'S MANUAL
Please read before using this equipment.
- MODE D'EMPLOI
Veuillez lire avant d'utiliser cet appareil.
- MANUAL DE OPERACIÓN
Léalo antes de utilizar este equipo.

ALPINE ELECTRONICS MARKETING, INC.
1-1-1 Nishi-Cochinaka
Shinjuku-ku
Tokyo 141-0051, Japan
Phone: 03-436-8201

ALPINE ELECTRONICS OF AMERICA, INC.
1945 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
7280 Warden Ave., Suite 201, Markham,
Ontario, L3R 9Z6, Canada
Phone: 1-800-ALPINE-1 (1-800-257-4631)

Yamagata Printing Co., Ltd.
24-24, Takashima, Nishi-ku,
Nishinaka, Kitakyushu, Japan

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
6-81 Waverley Boulevard, Rydalmere,
N.S.W. 2119, Australia
Phone: 056789 0000

ALPINE ELECTRONICS GERMANY
Frankfurter Ring 117
88077 Mönchberg, Germany
Phone: 089-32 41 400

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fleethamstead Highway, Coswary CV4 9TW, U.K.
Phone: 0870-3535763

ALPINE ELECTRONICS FRANCE S.A.R.L.
RUE DE L'INDUSTRIE B 3038 101 280
98, Rue de la Balle, 92046, Z.I. Paris Nord II,
B.P. 50016, 92046, Rueil-Malmaison de France
France, France
Phone: 01-48598959

ALPINE ITALIA S.p.A.
Via C. Cavallotti, 20060 S. Vezzano
SU (Novalico) (MI), Italy
Phone: 02-481701

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Garmara 36, Pabellón 32
01213 Villaralbillo, Alcala de Henares, Spain
Phone: 945-283588

Designed by ALPINE Japan
Printed in Japan (V)
68PT02372b-C



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](#)

<http://yourpdfguides.com/dref/432831>

Manual abstract:

S.A. Phone 1-800-ALPINE-1 (1-800-257-4631) ALPINE ELECTRONICS OF CANADA, INC. 7300 Warden Ave., Suite 203, Markham, Ontario L3R 9Z6, Canada Phone 1-800-ALPINE-1 (1-800-257-4631) ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD. 6-8 Fiveways Boulevard Keysborough, Victoria 3173, Australia Phone 03-9769-0000 ALPINE ELECTRONICS GmbH Frankfurter Ring 117 80807 München, Germany Phone 089-32 42 640 ALPINE ELECTRONICS OF U.K. LTD. Alpine House Fletchamstead Highway, Coventry CV4 9TW, U.

K. Phone 0870-33 33 763 ALPINE ELECTRONICS FRANCE S.A.R.L.

(RCS PONTOISE B 338 101 280) 98, Rue de la Belle Etoile, Z.I. Paris Nord II, B.P. 50016, 95945 Roissy Charles de Gaulle Cedex, France Phone 01-48638989 ALPINE ITALIA S.

p.A. Viale C. @@@@. Changeur CD pour IVA-D300. @@. Changeur CD pour IVA-D300. · Cambiador de CD para IVA-D300. CHM-S630 Alpine CD Changers Give You More! More musical selections, more versatility, more convenience. The CHA-S634 is a high-performance 6-disc changer with a new M DAC, CD-R/RW PLAY BACK, MP3 PLAY BACK and CD TEXT. The CHA-1214 Ai-NET model holds 12 discs, and the CHM-S630 M-Bus model is a super-compact 6-disc changer with a CD-R/RW PLAY BACK. Changeurs de CD Alpine : vous avez le choix! Plus de sélections musicales, plus de souplesse, plus de confort.

Le modèle CHA-S634 est un changeur 6 disques ultra performant équipé des nouvelles fonctions M DAC, CD-R/RW PLAY BACK, MP3 PLAY BACK et CD TEXT. Le modèle CHA-1214 Ai-NET contient 12 disques. Le modèle CHM-S630 M-Bus est un changeur 6 disques super compact doté de la fonction CD-R/RW PLAY BACK. ¡Los cambiadores Alpine de CD le ofrecen más! Más selecciones musicales, más versatilidad y más ventajas. CHA-S634 es un cambiador de seis discos de alto rendimiento con nuevo M DAC, CD-R/RW PLAY BACK, MP3 PLAY BACK y CD TEXT. El modelo CHA-1214 Ai-NET alberga 12 discos y el modelo CHM-S630 M-Bus es un cambiador de seis discos de tamaño reducido con un CD-R/RW PLAY BACK. ENGLISH Contents Operating Instructions WARNING

.....

.....

.....

.....

.....

.....

..... 4 CAUTION

.....

.....

.....

.....

.....

.. 4 PRECAUTIONS ...

.....

.....

.....

.....

..... 5 Discs playable on this unit ..

.....

.....

.....

6 If a menu screen appears

.....

.....

.....

18 Displaying the Top Menu Screen (DVD only)

.....

.....

.....

.....

..... 19 Displaying the Menu Screen (DVD only) ...

. 19 Displaying the Menu Operation Mode Screen (DVD only)

.....

.....

.....

.....

.....
.....
.....
..... 10 Recalling the Source .

.....
.....
.....
.....

..... 11 Shortcut Screen

.....
.....
.....

.....
.....

.... 11 Displaying the Numeric Keypad Input Screen .

.. 12 Dual-Screen Display

.....
.....
.....

..... 12 Radio Listening to the Radio ..

.....
.....
.....
.....

..... 13 Manual Storing of Station Presets

.....
.....

... 13 Automatic Memory of Station Presets

..... 13 Tuning to Preset Stations

.....
.....
.....

..... 13 Searching from Radio Station Title ...

.....
.....

... 13 Other Useful Features Adjusting the Audio

.....
.....
.....
.....

... 22 Titling Discs/Radio Stations

.....
.....
.....

22 Disc Search Function

.....
.....
.....

..... 23 Rear Entertainment Function ..

.....
.....
.....

.... 23 Switching the function of the remote sensor ... 24 Switching Display Modes ...

.....
.....

.....
..... 24 Switching the Visual Source Only (Simultaneous Function) ..
.....
.....

..... 25 Canceling the Simultaneous Function
.....
... 25 Blackout Mode On and Off..
.....

.....
.....
.. 25 Setting VISUALIZER ...
.....

.....
.....
... 25 Setting the Visual Effect
.....

.....
.....
..... 25 CD/MP3/WMA Playback ...
.....

.....
.....
.....
.....
.....
.....
.....
.....
..... 14 Repeat Play
.....

.....
.....
.....
.....
.....
.....
.....
.....
..... 15 M.I.
X. (Random Play)

.....
.....
.....
..... 15 Selecting Folders (concerning MP3/WMA) ...
.....

15 About MP3/WMA
.....
.....
.....

.....
.. 15 DVD/Video CD Playing DVD/Video CD ...
.....
.....

.....
.....
17 To display the DVD mode screen
.....

. 17 1-EN Monitor Setting Monitor Setting Operation
. 26 Adjusting the Monitor Angle
.... 26 Selecting the Monitor Position
26 Setting Automatic Opening/Closing of the Monitor
..... 26 Setting of the External Monitor Output
. 33 Setting of the Rear Camera
.. 33 Setting Visual Mode
.... 33 Optical Digital Input Selection for an External Audio Processor
34 DISPLAY Setup Display Setup Operation
... 34 Illumination Control
34 Adjusting the Minimum Level of Backlight 34 Switching Background Textures
.. 34 Setting Automatic Background Textures
.. 35 Setting the Font Type
.. 35 Switching the Font Back Display Color
35 Turning the Touch Panel Vibration ON or OFF

.....
.....
.....

. 37 Adjusting and Storing/Recalling the Bass Focus

.....
.....
.....

.....
.....

.. 38 Adjustment and Storing/Recalling of Time Correction ...

.....
.....
.....
.....
.....

..... 39 Adjustment and Storing/Recalling of the Built-in Crossover ...

.....
.....
.....

.... 39 Subwoofer On and Off.

.....
.....

.....
.....
.....

40 VISUAL EQTM Visual EQ Setting Operation

.....
.....

.. 40 Selecting the VISUAL EQ Mode (Maker's setting) ...

.....

.....
.....
.....

..... 40 Adjusting Brightness

.....
.....
.....
.....

.. 40 Adjusting Color of Picture

.....
.....

..... 41 Adjusting Tint of Picture .

.....
.....
.....

..... 41 Adjusting Image Contrast .

.....
.....
.....

..... 41 Adjusting Picture Quality ...

.....
.....
.....

..... 41 Storing VISUAL EQ

.....
.....
.....
.....

. 41 2-EN Data Download About SOUND SETUP Download

... 41 Data Downloading ..

.....
.....
.....
.....

42 Setting AMP Link (Optional) Adjusting and Storing/Recalling the External Amplifier (Option)

.....
.....
.....

..... 42 Titling the Amplifier

.....
.....
.....

.. 43 Displaying Status of External Amplifier ...

.....

. 43 External Audio Processor (Optional) Adjustment Procedure for Dolby Surround 44 Setting the Speakers

.....
.....
.....
.....

..... 44 Set MX Mode of the External Audio Processor .



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

....
....
.....

..... 44 X-OVER Adjustment

.....
....
....
.....

.... 45 Performing Time Correction Manually (TCR) ... 45 Phase Switching ...

....
....
.....

... 46 Graphic Equalizer Adjustments

.....
....
.....

46 Parametric Equalizer Adjustments

... 47 Setting Bass Sound Control

....
....
.....

. 47 Setting Bass Compressor

....
....
.....

47 Setting Bass Focus

....
....
.....

..... 47 Speaker Setup .

....
....
.....

..... 48 Setting of Dolby 5.1ch .

.....
....
....
.....

..... 48 Adjusting the acoustic image

....
....
.....

..... 48 Mixing bass sound to the rear channel ..

..... 48 Achieving powerful high volume sound ...

... 49 Adjusting the speaker levels ..

.....
.....
..... 49 Adjusting the DVD Level ..
.....
.....
.....
..... 49 Storing Settings in the Memory .
.....
.....
.....
. 49 Getting out the Preset Memory
.....
.....
.... 49 Using the Pro Logic II Mode
.....
.....
.....
50 Linear PCM Setting
.....
.....
.....
.....

50 XM Radio (Optional) Receiving XM dent. DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE. Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident. KEEP FINGERS AWAY WHILE THE MOTORIZED FRONT PANEL OR MOVING MONITOR IS IN MOTION. Failure to do so may result in personal injuryessories There are various accessories available on the market for protecting the disc surface and improving sound quality. However, most of them will influence the thickness and/or diameter of the disc. Using such accessories can cause operational problems. We recommend not using these accessories on discs played in Alpine DVD players.

Discs playable on this unit Playable Discs The discs listed below can be played on this unit. Mark (logo) Recorded content Disc size Max. playing time One-sided disc Approx. 4 hours 12 cm Two-sided disc Approx. 8 hours One-sided disc Approx.*

80 Minutes 8 cm Two-sided disc Approx. 160 Minutes Transparent Sheet Disc Stabilizer Handling the Detachable Front Panel · Do not expose to rain or water. · Do not drop or subject to shock. · After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.

· In cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal. Alpine products equipped with the Ai-NET bus, connected to the IVA-D300, can be operated from the IVA-D300. Depending on the products connected, the functions and displays will vary. For details, consult your Alpine dealer. Audio + Video (Moving pictures) 12 cm Audio + Video (Moving pictures) DVD Video Remove the anti-theft cover when you drive. This prevents the cover from falling off the unit and interfering with the safe operation of the vehicle. Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked.

This ensures the focus of the driver's attention will be on the road and not on the IVA-D300. This has been done for the safety of the driver and passengers.

Title Input and Audio Processor Adjustments cannot be made if the car is moving. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "CAN'T OPERATE WHILE DRIVING," will be displayed if any attempts are made to perform these operations while driving. This operation is the same as when selecting sources using the remote control. When the car is parked, the selection is made as described in the Owner's Manual. Approx. 74 Minutes Video CD DIGITAL VIDEO 8 cm VIDEO CD 12 cm Approx. 20 Minutes Approx.

*74 Minutes Music CD Audio Approx. 8 cm (CD single) 20 Minutes * Two-layer DVD disc compatible 6-EN Discs that cannot be played DVD-ROMs, DVD-RAMs, DVD + Rs, DVD + RWs, CD-ROMs (excluding MP3/WMA files), photo CDs, etc. DVD region number (playable region number) This DVD player will play back any disc whose region number is 1 (or All). DVDs with a region number other than those listed below, cannot be played on this DVD player.*

Multisession CD-R/RW: Once a recording has been stopped, this is considered one session.

If the disc is not closed (finalized), additional data may be added. Once this additional data has been recorded, this becomes a "multisession" CD. The IVA-D300 can only read multisession DATA Formatted discs (MP3/WMA files - Not Audio CD files). MP3 ID3 Tag/WMA Tag Information: The IVA-D300 read and displays MP3 ID3v1 tag or WMA tag information. MP3 files created with ID3v2 tag information can be played back but the tag info cannot be read or displayed.

Properly formatted MP3/WMA Discs: Use ISO9660 formatting to insure proper playback. You may use standard ISO naming Level 1 (8.3 DOS standard), Level 2 (32 characters) or Joliet (Windows or Macintosh long filenames) file naming conventions. *Please consult the Owner's manual for additional information. 1 Video CDs ALL This DVD head unit is compatible with playback control (PBC) compatible video CDs (version 2.0). "PBC" is a function by which you can use menu screens recorded on the disc to find the scene you want to watch and view various types of information in dialog style. Using compact discs (CD/CD-R/CD-RW) If you use unspecified compact discs, correct performance cannot be guaranteed. You can play CD-Rs (CD-Recordable)/CD-RWs (CDReWritable) which have been recorded only on audio devices. You can also play CD-Rs/CD-RWs containing MP3/WMA formatted audio files.*

· Some of the following discs may not play on this unit: Flawed discs, discs with fingerprints, discs exposed to extreme temperatures or sunlight (e.g., left in the car or this unit), discs recorded under unstable conditions, discs on which a recording failed or a re-recording was attempted, copy-protected CDs which do not conform to the audio CD industry standard. · Use discs with MP3/WMA files written in a format compliant with this unit. For details, see pages 15 and 16. To customers using CD-R/CD-RW · If a CD-R/CD-RW cannot be played back, make sure the last recording session was closed (finalized). · Finalize the CD-R/CD-RW if necessary, and attempt playback again. On handling compact discs (CD/CD-R/CD-RW) · Do not touch the surface. Do not expose the disc to direct sunlight. Do not affix stickers or labels.

Clean the disc when it is dusty. Make sure that the disc is smooth and flat. Do not use commercially available disc accessories. Do not leave the disc in the car or the unit for a long time. Never expose the disc to direct sunlight.

Heat and humidity may damage the disc and you may not be able to play it again. Using DVD-Rs/DVD-RWs · This unit is compatible only with discs recorded in the DVDVideo mode. Discs recorded in the DVD-VR mode cannot be played back. · Note that discs not finalized (processed to enable to play on playback-only DVD players) cannot be played on this DVD player.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

· Some discs may not play back, depending on the recording device.

(This unit has a copy protection function. Discs copied illegally will not be played back. Some files recorded by a software using an improper recording system may be recognized as illegally copied.) · In the following cases, the disc may not play on this unit: discs recorded by certain DVD recorders, certain irregular discs, flawed discs, dirty discs, when the pickup lens of this DVD player is dirty, or when moisture condensation has occurred inside the unit. · Be sure to follow all cautions included with your DVD-Rs/ DVD-RWs discs. · Do not put stickers, seals, or tape on the label side of DVD-Rs/ DVD-RWs. · Compared to the regular discs, DVD-Rs/DVD-RWs are more affected by heat, moisture, and direct sunlight. If left in a car, etc., damage may occur and it might not play on this unit. Tips for making your own CDs The IVA-D300 plays DVD Video, Video CD, Audio CD and has a built in MP3/WMA decoder.

The following information is designed to help you create your own music CDs (either Audio CD or MP3/WMA encoded CD-R/ RW files). What is the difference between an Audio and MP3/WMA CD? An Audio CD is the same format as the commercial CDs you buy in the store (also known as CD-DA). MP3 (MPEG-1 Audio Layer 3)/WMA (Windows Media Audio) is a data file that uses a compression scheme to reduce the size of the music file.* Hybrid Audio CD and Data (MP3/WMA) CD-R/RW discs: The IVA-D300 can read either sector on the disc. Choose CD-DA to play the CD audio section or MP3/WMA to play the MP3/ WMA section.* 7-EN Disc terminology Title If titles are programmed for the DVD, these are the largest units of division of the information recorded on the disc. Chapter Each Title may also be divided into smaller divisions, called chapters. These can be specific scenes or musical selections. · This product incorporates copyright protection technology that is protected by method claims of certain U.S.

patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. · Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

Confidential unpublished works. ©1992-1997 Dolby Laboratories. All rights reserved. · "DTS" and "DTS2.0 + Digital Out" are trademarks of Digital Theater Systems, inc.

· Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries. 8-EN Getting Started About the expression of buttons in this Owner's Manual · The buttons on this unit are expressed in bold (e.g. SOURCE/ POWER). The touch buttons on the display are expressed in bold with [] (e.g. [SRC]). · This Owner's Manual explains mainly the function of touch buttons, when a touch button and a unit button have the same function. Using Face Cover 5 3 8 ! An anti-theft face cover is provided with the IVA-D300. Put the face cover onto the IVA-D300 when you leave the vehicle.

Be sure to remove the anti-theft face cover when you drive. 1 2 4 6 7 9 "# Location of Controls 1 Rotary encoder Adjust the volume by turning to the left or right. If pressed, the audio adjusting screen is displayed. 2 Access Indicator Blinks when an operation is performed (except when the volume is adjusted). Initial System Start-Up Immediately after installing or applying power to the unit, it should be initialized. Press the RESET switch with a ballpoint pen or any other pointed object. · If the monitor was open before resetting, it will close automatically after a reset is performed. None of the buttons will function while it is closing. 3 Remote Sensor Point the optional remote control transmitter toward the remote sensor within a range of 2 m. 4 SOURCE/POWER button Turns the power on.

Press and hold for at least 2 seconds to turn the power off. Recalls the source selection screen. 5 BAND/TEL. button Radio mode: Changes the band. Visual source (except navigation screen): Changes the display mode.

Press and hold for at least 2 seconds to change to the TEL. mode, and to be able to place or cut a call. (When MobileHub (CXA-B200NK) is connected.) 6 V.SEL/OFF button The visual selecting screen is displayed.

Press and hold for at least 2 seconds to cancel the Simultaneous function. 7 V.SEL Indicator Lights when the simultaneous function is activated. (See "Switching the Visual Source Only (Simultaneous Function)" on page 25. 8 Reset Switch Be sure to press the Reset switch when using the unit for the first time, after changing the car battery, or when an operation cannot be performed. 9 MUTE button Turns the MUTE mode ON or OFF. ! DISC-IN Indicator This indicator is lit when a disc is inserted. " c button Ejects a disc. # OPEN/CLOSE/FLAT button Raises the monitor. Press and hold for at least 2 seconds to lower the monitor.

Press to move the open monitor to the flat position. 9-EN Turning Power On or Off Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations. Moving the Monitor to be Flat When you want to operate some function on the car (air conditioner, etc.) which is hidden by the raised monitor, use this function. 1 2 Press SOURCE/POWER to turn on the unit. 1 2 Press OPEN (FLAT). The monitor moves to the flat position. · The unit can be turned on by pressing any button on the unit except OPEN and c (Eject). Press OPEN (FLAT) again.

The monitor returns to the previous angle. Press and hold SOURCE/POWER for at least 2 seconds to turn off the unit. · The IVA-D300 draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the IVA-D300 is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. If this lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time.

An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the IVA-D300. For connecting the SPST switch, refer to the "Connection Diagram of SPST switch" (page 69). · Some operation of the unit cannot be performed while the vehicle is in motion.

In this case, be sure to first stop your vehicle and apply the parking brake, then perform the operation.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

· The monitor returns to the previous angle 10 seconds after being moved to the flat position. · If an excessive force is added to the monitor when the monitor is flat, putting an object on the back of the monitor for example, it may cause a malfunction. Adjusting the Volume Adjust the volume by turning the Rotary encoder. Volume: 0 - 35 Lowering Volume Quickly Activating this function will instantly lower the volume level by 20 dB. Opening/Closing the Monitor Press MUTE to activate the MUTE mode. The audio level decreases by about 20 dB. Pressing MUTE again brings the audio back to its previous level. 1 2 Press OPEN. The unit beeps 3 times and opens the monitor automatically.

How to view the Display Press and hold OPEN (CLOSE) for at least 2 seconds. The unit beeps 3 times and closes the monitor automatically. Touch button operation The display unit is equipped with tactile feedback (PULSETOUCHTM). What is the tactile feedback (PULSETOUCHTM) ? When you touch a button graphic in the display, you will feel a mild vibration and click on the display panel surface. This feedback enables you to easily identify action areas in the display. · Opening/closing the monitor should never be performed manually. It may cause a malfunction. · The monitor's angle is set to 90 degrees at the factory. Depending on the car, the monitor may hit the dashboard when opened. The monitor's angle can be adjusted and stored in memory so that the monitor will not hit the dashboard when opening.

For adjusting the monitor, refer to "Adjusting the monitor Angle" on page 26. Even when the vehicle's battery power is removed, the adjusted monitor angle remains stored in memory. · The IVA-D300 is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time. · If the monitor touches anything while it is being opened (or closed), the monitor will stop opening (or closing) immediately.

Should this occur, remove the obstacle and press and hold OPEN for at least 2 seconds again to lower the monitor. · When the movable monitor is opened, do not place any object on the monitor and be careful not to bump or apply any pressure to the monitor while it is open. This can cause damage to the mechanism. · In low ambient temperature conditions, the display may be dark for a short period of time immediately after the power is turned on. Once the LCD has warmed up, the display returns to normal.

· For your safety, some operation of the unit cannot be performed while the vehicle is in motion. In this case, first stop the vehicle and engage the parking brake, then perform the operation. · Be sure to touch the button lightly with the pad of your finger on the display to protect the display. · If you touch a button and there is no reaction, remove your finger from the display once, and try again. About the expression of touch buttons in this Owner's Manual · Display buttons in this manual are shown in bold with [] (e.g. [SRC]). · This Owner's Manual explains mainly the function of touch buttons, when a touch button and a unit button have the same function. 10-EN Recalling the Source Here is an example explanation for the Radio mode display on how to recall a source. % Displays the title input screen (see pages 22,23) & Changes to the source selection screen (to Step 1 screen) *1 Display may vary depending on the connected devices.

*2 Displayed when MobileHub (CXA-B200NK) is connected. · When an optional DVD player or DVD changer is connected, AUX 1 appears as "EXT.DVD" or "DVD CHG" on the display. · When both the optional DVD player and DVD changer are connected, AUX 1 appears as "EXT.DVD" and AUX 2 as "DVD CHG" on the display. (When an optional expansion box VPE-S431 is connected) · When i-Personalize and SETUP are selected, these operations may only be carried out after the car is parked. 1 Touch [SRC] on the main screen. The source selection screen is displayed. Display example for source selection screen 1 2 3 The screen changes to another source by touching [SRC] on the main source screen. 1 Changes to main source screen 2 Displays source modes that can be selected (The kind of source modes that are displayed varies depending on connection and setting) 2 Touch [RADIO].

The screen changes to the Radio mode main display. · The screen can be changed to the VISUAL selection screen by touching [V.SEL]. · The screen can be changed to the SYSTEM selection screen by touching [SYS]. · After 5 seconds of each operation in the visual mode, the screen changes to the visual screen only.

To display the source selection screen, touch the display panel, then touch [MAIN CONT.] on the screen. The source selection screen appears by touching [SRC] on the changed main source screen. Shortcut Screen In the main source display, shortcuts for set up of Media Xpander, Bass MAX EQ, Visual EQ, and DOLBY PLII can be shown and their settings can be made directly. Main screen example for Radio mode 3 & % # 456 7 8 1 2 Touch [screen.

] on the far right of the main source The shortcut menu screen is displayed. (Displayed when DEFEAT is set to OFF.) Touch a desired setup menu. MX (Media Xpander): Selects the MX mode of the currently displayed audio source. Bass Max EQ: Allows choosing any desired mode. (This function cannot be set when an external audio processor is connected. The setting can be carried out on the audio processor.) Visual EQ: Selectable when the visual source mode is turned on. DOLBY PLII: Displayed when an external audio processor is connected. 9 "1 3 Displays the source name, such as radio band, etc.

, that is selected 4 Changes to Telephone mode*2 (see page 55) Number of bars decreases depending on reception level (is no reception) 5 Changes to VISUAL selection screen 6 Changes to SYSTEM selection screen 7 Displays time 8 Displays shortcut menu screen (see pages 11,12) 9 Function Guide: The function guide display varies depending on each source. The contents of the function guide change by touching [P1/2]*1 or [P1/3]*1 on the function guide, and many other operations can be performed. ! Icon for new incoming mail*2 " Missed incoming mail icon*2 # Displays volume level \$ Working state indicator Continued 11-EN Display example for shortcut menu screen Displaying the Numeric Keypad Input Screen The numeric keypad input screen is displayed when the DVD mode is selected for searching a title or chapter, and for entering a country code or password for the DVD setup item, and also when selecting a channel number in the XM Radio mode. 1 2 The setup screen is displayed by touching one of these modes. Touch [10KEY] on the main source screen. Touch the desired numeric key. Display example for numeric keypad 1 2 3 Display example for setup screen 1 8 7 4 5 6 3 2 1 Close the Shortcut menu screen by touching [].



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

2 The screen changes to the setup screen mode by touching another mode. 3 Your desired setting can be made by using operation buttons. 1 Operation buttons of this area can be used while displaying the numeric keypad input screen.

2 Input screen area 3 All input numbers will be deleted 4 Previous number will be deleted 5 Input number is confirmed 6 Closes numeric keypad input screen 7 Numeric keypad 8 Operation buttons of this area cannot be used while displaying the numeric keypad input screen. 3 Touch [ENT] to confirm your entry.

Dual-Screen Display The connected AMP Link-compatible external amplifier can be displayed in dual-screen on the main source screen. 1 2 Touch [V.SEL] on the main source screen.

The VISUAL selection screen appears. Touch [DUAL SCREEN]. The main source screen is restored showing the dualscreen display. Display example for the dual-screen Changes the AMP display for the connected amplifier. 3 4 Touch [V.SEL] to cancel the dual-screen display. The VISUAL selection screen appears. Touch [NORMAL]. The normal screen will be restored. 12-EN Radio Display example for Radio main screen Manual Storing of Station Presets 1 345 1 A Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning. Touch [P1/2] to change the function guide. Touch [MEMORY]. Touch any one of the preset buttons [P.SET 1] through [P.SET 6] within 5 seconds.

The selected station is stored. 2 B 6 2 3 4 5 Repeat the procedure to store up to 5 other stations onto the same band. To use this procedure for other bands, simply select the band desired and repeat the procedure. 1 2 3 4 5 6 A B [SRC] button: Refer to page 11 [TITLE] button: Refer to page 22 [] button: Refer to pages 55 to 57 [V.SEL] button: Displays the VISUAL selection screen [SYS.] button: Displays the SYSTEM selection screen [] button: Refer to page 11 Displays the input radio station title. Displays the preset number/frequency. A total of 18 stations can be stored in the preset memory (6 stations for each band; FM1, FM2 or AM). · If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorized.

Automatic Memory of Station Presets The tuner can automatically seek and store 6 strong stations in the selected band in order of signal strength. Listening to the Radio 1 2 3 4 After selecting the desired band, touch [A.MEMO]. Touch [SRC] on the main source screen. The source selection screen is displayed. The tuner automatically seeks and stores 6 strong stations into [P.SET 1] to [P.SET 6] in order of signal strength. When the automatic storing has been completed, the tuner goes to the station stored in [P.SET 1]. · If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.

Touch [RADIO]. The radio mode is activated and the display changes to the Radio Mode screen. Touch [BAND] to select the desired radio band. Each press changes the bands as follows: FM-1 FM-2 AM FM-1 Touch [TUNE] to choose the tuning mode. Each touch changes the tuning mode display. Distance gf Tuning to Preset Stations You can tune in the preset stations in memory on each band using the preset number. Local gf Manual Distance () gf · There are two modes you can select for auto tuning, DX and Local: - DX (Distance) mode (with DX SEEK indicator ON); Both strong and weak stations will be tuned in. - Local mode (with SEEK indicator ON); Only strong stations will be tuned in. The initial setting is DX. 1 2 After selecting the desired band, touch [P1/2] to change the function guide.

Touch any one of the preset buttons [P.SET 1] through [P.SET 6] that has a station stored to it. The preset station is received. 5 Touch [g] or [f] to change the radio frequency up or down respectively. When the button is touched and held, the frequency changes continuously until the button is released. Searching from Radio Station Title If the title of a radio station is entered, a title list is displayed. (See "Tiling Discs/Radio Stations" on page 22) · When a stereo FM station is tuned in, the STEREO indicator appears in the display. 1 2 Touch [] to activate the search mode. The screen changes to the radio title list display. Touch [:] to select the desired radio title. The screen changes to the radio mode main display, and the desired radio station is received. 13-EN CD/MP3/WMA Display example for MP3/WMA main screen Playback 1 2 5 Touch [SRC] on the main source screen. The source selection screen is displayed. 1 A 234 Touch [DVD PLAYER].

The display shows the DVD player mode screen. When a CD/MP3/WMA is inserted into the DISC SLOT of the IVA-D300, with the label side facing up, the unit starts to play the CD/MP3/WMA. B · When an optional Alpine CD player is connected, inserting a CD into the optional CD player starts playback automatically. 3 6 1 2 3 4 5 6 A [SRC] button: Refer to page 11 [] button: Refer to pages 55 to 57 [V.SEL] button: Displays the VISUAL selection screen [SYS.] button: Displays the SYSTEM selection screen [] button: Refer to page 11 [] button: Refer to page 23 CD: Displays track text*1 in the upper line. Displays input title in the lower line. Disc text*1 is displayed if there are no titles in the display. MP3/WMA: After displaying the file name in the upper line, the track name is displayed if there is ID3 tag information. After displaying the folder name, the artist name/ album name are displayed if there is ID3 tag information. B CD: Displays the track number/disc number*2/elapsed time. MP3/WMA: Displays the folder number/file number/disc number*3/ elapsed playback time Touch [g] or [f] to select the desired track (file). Returning to the beginning of the current track (file): Touch [g]. Fast backward : Touch and hold [g]. Advancing to the beginning of the next track (file) : Touch [f].

Fast forward : Touch and hold [f]. To pause playback Touch [-/J]. Touching [-/J] again will resume playback. To eject the disc Press c. · The IVA-D300 models include a built-in MP3/WMA unit. You can play CD-ROMs, CD-Rs, and CD-RWs containing MP3/WMA files on this unit. Use the format compliant with this unit. For further information about playing or storing MP3/WMA files, refer to pages 15 and 16 before using the unit. · A WMA format file that is protected by DRM (Digital Rights Management) cannot be played back on this unit. · The unit can play discs containing both audio data and MP3/WMA data. · The MP3/WMA indicator is lit during MP3/WMA playback. · No sound is played during fast-forwarding/fast-reversing. · The fast-reversing operation can be performed in the MP3/WMA mode only when a track (file) is currently being played back. · The track display for CD audio data playback is the track numbers recorded on the disc.



You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide
<http://yourpdfguides.com/dref/432831>

· Three-inch (8cm) CD's can be used.

· "Playing MP3/WMA Data" is mentioned on page 31 "GENERAL Setup". · When an MP3/WMA disc is played, it sometimes takes a few moments until it starts.

· Touch [] to activate the search mode. For operations, refer to "Disc Search Function" on page 23. *1 Displayed when CD text is available.

*2 Displayed when a CD changer is connected. *3 Displayed when an MP3 compatible CD changer is connected. 14-EN Repeat Play Touch [] to play back repeatedly the track currently being played. The track (file) will be played repeatedly. Touch [CD:] again and select OFF to deactivate Repeat play. RPT RPT ALL* (off) RPT 1 About MP3/WMA CAUTION Except for private use, duplicating audio data (including MP3/WMA data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.

What is MP3? MP3, whose official name is "MPEG-1 Audio Layer 3," is a compression standard prescribed by the ISO, the International Standardization Organization and MPEG which is a joint activity institution of the IEC. MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality.

The MP3 format realizes such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds. MP3/WMA: 1 Touch [P1/2]*3 to change the function guide. 2 Touch [] and select the desired Repeat play. RPT RPT FLDR RPT ALL (off) RPT *1 If a CD Changer or an MP3 compatible CD changer is connected and the RPT ALL mode is selected, the unit repeatedly plays back all tracks (files) on the disc selected. *2 Only files in a folder are repeatedly played back. *3 Display may vary depending on the connected devices. 2 1 M.I.X. (Random Play) Touch [] during playback.

The tracks (files) on the disc will be played back in a random sequence. To cancel M.I.X. play, touch [CD: *1 What is WMA? WMA, or "Windows Media™ Audio," is compressed audio data.

WMA allows you to create music files and store them at higher ratios of compression than MP3 audio data (approx. half original size). This is achieved while still maintaining CD quality sound. J. M.

I.X. M.I.X. ALL (off) M.I.X. Method for creating MP3/WMA files Audio data is compressed by using MP3/WMA specified software. For details on creating MP3/WMA files, refer to the user's manual for that software.

MP3/WMA files that can be played back by this device have the file extension "mp3" / "wma". Files with no extension cannot be played back. (WMA ver. 7.1 and 8 are supported) MP3/WMA: *4 1 Touch [P1/2] to change the function guide.] and select the desired M.I.X. play. 2 Touch [*3 *2 *3 M.

I.X. FLDR M.I.X.

(off) M.I.X. FLDR *1 If a CD Changer equipped with the M.I.

X. ALL function is connected, M.I.X. ALL will also be selectable. In this mode, the tracks on all the CDs in the current magazine will be included in the random playback sequence. 2 * If an MP3 compatible CD changer is connected, all files in a disc are played back in random sequence, and playback shifts to the next disc. *3 Only files in a folder are played back in random sequence in the M.I.X.

FLDR mode. *4 Display may vary depending on the connected devices. Supported playback sampling rates and bit rates MP3 Sampling rates: 32 kHz 48 kHz Bit rates: 32 - 320 kbps WMA Sampling rates: 32 kHz 48 kHz Bit rates: 32 - 192 kbps This device may not play back correctly depending on sampling rates or bit rates. Selecting Folders (concerning MP3/WMA) Touch [F.DN] or [F.UP] to select the folder. ID3 tags/WMA tags This device supports ID3 tag v1, and WMA tag. If tag data is in an MP3/WMA file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data. This device can only display single-byte alphanumeric characters (up to 30 for ID3 tags and up to 15 for WMA tags) and the underscore. For non-supported characters, "NO SUPPORT" is displayed.

The tag information may not be correctly displayed, depending on the contents. Producing MP3/WMA discs MP3/WMA files are prepared, then written to a CD-R or CDRW using CD-R writing software. A disc can hold up to 255 files/255 folders (including Root Folders). Depending on the structure of the folders or files, it may take time to read a disc. In this case, it is recommended to decrease the number of folders or files.

Media supported The media that this device can play back are CD-ROMs, CDRs and CD-RWs. Continued 15-EN Corresponding File Systems This device supports discs formatted with ISO9660 Level 1 or Level 2. Under the ISO9660 standard, there are some restrictions to remember. The maximum nested folder depth is 8 (including the root directory). File/folder names are limited to 31 characters (including the extension).

Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '_' (underscore). This device also can play back discs in Joliet, Romeo, etc., and other standards that conform to ISO9660. However, sometimes the file names, folder names, etc., are not displayed correctly. Terminology Bit rate This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files. Sampling rate This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second.

The higher the sampling rate, the higher the sound quality, but also the larger the volume of data. Encoding Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format. Tag Song information such as track titles, artist names, album names, etc., written into MP3/WMA files. MP3: ID3 tag WMA: WMA tag Root folder The root folder is found at the top of the file system. The root folder contains all folders and files. Formats supported This device supports CD-ROM XA, Mixed Mode CD, Enhanced CD (CD-Extra) and Multi-Session. This device cannot correctly play back discs recorded with Track At Once or packet writing. Order of files The unit plays the files in the order that the writing software writes them. Therefore, the playing order may not be the same as the order you input.

The playback order of the folders and files is as follows. However, the folder and file playback order differs from the folder no. and file no. indicated on the display. 1 Root Folder 2 2 3 4 4 3 5 5 6 7 1 6 Folder MP3/WMA File 16-EN DVD/Video CD Display example for DVD main screen To display the DVD mode screen To watch a video source, your vehicle must be parked with the ignition key in the ACC or ON position.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

To do this, follow the procedure below. 1. Push the foot brake to bring your vehicle to a complete stop at a safe location. Engage the parking brake. 2. While the parking brake is being engaged the second time, release the foot brake. For automatic transmission vehicles, place the transmission lever in the Park position. Now, the locking system for the DVD mode operation has been released. Engaging the parking brake can reactivate the DVD mode, as long as the car's ignition has not been turned off. It is not necessary to repeat the above procedure (1 through 3), of "To display the DVD mode screen." Each time the ignition is turned OFF, perform the procedure of "To display the DVD mode screen." If you try to activate the auxiliary device while driving, the display will show the warning-PICTURE OFF FOR YOUR SAFETY. 1 A 234 5 B 6 1 2 3 4 5 6 A B [SRC] button: Refer to page 11 [] button: Refer to pages 55 to 57 [V.SEL] button: Displays the VISUAL selection screen [SYS].

] button: Displays the SYSTEM selection screen [] button: Refer to page 11 [] button: Refer to page 23 Displays the input title only for video CD. Displays the title number/chapter number/elapsed playback time for a DVD. Displays the track number/elapsed playback time for a video CD. Some operations cannot be carried out depending on the disc or playback screen. Displays of the function guide [P1/2], etc., may vary depending on the connected device(s).

Playing DVD/Video CD IVA-D300 has a built-in DVD player. When an optional Alpine DVD/ video CD/CD player (or DVD changer) is connected to the IVAD300, you can control it from the IVA-D300. (except some operations) Caution Not all functions will operate for every DVD. See the individual DVD's instructions for details on the features supported.

Fingerprints on a disc may adversely affect playback. If a problem occurs, remove the disc and check for fingerprints on the playback side. Clean the disc if necessary. If you switch the power or Ignition Key OFF or change sources during playback, playback will continue where you left off when you resume playback. If you try to perform an invalid operation (based on the type of disc being played), the following mark is displayed on the monitor screen:

WARNING It is dangerous (and illegal in many states) for the driver to watch the DVD/TV/Video while driving the vehicle.

The driver may be distracted from looking ahead and an accident could occur. Install the IVA-D300 correctly so that the driver cannot watch DVD/TV/Video unless the vehicle is stopped and the emergency brake is applied. If the IVA-D300 is not installed correctly, the driver will be able to watch the DVD/TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

Play Position Memory Function Even if you turn power off or switch the Ignition Key to OFF during playback or change the source, playback will continue from the point where playback stopped when the power is turned ON again.

17-EN 1 2 Touch [SRC] on the main source screen. The source selection screen is displayed. If a menu screen appears On DVDs and Video CDs with playback control (PBC), menu screens may appear automatically. If this happens, perform the operation described below to start playback. Touch [DVD PLAYER]. The display shows the DVD player mode screen. Insert a disc with the label side facing up. The unit starts to play the disc. When an optional Alpine DVD player is connected: Insert a disc into the DVD/video CD/CD player, the player starts playing. Direct Menu Operations (DVD only) 1 Touch the DVD menu directly.

Some operations cannot be performed depending on the disc. The operation screen changes to the visual screen in the DVD or video CD mode for 5 seconds after an operation has been performed. Touch the display panel to display the operation screen again. The display mode can be changed by touching [WIDE]. For operation, see "Switching Display Modes" on page 24. Menu Operations (DVD only) To eject the disc Press c. The reverse side of a double-sided DVD will not be played automatically. Remove the disc, turn it over, and reinsert it. DO NOT insert discs containing maps for the navigation system. Doing so could result in damage.

Refer also to "DVD Setup" (pages 27 to 30). If: (playback symbol) is displayed when a video CD with PBC (Playback Control) is inserted, playback is enabled by touching and holding [:J] for at least 2 seconds. Be sure the remote input lead is connected to the remote output lead of this unit when a DVD changer or DVD player is connected. If not correctly connected, touch operation cannot be performed. To return to the previous screen during video CD playback, touch [:] after touching [P1/2] of the function guide.

However, the function may vary depending on the disc. 1 Touch [KEY]. The menu operation mode will be displayed. 2 Select a desired menu item by touching [8], [9], [:] or [:]. 3 Touch [ENTER] to confirm the selected item.

18-EN Numeric Keypad Input Operations (DVD) Displaying the Menu Operation Mode Screen (DVD only) 1 2 Touch [P1/2] on the DVD mode main screen. The function guide changes. Touch [MENU CONT]. The menu operation mode screen appears. For further operation, see "If a menu screen appears" on pages 18 and 19. 1 Touch [KEY]. The menu operation mode appears 2 Touch [KEY] again. The numeric keypad input mode screen appears. Turning the PBC Function ON or OFF (Video CD only) The following describes how to turn a video CD equipped PBC (playback control) on or off. Touch [PBC] on the video CD mode main screen.

Touching [PBC] sequentially turns the PBC on and off. Stopping Playback (PRE STOP) Press the stop button during playback to stop playback. That position is stored in the memory. Touch [RTN] to close the numeric keypad input screen. 3 Touch a desired number. 4 Touch [ENT] on the numeric keypad mode screen to confirm your selection. 1 2 Touch [L] once during playback. "PRE STOP" is displayed. Touch [:J] in the PRE STOP mode. Playback starts from the position at which it was stopped.

Numeric Keypad Input Operations (Video CD) When PBC is turned OFF, the menu screen is not displayed. Turn it ON to display the screen (see "Turning the PBC Function ON or OFF" on this page). 1 Touch [P1/2] in the video CD mode to change the function guide. 2 Touch [10KEY]. The numeric keypad is displayed.

3 Touch and input a desired number. 4 Touch [ENT] to confirm. For some discs, the position at which playback was stopped may not be accurate. Stopping Playback Touch [L] twice or touch and hold [L] for at least 2 seconds during playback. "STOP" is displayed, and playback stops.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

· Playback starts from the beginning when [:/J] is touched while playback is stopped. Displaying the Top Menu Screen (DVD only) When a DVD contains two or more titles, the top menu screen appears. Fast-forwarding/Fast-reversing 1 During playback, touch [g] (Fast-reverse) or [f] (fast-forward). When touched and held for more than 1 second, the disc is forwarded/reversed at double speed. When held for 5 more seconds or longer, the disc is forwarded/reversed at 8 times the normal speed. Touch [TOP MENU] on the DVD mode main screen. The top menu screen appears. · To perform necessary operations, see "If a menu screen appears" on pages 18 and 19. 2 Displaying the Menu Screen (DVD only) With a DVD having two or more menus, a menu screen will appear for the programs available, in addition to the main programs. Stop touching [g] or [f] to return to normal playback.

Touch [MENU] on the DVD mode main screen. The menu screen appears. · To perform necessary operations, see "If a menu screen appears" on pages 18 and 19. · No sound is played during fast-forwarding/fast-reversing. · No subtitles are shown during fast-forwarding/fast-reversing. However, subtitles may be displayed depending on the disc. · For DVDs and video CDs with playback control (PBC), the menu screen may reappear during fast-forwarding/fast-reversing. 19-EN Finding the Beginnings of Chapters or Tracks During playback, touch [g] or [f]. The chapter/track switches each time the button is touched, and playback of the selected chapter/track starts. f : Touch this to start playback from the beginning of the following chapter or track.

g : Touch this to start playback from the beginning of the current chapter or track. · Some DVDs do not have chapters. 9 REPEAT 9 The chapter is played repeatedly. The title is played repeatedly. The playback returns to normal mode.

REPEAT TITLE 9 REPEAT OFF · Display may vary depending on the connected devices. Video CD Supplementary explanation "Chapters" are divisions of movies or musical selections on DVDs. "Tracks" are divisions of movies or musical selections on video and music CDs. 1 2 During playback, touch [P1/2].

During playback, touch [] on the main unit.

The repeat mode switches every time the button is touched. 9 REPEAT 9 The track is played repeatedly. The disc is played repeatedly. The playback returns to normal mode. Playing Still Frames (Pausing) REPEAT ALL 9 1 2 During playback, touch [:/J]. Touch [:/J] to resume playback. REPEAT OFF · No sound is played during the still frame mode. · The image or sound may stop temporarily when playback starts from the pause mode. This is not a malfunction. Frame-by-frame Playback · Display may vary depending on the connected devices.

· The track/disc repeat modes cannot be used on video CDs with playback control (PBC). These modes can be carried out after turning PBC off. See "Turning the PBC Function ON or OFF" on page 19. · For some discs it is not possible to switch the repeat mode. · Step 1 is not necessary when a DVD changer or DVD player is connected. 1 2 In the pause mode, touch [f]. The picture advances by one frame each time the button is touched. Searching by Title Number (DVD only) Use this function to easily find positions on the DVD using the DVD's titles. Touch [:/J] to return to normal mode. · No sound is played during frame-by-frame playback.

1 2 3 4 Touch [P1/2] while playback is stopped. The function guide appears. Slow Motion Playback 1 Touch [10KEY]. The numeric keypad input mode screen appears. When [f] is touched and held while in the pause mode, the 1/8th speed slow motion playback mode is set.

When held in for 5 more seconds, the slow motion speed switches to 1/2 the normal speed. Stop touching [f] to pause, and touch [:/J] to playback. Enter a desired title by touching its title number. See page 19 for operation of the numeric keypad. 2 Confirm your selection by touching [ENT].

Playback will start from the title number selected. · No sound is played during slow motion playback. · Reverse slow motion playback is not available. · 1/2, 1/8 are approximate speeds. The actual speed differs from disc to disc. · This function cannot be used on discs on which no title numbers are recorded. ·

Playback starts from the beginning of the chapter/track number in the state of PRE STOP. · Some disc may not accept any operation. Chapter/Track/Title Repeat Playback Use this function to play the disc's titles, chapters or tracks repeatedly. DVD 1 2 During playback, touch [P1/2].

Touch [] on the main unit. The repeat mode switches every time the button is touched. 20-EN Searching Directly by Chapter or Track Number Use this function to easily move to the beginnings of the chapters or tracks on the disc. Video CDs with multiplex audio 1 2 During playback, touch [P1/2]. The function guide changes. Touch [AUDIO]. The left and right channels will be output as shown in the figure below, each time the button is pressed. AUDIO L/L AUDIO R/R AUDIO L/R AUDIO L/L 1 2 3 4 Touch [P1/2] in any mode other than stop mode. The function guide will appear. Touch [10KEY].

The numeric keypad input mode screen will appear. Touch and enter the chapter or track number you want to play. See page 19 for operation of the numeric keypad. Switching the Subtitles (Subtitle Language) (DVD only) With DVDs on which multiple subtitle languages are recorded, the subtitle language can be switched during playback; moreover, subtitles can be hidden. Touch [ENT] to confirm your selection.

Playback will start from the selected chapter or track. 1 2 During playback, touch [P1/2]. The function guide changes. · This function is not available for a disc on which chapters or tracks are not stored. · Direct search of a track number is not available for a video CD with the PBC (playback control) function as long as its PBC is turned on.

Be sure to turn PBC off before starting the search (see "Turning the PBC function ON or OFF" on page 19). Touch [SUBT.]. Touching this button repeatedly selects sequentially the subtitle languages recorded on the disc, and then turns the subtitles OFF. Switching the Angle (DVD only) On DVDs in which scenes have been filmed from multiple angles, the angle can be switched during playback. 1 2 During playback, touch [P1/2]. The function guide changes. · There may be a delay before the selected subtitle appears. · Not all discs will allow changing the subtitles during playback. In these cases, select subtitles from the DVDs menu.

· The subtitle language selected becomes the default setting every time the power is turned on or the disc is replaced.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>

If the disc does not include that language, the disc's default language is selected instead. · For some discs, the subtitles will be displayed even when this is set to off. Touch [ANGLE]. The angle switches between the angles recorded on the disc every time the button is touched. Switching from the disc menu For some discs, the audio language, angle and subtitles can be switched from the disc menu. · Some time may be required for the angle to change. · Depending on the disc, the angle may switch in one of two ways. - Seamless: The angle switches smoothly. - Non-seamless: When the angle is switched, a still picture is displayed first, after which the angle switches.

1 2 Touch [MENU] or [TOP MENU] to display the menu. Select an item to confirm it. See "If a menu screen appears" on pages 18 and 19. Switching the Audio Tracks DVDs can have up to 8 different audio tracks. These alternate tracks can be switched during playback.

Displaying the Disc Status for DVD/Video CD Use the procedure described below to display the status (title number, chapter number, etc.) of the currently playing DVD or of the currently playing video CD (track number, etc.) on the monitor. 1 2 During playback, touch [P1/2]. Touch [AUDIO].

The sound switches between the alternate audio tracks recorded on the disc every time the button is touched. 1 2 During playback, touch the display panel. The operation menu screen is displayed. · The alternate track selected becomes the default setting every time the power is turned on or the disc is replaced. If the disc does not include that track, the disc's default language is selected instead. · Not all discs will allow changing the alternate audio tracks during playback. In these cases, select audio tracks from the DVDs menu. · There may be a delay before the selected alternate track begins to play. Touch [MAIN CONT.] within 5 seconds.

The display status is displayed for 5 seconds. 21-EN Other Useful Features Adjusting the Audio Press the Rotary encoder on the unit. The display changes to the Audio Adjustment screen. Display Example for Audio Adjustment Screen Turning defeat ON or OFF Touch [;] or [:] of DEFEAT to turn it ON or OFF. If you set the defeat to ON, MX is turned OFF and EQ is returned to the initial setting. Adjusting the BASS Level Touch [;] or [:] of BASS to adjust the low frequency bass level. Setting range: 0 to 11 · This adjustment becomes available when AMP Link compatible external amplifiers (MRD-M301 and MRD-M501) are connected. Adjusting the Balance/Fader Directly 3 2 1 4 Touch and move [N] to a desired setting. Or touch a desired setting range, and [N] will move to that location. Touch [L] or [R] of Balance and [F] or [R] of Fader for fine-tuning.

Titling Discs/Radio Stations 1 Adjust the volume of the front and rear speakers by touching [F] or [R]. 2 Adjust the volume of the left and right speakers by touching [L] or [R]. 3 Determine your desired setting value by touching and moving [O]. 4 Touches [;], [:] to adjust to your preference. · Touch [AUDIO MODE] on the SYSTEM selection screen to change to the Audio Adjustment screen.

To display the Title Inputting screen: To watch a video source, your vehicle must be parked with the ignition key in the ACC or ON position. To do this, follow the procedure below. Adjusting the Balance Touch [L] or [R] to adjust the sound volume of the left and right speakers. Setting range: L15 to R15 1. Bring your vehicle to a complete stop at a safe location.

Engage the parking brake. 2. @@3. @@ · For automatic transmission vehicles, place the transmission lever in the Park position. Now, the locking system for the Title Inputting mode operation has been released. Engaging the parking brake can reactivate the Title Inputting mode, as long as the car's ignition has not been turned off. It is not necessary to repeat the above procedure (1 through 3), of "To display the Title Inputting mode screen." Each time the ignition is turned OFF, perform the procedure of "To display the Title Inputting mode screen." Adjusting the Fader Touch [F] or [R] to adjust the volume of the front and rear speakers. Setting range: F15 to R15 Adjusting the Subwoofer Level Touch [;] or [:] of SUBW.

to adjust the subwoofer output. Setting range: 0 to 15 · Trying to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING. You can title radio stations and Discs (CD, Video CD). This manual describes how to title radio stations. (You cannot title DVD and MP3/WMA discs.) · The level adjustment becomes available when 0° or 180° is set in "Subwoofer On and Off" (page 40). Adjusting NAV. LEVEL Touch [;] or [:] of NAV. to adjust the volume of navigation interruption. Setting range: 0 to 15 1 2 3 Activate the Radio mode.

Touch [TITLE] on the radio main screen. The title input screen appears. Touch a desired character symbol to input. Up to 16 digits can be input. Each time [A/a/1/+] is touched, alphabet upper case, lower case, numerical and then symbols are selected.

· This adjustment becomes available when NAV.MIX is turned on in "Setting the Navigation Interruption" (page 32). 22-EN Display example for title input screen 1 2 3 4 5 9 6 7 8 1 2 3 4 5 6 7 8 9 Moves the cursor to the left in the input area Input area Moves the cursor to the right in the input area Changes between character and symbol All you have input is deleted Deletes a previous character Confirms and stores a title you have input Returns to a previous screen Character/Symbol Pallet Touch [ENT] to confirm the input title. The display changes to the radio mode. 1 [] is displayed if there is a hierarchical list.

2 Select directly by touching [;], and its disc (or folder/file) is played back. 3 Go through the list pages by touching [] or []. 4 Touch [] to return to the previous list screen*. * This screen displays a list of the disc currently playing, or each disc of a connected external CD player or changer. · When a disc title is not given to a CD or video CD, "NO TITLE" is displayed. 2 Touch [] of the selected disc title. Another hierarchical list appears. Refer to the following mode procedure. Internal CD player mode 1 The track title list* or the track list screen appears. * If the CD is text compatible 2 Touch [;] of a desired track text* or track.

The selected track will be played back. 4 Internal MP3/WMA Player/external MP3-compatible Changer Mode 1 The folder list screen appears. Select a desired folder and then touch []. ([] appears only when a file is present in the selected folder.) The file list screen is displayed. · Touch [;] to play back the folder directly. 2 Touch [;] of a desired file name. The selected file will be played back. · You can enter up to 100 titles of radio stations, CD and video CD.



[You're reading an excerpt. Click here to read official ALPINE IVA-D300 user guide](http://yourpdfguides.com/dref/432831)

<http://yourpdfguides.com/dref/432831>