



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE IVE-W530E. You'll find the answers to all your questions on the ALPINE IVE-W530E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual ALPINE IVE-W530E**  
**User guide ALPINE IVE-W530E**  
**Operating instructions ALPINE IVE-W530E**  
**Instructions for use ALPINE IVE-W530E**  
**Instruction manual ALPINE IVE-W530E**

**ALPINE**  
**Mobile Media Station**  
**FOR CAR USE ONLY**  
**IVE-W530EBT**  
**IVE-W530ABT**  
**IVE-W530E**

EN

\* OWNER'S MANUAL  
Please read before using this equipment.

---

<p><b>ALPINE ELECTRONICS MANAGING, INC.</b> 1-7, Yariyusa Onishi 1020, Chiba-shi, Tokyo 146-0067, JAPAN Phone: 043-898-5101</p>	<p><b>ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.</b> 8/11-150 Merton Highway, Point Victoria 3802, Australia Phone: 09-497-1022</p>	<p><b>ALPINE ITALIA S.p.A.</b> Viale U. D'Alfonso 6, 20139 Monza 10 011, 20139 Monza, Italy Phone: 0376-86811</p>
<p><b>ALPINE ELECTRONICS OF AMERICA, INC.</b> 16100 Canyon Place, Torrance, California 90501, U.S.A. Phone: 1-855-ALPINE (1-855-257-4313)</p>	<p><b>ALPINE ELECTRONICS GmbH</b> Wolfrumweg 148-150, D-12205 Marzahn, Germany Phone: 300-20 10 310</p>	<p><b>ALPINE ELECTRONICS DE ESPAÑA, S.A.</b> Paseo de la Castellana 26, Torre 10, 28046 Madrid, Spain Phone: 91-85-25598</p>
<p><b>ALPINE ELECTRONICS OF CANADA, INC.</b> 7775, av. Jean J. Lussier, 7e. etage, Ottawa, ON, Canada Phone: 1-877-ALPINE 1; 800-272-4533</p>	<p><b>ALPINE ELECTRONICS OF U.K. LTD.</b> Alpine House, Fulham Road, London, SW6 1JH, U.K. Phone: 020-83 31 703</p>	
	<p><b>ALPINE ELECTRONICS FRANCES S.R.L.</b> VIA S. MARTINO 6 33010 28010 02, 02100-02100000000, 01100-01100000000, 041-00010-04100000000, 061-00010-06100000000, 081-00010-08100000000, 091-00010-09100000000, 095-00010-09500000000, 099-00010-09900000000, 111-00010-11100000000, 119-00010-11900000000, 131-00010-13100000000, 133-00010-13300000000, 135-00010-13500000000, 137-00010-13700000000, 139-00010-13900000000, 141-00010-14100000000, 143-00010-14300000000, 145-00010-14500000000, 147-00010-14700000000, 149-00010-14900000000, 151-00010-15100000000, 153-00010-15300000000, 155-00010-15500000000, 157-00010-15700000000, 159-00010-15900000000, 161-00010-16100000000, 163-00010-16300000000, 165-00010-16500000000, 167-00010-16700000000, 169-00010-16900000000, 171-00010-17100000000, 173-00010-17300000000, 175-00010-17500000000, 177-00010-17700000000, 179-00010-17900000000, 181-00010-18100000000, 183-00010-18300000000, 185-00010-18500000000, 187-00010-18700000000, 189-00010-18900000000, 191-00010-19100000000, 193-00010-19300000000, 195-00010-19500000000, 197-00010-19700000000, 199-00010-19900000000, 201-00010-20100000000, 203-00010-20300000000, 205-00010-20500000000, 207-00010-20700000000, 209-00010-20900000000, 211-00010-21100000000, 213-00010-21300000000, 215-00010-21500000000, 217-00010-21700000000, 219-00010-21900000000, 221-00010-22100000000, 223-00010-22300000000, 225-00010-22500000000, 227-00010-22700000000, 229-00010-22900000000, 231-00010-23100000000, 233-00010-23300000000, 235-00010-23500000000, 237-00010-23700000000, 239-00010-23900000000, 241-00010-24100000000, 243-00010-24300000000, 245-00010-24500000000, 247-00010-24700000000, 249-00010-24900000000, 251-00010-25100000000, 253-00010-25300000000, 255-00010-25500000000, 257-00010-25700000000, 259-00010-25900000000, 261-00010-26100000000, 263-00010-26300000000, 265-00010-26500000000, 267-00010-26700000000, 269-00010-26900000000, 271-00010-27100000000, 273-00010-27300000000, 275-00010-27500000000, 277-00010-27700000000, 279-00010-27900000000, 281-00010-28100000000, 283-00010-28300000000, 285-00010-28500000000, 287-00010-28700000000, 289-00010-28900000000, 291-00010-29100000000, 293-00010-29300000000, 295-00010-29500000000, 297-00010-29700000000, 299-00010-29900000000, 301-00010-30100000000, 303-00010-30300000000, 305-00010-30500000000, 307-00010-30700000000, 309-00010-30900000000, 311-00010-31100000000, 313-00010-31300000000, 315-00010-31500000000, 317-00010-31700000000, 319-00010-31900000000, 321-00010-32100000000, 323-00010-32300000000, 325-00010-32500000000, 327-00010-32700000000, 329-00010-32900000000, 331-00010-33100000000, 333-00010-33300000000, 335-00010-33500000000, 337-00010-33700000000, 339-00010-33900000000, 341-00010-34100000000, 343-00010-34300000000, 345-00010-34500000000, 347-00010-34700000000, 349-00010-34900000000, 351-00010-35100000000, 353-00010-35300000000, 355-00010-35500000000, 357-00010-35700000000, 359-00010-35900000000, 361-00010-36100000000, 363-00010-36300000000, 365-00010-36500000000, 367-00010-36700000000, 369-00010-36900000000, 371-00010-37100000000, 373-00010-37300000000, 375-00010-37500000000, 377-00010-37700000000, 379-00010-37900000000, 381-00010-38100000000, 383-00010-38300000000, 385-00010-38500000000, 387-00010-38700000000, 389-00010-38900000000, 391-00010-39100000000, 393-00010-39300000000, 395-00010-39500000000, 397-00010-39700000000, 399-00010-39900000000, 401-00010-40100000000, 403-00010-40300000000, 405-00010-40500000000, 407-00010-40700000000, 409-00010-40900000000, 411-00010-41100000000, 413-00010-41300000000, 415-00010-41500000000, 417-00010-41700000000, 419-00010-41900000000, 421-00010-42100000000, 423-00010-42300000000, 425-00010-42500000000, 427-00010-42700000000, 429-00010-42900000000, 431-00010-43100000000, 433-00010-43300000000, 435-00010-43500000000, 437-00010-43700000000, 439-00010-43900000000, 441-00010-44100000000, 443-00010-44300000000, 445-00010-44500000000, 447-00010-44700000000, 449-00010-44900000000, 451-00010-45100000000, 453-00010-45300000000, 455-00010-45500000000, 457-00010-45700000000, 459-00010-45900000000, 461-00010-46100000000, 463-00010-46300000000, 465-00010-46500000000, 467-00010-46700000000, 469-00010-46900000000, 471-00010-47100000000, 473-00010-47300000000, 475-00010-47500000000, 477-00010-47700000000, 479-00010-47900000000, 481-00010-48100000000, 483-00010-48300000000, 485-00010-48500000000, 487-00010-48700000000, 489-00010-48900000000, 491-00010-49100000000, 493-00010-49300000000, 495-00010-49500000000, 497-00010-49700000000, 499-00010-49900000000, 501-00010-50100000000, 503-00010-50300000000, 505-00010-50500000000, 507-00010-50700000000, 509-00010-50900000000, 511-00010-51100000000, 513-00010-51300000000, 515-00010-51500000000, 517-00010-51700000000, 519-00010-51900000000, 521-00010-52100000000, 523-00010-52300000000, 525-00010-52500000000, 527-00010-52700000000, 529-00010-52900000000, 531-00010-53100000000, 533-00010-53300000000, 535-00010-53500000000, 537-00010-53700000000, 539-00010-53900000000, 541-00010-54100000000, 543-00010-54300000000, 545-00010-54500000000, 547-00010-54700000000, 549-00010-54900000000, 551-00010-55100000000, 553-00010-55300000000, 555-00010-55500000000, 557-00010-55700000000, 559-00010-55900000000, 561-00010-56100000000, 563-00010-56300000000, 565-00010-56500000000, 567-00010-56700000000, 569-00010-56900000000, 571-00010-57100000000, 573-00010-57300000000, 575-00010-57500000000, 577-00010-57700000000, 579-00010-57900000000, 581-00010-58100000000, 583-00010-58300000000, 585-00010-58500000000, 587-00010-58700000000, 589-00010-58900000000, 591-00010-59100000000, 593-00010-59300000000, 595-00010-59500000000, 597-00010-59700000000, 599-00010-59900000000, 601-00010-60100000000, 603-00010-60300000000, 605-00010-60500000000, 607-00010-60700000000, 609-00010-60900000000, 611-00010-61100000000, 613-00010-61300000000, 615-00010-61500000000, 617-00010-61700000000, 619-00010-61900000000, 621-00010-62100000000, 623-00010-62300000000, 625-00010-62500000000, 627-00010-62700000000, 629-00010-62900000000, 631-00010-63100000000, 633-00010-63300000000, 635-00010-63500000000, 637-00010-63700000000, 639-00010-63900000000, 641-00010-64100000000, 643-00010-64300000000, 645-00010-64500000000, 647-00010-64700000000, 649-00010-64900000000, 651-00010-65100000000, 653-00010-65300000000, 655-00010-65500000000, 657-00010-65700000000, 659-00010-65900000000, 661-00010-66100000000, 663-00010-66300000000, 665-00010-66500000000, 667-00010-66700000000, 669-00010-66900000000, 671-00010-67100000000, 673-00010-67300000000, 675-00010-67500000000, 677-00010-67700000000, 679-00010-67900000000, 681-00010-68100000000, 683-00010-68300000000, 685-00010-68500000000, 687-00010-68700000000, 689-00010-68900000000, 691-00010-69100000000, 693-00010-69300000000, 695-00010-69500000000, 697-00010-69700000000, 699-00010-69900000000, 701-00010-70100000000, 703-00010-70300000000, 705-00010-70500000000, 707-00010-70700000000, 709-00010-70900000000, 711-00010-71100000000, 713-00010-71300000000, 715-00010-71500000000, 717-00010-71700000000, 719-00010-71900000000, 721-00010-72100000000, 723-00010-72300000000, 725-00010-72500000000, 727-00010-72700000000, 729-00010-72900000000, 731-00010-73100000000, 733-00010-73300000000, 735-00010-73500000000, 737-00010-73700000000, 739-00010-73900000000, 741-00010-74100000000, 743-00010-74300000000, 745-00010-74500000000, 747-00010-74700000000, 749-00010-74900000000, 751-00010-75100000000, 753-00010-75300000000, 755-00010-75500000000, 757-00010-75700000000, 759-00010-75900000000, 761-00010-76100000000, 763-00010-76300000000, 765-00010-76500000000, 767-00010-76700000000, 769-00010-76900000000, 771-00010-77100000000, 773-00010-77300000000, 775-00010-77500000000, 777-00010-77700000000, 779-00010-77900000000, 781-00010-78100000000, 783-00010-78300000000, 785-00010-78500000000, 787-00010-78700000000, 789-00010-78900000000, 791-00010-79100000000, 793-00010-79300000000, 795-00010-79500000000, 797-00010-79700000000, 799-00010-79900000000, 801-00010-80100000000, 803-00010-80300000000, 805-00010-80500000000, 807-00010-80700000000, 809-00010-80900000000, 811-00010-81100000000, 813-00010-81300000000, 815-00010-81500000000, 817-00010-81700000000, 819-00010-81900000000, 821-00010-82100000000, 823-00010-82300000000, 825-00010-82500000000, 827-00010-82700000000, 829-00010-82900000000, 831-00010-83100000000, 833-00010-83300000000, 835-00010-83500000000, 837-00010-83700000000, 839-00010-83900000000, 841-00010-84100000000, 843-00010-84300000000, 845-00010-84500000000, 847-00010-84700000000, 849-00010-84900000000, 851-00010-85100000000, 853-00010-85300000000, 855-00010-85500000000, 857-00010-85700000000, 859-00010-85900000000, 861-00010-86100000000, 863-00010-86300000000, 865-00010-86500000000, 867-00010-86700000000, 869-00010-86900000000, 871-00010-87100000000, 873-00010-87300000000, 875-00010-87500000000, 877-00010-87700000000, 879-00010-87900000000, 881-00010-88100000000, 883-00010-88300000000, 885-00010-88500000000, 887-00010-88700000000, 889-00010-88900000000, 891-00010-89100000000, 893-00010-89300000000, 895-00010-89500000000, 897-00010-89700000000, 899-00010-89900000000, 901-00010-90100000000, 903-00010-90300000000, 905-00010-90500000000, 907-00010-90700000000, 909-00010-90900000000, 911-00010-91100000000, 913-00010-91300000000, 915-00010-91500000000, 917-00010-91700000000, 919-00010-91900000000, 921-00010-92100000000, 923-00010-92300000000, 925-00010-92500000000, 927-00010-92700000000, 929-00010-92900000000, 931-00010-93100000000, 933-00010-93300000000, 935-00010-93500000000, 937-00010-93700000000, 939-00010-93900000000, 941-00010-94100000000, 943-00010-94300000000, 945-00010-94500000000, 947-00010-94700000000, 949-00010-94900000000, 951-00010-95100000000, 953-00010-95300000000, 955-00010-95500000000, 957-00010-95700000000, 959-00010-95900000000, 961-00010-96100000000, 963-00010-96300000000, 965-00010-96500000000, 967-00010-96700000000, 969-00010-96900000000, 971-00010-97100000000, 973-00010-97300000000, 975-00010-97500000000, 977-00010-97700000000, 979-00010-97900000000, 981-00010-98100000000, 983-00010-98300000000, 985-00010-98500000000, 987-00010-98700000000, 989-00010-98900000000, 991-00010-99100000000, 993-00010-99300000000, 995-00010-99500000000, 997-00010-99700000000, 999-00010-99900000000</p>	

Designed by ALPINE Japan  
ADP-16204\_A



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)  
<http://yourpdfguides.com/dref/5199439>

**Manual abstract:**

.....  
.....  
.....

.... 4 PRECAUTIONS .

.....  
.....  
.....

..... 5 Discs Playable on This Unit .

.....  
.....

... @@9 Location of Controls ..

.....  
.....  
.....

..... 9 Turning Power On or Off ..

.....  
.....  
.....

. 9 Adjusting the Volume .....

.....  
.....

9 Lowering Volume Quickly .....

.....  
.....

. 9 How to view the Display ....

.....  
.....

9 TOUCH PANEL operation .....

.....  
.....

.. 9 Recalling the Source ...

.....  
.....

.. @@10 Radio Listening to the Radio ...

.....  
.....

... 11 Presetting Stations Manually .....

.....  
.....  
.... 11 Presetting Stations Automatically .  
.....

..... 11 Tuning to Preset Stations ...  
.....  
.....

..... @@ 12 Repeat Play .  
.....  
.....  
.....  
.....

.. 12 M.I.X. (Random Play) .....

.....  
. 13 Selecting Folders (concerning MP3/WMA/AAC) ....  
.....  
..... 13 About MP3/WMA/AAC .

.....  
.....  
.....

. 13 Other Useful Features Adjusting the Audio .....

.....  
.21 Search Function ....  
.....

.....  
.....  
.....  
.....22 Rear Selection Function ...

.....  
.....  
.....  
.....  
.....  
.....22 Switching Display Modes .....

.....  
.....  
.....  
.....  
.....23 Switching the Visual Source Only (Simultaneous Function) .....

.....  
.....  
.....  
.....  
.....23 Cancelling the Simultaneous Function .....23 Blackout Mode On and Off .  
.....



.....  
.....  
... 27 Turn the Function Guide ON/OFF (Function Guide Fade) ..  
.....

.....  
.....  
.. 27 Switching the Font Background Colour ...  
... 27 Adjusting the Touch Panel .....

.....  
.....  
.... 27 Setting the VISUAL Button .  
.....

.....  
... 27 Visual EQ™ Visual EQ Setting Operation ..  
.....  
.....

..... 27 Selecting the Visual EQ Mode (Factory's setting) .  
.....  
.....  
.....

.....  
.....  
28 Adjusting Brightness .....

.....  
.....  
.....  
28 Adjusting Colour of Picture .....

.....  
.... 28 Adjusting Tint of Picture .  
.....  
.....

.....  
... 28 Adjusting Image Contrast ..  
.....  
.....

.....  
28 Adjusting Picture Quality .....

.....  
..... 28 Storing Visual EQ ..  
.....  
.....

.....  
.....  
.. 28 General Setup General Setup Operation ...  
.....

.....  
.....  
.... 29 Displaying the Time .  
.....  
.....



.....

.....

.... 32 Setting the AUX Front Mode .

.....

.....

..... 32 Setting the Picture/Sound Output ....

.....

.....

. 32 Setting the BLUETOOTH Connection (BLUETOOTH IN)(IVE-W530EBT/IVE-W530ABT only) ..... 32 BT Hands Free Calling (IVE-W530EBT/IVE-W530ABT only) Setup Before Using ...

.....

.....

.....

.....

..... 33 About BLUETOOTH ...

.....

.....

.....

. 33 Before Using Hands-Free Function ....

.....

... 33 How to connect to a BLUETOOTH compatible device (Pairing) .....

.....

.... 33 BLUETOOTH Setup .

.....

.....

.....

.....

.. 33 BLUETOOTH Setup Operation .....

.....

33 Hands-Free Phone Control .....

.....

.....

..... 35 About the Hands-Free Phone .

.....

.....

.....

. 35 Answering a Call .....

.....

.....

.....

.....

35 Hanging up the Telephone .....

.....

.....

.....

.....

.....

35 Adjusting the volume when receiving a Call .....

.....

.....

.....

.....

.....

.....  
... 35 Redial Function .

.....  
.....  
.....  
.....  
.....

35 Call waiting function .....

.....  
.....  
.....

..... 35 Call Switching Operation ..

.....  
.....  
.....

..... 36 Call History .

.....  
.....  
.....  
.....  
.....  
.....  
.....

. 36 Redialing a Number in Dialed Calls History .....

.....  
.....  
.....

36 Dialing a Number in Received Calls History .....

.....  
.....  
.....  
.....

..... 36 Dialing a Number in Missed Calls History .

.....  
.....  
.....  
.....

... 36 Dialing a Number In the Phone Book (Phone Book) ..

.....  
.....  
.....  
.....

..... 37 Dialing a Number Using Direct Dial Input ....

.....  
.....  
.....  
.....  
.....



.....  
*37 Voice Dial Operation* .....

.....

.....

.....

.....

*38 BLUETOOTH Audio Function* .....

.....

*.. 38 BLUETOOTH Audio Operation* ...

.....

..... *38 2-EN Rearview Camera Operation (Optional) Switching the Rear Camera Screen (Optional)* .

.....

.....

.....

.....

.....

.....

.....

*. 38 Displaying the rear view video while the car is in reverse* .....

.....

.....

*38 Displaying the rear view video manually* .....

.....

.....

.....

.....

.....

*..... 38 Installation and Connections Warning* .....

.....

.....

.....

.....

.....

.....

*..... 50 Caution* .....

.....

.....

.....

.....

.....

.....

*. 50 Precautions* .....

.....

.....

.....

.....

*..... 50 Installation* .

.....

.....

.....

.....

.....

.....

.....

...51 Mounting the Microphone .....

.....  
.....  
.....

...52 Connections .....

.....  
.....  
.....

.....  
.....

54 System Example .....

.....  
.....  
.....  
.....

56 Navigation System (Optional) Switching the Navigation Screen (Optional) .....

.....  
.....  
.....

.....  
.....  
.....

.. 39 Auxiliary Device (Optional) Operating Auxiliary Devices (Optional) .....

39 TUE-T200DVB Operation (Optional) Operating the TUE-T200DVB (Optional) .....

.....  
.....  
.....

.....  
.....  
.....

.. 40 Flash Memory (Optional) BANK Function .....

.....  
.....  
.....  
.....

..... 40 Playback ...

.....  
.....  
.....

.....  
.....  
.....  
.....

.... 40 Repeat Play .....

.....  
.....  
.....

.....  
.....  
.....

..... 41 Random Play Shuffle (M.I.X.)

) .....

.....

.....

... 41 Searching for a desired Song .....

.....

.....

.... 41 Searching by Playlist name .

.....

.....

.... 41 Selecting the desired Playlist .

.....

.....

..... 41 Select the desired Folder (Folder up/down) .

.....

.....

.....

.....

.... 41 iPod/iPhone (Optional) Connecting an iPod/iPhone .

.....

.....

.....

.. 42 Setting the iPod Control ...

.....

.....

.....

.....

42 Playback .....

.....

.....

.....

.....

.....

.....

.. 42 Searching for a desired Song ...

.....

.....

... 43 Searching by artist name ..

.....

.....

.....

.. 43 Selecting Playlist/Artist/Album/Genre/ Composer/Podcast ...

.....

.....

.....

.....

.....

.....

43 Random Play Shuffle (M.I.X.) .....

.....

.....

.....

. 44 Repeat Play ....

.....

.....

.....

.....  
.....  
..... 44 Information About DVDs .

.....  
.....  
.....  
.....  
.....  
.....

44 List of Language Codes .....

.....  
.....  
.....

... 45 In Case of Difficulty .....

.....  
.....  
.....

.. 46 Specifications ...

.....  
.....  
.....  
.....  
.....  
.....

**49 3-EN Operating Instructions** **WARNING WARNING** This symbol means important instructions. Failure to heed them can result in serious injury or death. **INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE EMERGENCY BRAKE IS APPLIED.** It is dangerous (and illegal in many states) for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured. **USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.** Failure to do so may result in fire or electric shock.

**DO NOT BLOCK VENTS OR RADIATOR PANELS.** Doing so may cause heat to build up inside and may result in fire. **USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.** Use for other than its designed application may result in fire, electric shock or other injury. **DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.**

Doing so may result in personal injury or damage to the product. **CAUTION** This symbol means important instructions. Failure to heed them can result in injury or material property damage. **HALT USE IMMEDIATELY IF A PROBLEM APPEARS.** Failure to do so may cause personal injury or damage to the product.

Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing. **DO NOT WATCH VIDEO WHILE DRIVING.** Watching the video may distract the driver from looking ahead of the vehicle and cause an accident. **DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.** Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident. **KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.** Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident.

**LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE. MINIMIZE DISPLAY VIEWING WHILE DRIVING.** Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident. **DO NOT DISASSEMBLE OR ALTER.** Doing so may result in an accident, fire or electric shock. **USE ONLY IN CARS WITH Ailizer Handling the Detachable Front Panel** • Do not expose to rain or water. • Do not drop or subject to shock. • After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)  
<http://yourpdfguides.com/dref/5199439>

• In cold temperature conditions, the screen may lose contrast temporarily.

After a short warm-up period, it will return to normal. Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the IVE-W530EBT/IVE-W530ABT/IVE-W530E.

This has been done for the safety of the driver and passengers. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "Can't operate while driving", will be displayed if any attempts are made to perform these operations while driving. • The IVE-W530EBT/IVE-W530ABT/IVE-W530E draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the IVE-W530EBT/IVE-W530ABT/IVE-W530E is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the OFF position when you leave the vehicle. Turn the SPST switch back ON before using the IVE-W530EBT/IVE-W530ABT/IVE-W530E. For connecting the SPST switch, refer to the "Connection Diagram of SPST Switch (sold separately)" (page 53). If the power (ignition) lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time. Video CD (IVE-W530EBT/IVE-W530E only) Audio + Video 12 cm Music CD Audio 12 cm DivX® Audio + Video 12 cm \* Two-layer DVD disc compatible The formatted discs listed below can be played on this unit. CD-R/ CD-RW CD Format MP3 Format ("mp3") WMA Format ("wma") AAC Format ("mp4", "m4a") DVD Video Format DivX Format ("avi", "div", "divx") Video CD Format (IVE-W530EBT/IVE-W530E only) DVD-R/ DVD-RW DVD+R/ DVD+RW Discs that are not finalised cannot be played back 6-EN Discs that cannot be played DVD-ROMs, DVD-RAMs, CD-ROMs (excluding MP3/WMA/ AAC files), photo CDs, etc. DualDisc This unit is not compatible with DualDisc. Using a DualDisc may cause unit malfunction, and may cause disc damage when the disc is inserted/ejected. Multi-session CD-R/RW: Once a recording has been stopped, this is considered one session.

If the disc is not closed (finalised), additional data may be added. Once this additional data has been recorded, this becomes a "multisession" CD. The IVE-W530EBT/IVE-W530ABT/IVE-W530E can only read multi-session DATA Formatted discs (MP3/WMA/AAC files - Not Audio CD files). Properly formatted MP3/WMA/AAC Discs: Use ISO9660 formatting to insure proper playback. You may use standard ISO naming Level 1 (8.3 DOS standard), Level 2 (32 characters) or Joliet (Windows or Macintosh long filenames) file naming conventions\*. \*Please consult the Owner's manual for additional information. DVD region number (playable region number) This DVD player will play back any disc whose region number is 3 (IVE-W530EBT/IVE-W530E only)/4 (IVE-W530ABT only) (or All). DVDs with a region number other than those listed below, cannot be played on this DVD player. On handling compact discs (CD/CD-R/CD-RW) ••••• Do not touch the surface.

Do not expose the disc to direct sunlight. Do not affix stickers or labels. Clean the disc when it is dusty. Make sure that the disc is smooth and flat. Do not use commercially available disc accessories.

3 (IVE-W530EBT/IVE-W530E only) 4 (IVE-W530ABT only) ALL Using compact discs (CD/CD-R/CD-RW) If you use unspecified compact discs, correct performance cannot be guaranteed. You can play CD-Rs (CD-Recordable)/CD-RWs (CD-ReWritable) which have been recorded only on audio devices. You can also play CD-Rs/CD-RWs containing MP3/WMA/AAC formatted audio files. • Some of the following discs may not play on this unit: Flawed discs, discs with fingerprints, discs exposed to extreme temperatures or sunlight (e.g.

left in the car or this unit), discs recorded under unstable conditions, discs on which a recording failed or a re-recording was attempted, copy-protected CDs which do not conform to the audio CD industry standard. • Use discs with MP3/WMA/AAC files written in a format compliant with this unit. For details, see pages 13 and 14. To customers using CD-R/CD-RW • If a CD-R/CD-RW cannot be played back, make sure the last recording session was closed (finalised). •

Finalise the CD-R/CD-RW if necessary, and attempt playback again. Do not leave the disc in the car or the unit for a long time. Never expose the disc to direct sunlight. Heat and humidity may damage the disc and you may not be able to play it again. Using DVD-Rs/DVD-RWs/DVD+Rs/DVD+RWs • This unit is compatible with discs recorded in the standard DVDVideo (DVD-R/DVD-RW only) formats. • Note that discs not finalised (processed to enable to play on playback-only DVD players) cannot be played on this DVD player.

• Some discs may not play back, depending on the recording device and disc format. • Discs or files utilizing copy protection, may not be playable. Some recording systems may not properly format copied files to enable proper playback. • In the following cases, the disc may not play on this unit: discs recorded by certain DVD recorders, certain irregular discs, flawed discs, dirty discs, when the pickup lens of this DVD player is dirty, or when moisture condensation has occurred inside the unit. • Be sure to follow all cautions included with your DVD-Rs/ DVD-RWs/DVD+Rs/DVD+RWs discs. • Do not put stickers, seals, or tape on the label side of DVD-Rs/ DVD-RWs/DVD+Rs/DVD+RWs. • Compared to the regular discs, DVD-Rs/DVD-RWs/DVD+Rs/ DVD+RWs are more affected by heat, moisture, and direct sunlight. If left in a car, etc., damage may occur and it might not play on this unit. • The operable temperature range for disc playback is as follows: DVD-R/DVD-RW: -25 ~ +70°C DVD+R/DVD+RW: +5 ~ +55°C Tips for making your own CDs The IVE-W530EBT/IVE-W530ABT/IVE-W530E plays DVD Video, Video CD, Audio CD, DivX® and has a built in MP3/WMA/AAC decoder.

The following information is designed to help you create your own music CDs (either Audio CD or MP3/WMA/AAC encoded CD-R/ RW files). What is the difference between an Audio and MP3/WMA/AAC CD? An Audio CD is the same format as the commercial CDs you buy in the store (also known as CD-DA). MP3 (MPEG-1 Audio Layer 3) /WMA (Windows Media Audio)/AAC (Advanced Audio Coding) is a data file that uses a compression scheme to reduce the size of the music file.\* Hybrid Audio CD and Data (MP3/WMA/AAC) CD-R/RW discs: The IVE-W530EBT/IVE-W530ABT/IVE-W530E can only read CD-DA sector on the disc.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>

\* 7-EN Disc terminology Title If titles are programmed for the DVD, these are the largest units of division of the information recorded on the disc. Chapter Each Title may also be divided into smaller divisions, called chapters. These can be specific scenes or musical selections. Protecting the USB connector • Only an iPod/iPhone or Flash memory can be connected to the USB connector on this unit. Correct performance using other USB products cannot be guaranteed. • If the USB connector is used, be sure to use only the supplied connector cable with the unit.

A USB hub is not supported. • Depending on the connected Flash memory device, the unit may not function or some functions may not be performed. • The audio file format that can be played back on the unit is MP3/WMA/AAC. • Artist/song name, etc., can be displayed, however characters may not be correctly displayed. CAUTION Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product. On Handling Flash Memory • This unit can control a memory storage device that supports the USB Mass Storage Class (MSC) protocol. Playable audio file formats are MP3, WMA and AAC.

• Flash memory function is not guaranteed. Use Flash memory according to the terms of agreement. Read the Flash memory Owner's Manual thoroughly. • Fix the Flash memory in a location where driver operation will not be hindered. • Flash memory may not function correctly at high or low temperature. • Use only certified Flash memory. Note that even certified Flash memory, may not function correctly depending on its type or state. • Depending on the settings of the Flash memory type, memory state or encoding software, the unit may not play back or display properly. • Files protected by DRM (Digital Rights Management), cannot be played back on this unit. These include AAC formatted files purchased from the iTunes Store and WMA or other files with some form of copyright protection.

• Flash memory may take time to start playback. If there is a particular file other than audio in the Flash memory, it may take considerable time before the file is played back or searched. • The unit can play back "mp3", "wma", "m4a" or "divx" file extensions. • Do not add the above extensions to a file other than audio data. This non-audio data will not be recognised.

The resulting playback may contain noise that can damage speakers and/or amplifiers. • It is recommended to back up important data on a personal computer. • Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, then remove the USB device to prevent possible damage to its memory. • This item incorporates copy protection technology that is protected by U.

S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited. • Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. • Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries. • iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

• "Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. • The BLUETOOTH® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Alpine Electronics, Inc. is under license. • "MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson" • "Supply of this product only conveys a license for private, noncommercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required.

For details, please visit <http://www.mp3licensing.com> • DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. 8-EN Getting Started Accessory List •••••••••• Head unit ..

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

1 Power Cable .....

.....  
.....

.....  
.....  
.....

..1 Mounting Sleeve ...

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....  
*..1 Bracket key..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..2 Flush Head Screw (M5 × 8).....*

.....  
.....  
.....

.....  
.....  
.....

*.6 Screw (M5 × 8) .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....8 Front Frame ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....1 USB extension cable ....*

.....  
.....

.....  
.....  
.....  
.....

*.....1 Microphone .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
..1 Owner's Manual .....

.....  
.....  
.....  
.....

.....  
.....  
.....

...1 set Remote Sensor/Dimmer Sensor • Point the optional remote control transmitter towards the remote sensor within a range of 2 metres. • Senses the brightness of the car interior. Front AUX Input Terminal Connects a portable music player, etc., to the system. For details, see "Operating Auxiliary Devices (Optional)" (page 39). \*1 Adjustable only when Defeat is OFF. \*2 Adjustable only when Subwoofer is ON.

• The buttons on the face of this unit are shown in bold (e.g. SOURCE/ ). The onscreen buttons that appear in the display are shown in bold enclosed by [ ] (e.g. [BAND]). Turning Power On or Off Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations. 1 2 Press SOURCE/ to turn on the unit. • The unit can be turned on by pressing any button on the unit except (Eject).

Press and hold SOURCE/ turn off the unit. for at least 3 seconds to Adjusting the Volume Connectable to Remote Control Interface Box You can operate this unit from the vehicle's control unit when an Alpine Remote Control Interface Box (optional) is connected. For details, contact your Alpine dealer. Adjust the volume by turning the Rotary encoder. Volume: 0 - 35 Lowering Volume Quickly Location of Controls DISC Slot button Ejects a disc.

Activating this function will instantly lower the volume level by 20 dB. Press Rotary encoder (MUTE). The audio level decreases by about 20 dB. Pressing Rotary encoder (MUTE) again brings the audio back to its previous level. (Phone) button (IVE-W530EBT/IVE-W530ABT only) • Press to display the Telephone Menu screen.

• Press and hold for at least 2 seconds to activate Voice Dial mode. (When BLUETOOTH IN is set to HFP or HFP+AUDIO (page 32).) How to view the Display TOUCH PANEL operation • To protect the display, touch the onscreen button with the tip of your finger.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>



• If you touch a button and there is no reaction, remove your finger from the display once, and try again. • If you touch two buttons at the same time, a malfunction may occur. Onscreen buttons are expressed as follows in this Owner's Manual. Track tune button Press to select the desired Radio preset station/track/file/ chapter. SOURCE/ button • Turns the power on. • Press and hold for at least 3 seconds to turn the power off. • Recalls the SOURCE selection screen.

Rotary encoder/MUTE/AUDIO • • • Adjust the volume by turning to the left or right. Press to activate/deactivate mute mode. Press and hold for at least 2 seconds to display the Audio shortcut screen. The Bass level\*1, Treble level\*1, and Subwoofer level\*2 can be adjusted in this mode. • Onscreen buttons are shown in bold, enclosed in [ ] (e.g. [BAND]). 9-EN Recalling the Source Here is an example explanation for the Radio mode display on how to recall a source. Displays the source name, such as radio band, etc., that is selected.

Displays the time, BLUETOOTH indicator (IVE-W530EBT/IVE-W530ABT only), etc. Function Guide: The function guide display varies depending on each source. The contents of the function guide change by touching [P1/2]\* or [P1/3]\* on the function guide, and many other operations can be performed. 1 Press SOURCE/. The SOURCE selection screen is displayed.

Display example for SOURCE selection screen Displays the image of current source. \* Display may vary depending on the connected devices. 3 Press SOURCE/ to change to another source screen, and select the desired source from the SOURCE selection screen. • The screen can be changed to the SETUP selection screen by touching [ ]. Displaying the Numeric Keypad Input Screen Changes the item of source selection list.

(Depending on the source quantity, this button may not be displayed.) Displays the source modes that can be selected. [ ] button: Changes to Navigation screen. (Available only when ON is set in "Setting the Navigation Mode" (page 31) and "Navi" is set in "Setting the VISUAL Button" on page 27). [V.Sel] button: Changes to VISUAL selection screen. (When V.Sel is set in "Setting the VISUAL Button" on page 27.) Changes to SETUP main screen. Changes to Navigation main screen.

(When "ON" is set in "Setting the Navigation Mode" (page 31).) Changes to the Telephone Menu screen. (When "BLUETOOTH IN" is set to other than OFF (page 32).) (IVE-W530EBT/IVE-W530ABT only) Displays the rear view video. (When an optional rearview camera is connected and Camera IN is set to ON (page 31).) Turns off the Source Select screen, and returns to previous source screen. Changes to the Rear selection screen when "Setting the Picture/Sound Output" (page 32) is set to ON. Returns to the previous screen. • The kind of source modes that are displayed varies depending on connection and setting The numeric keypad input screen is displayed when the DVD or CD mode, etc. is selected for searching a title, chapter or track, etc.

1 2 Touch [10KEY] on the main source screen. Touch the desired numeric key. Display example for numeric keypad (DVD mode) 2 Touch [Radio]. The screen changes to the Radio mode main display. Display example for FM Radio main screen Change select mode (File/Chapter, etc. ) or quit numeric keypad input screen. Input screen area. Numeric keypad. Input number is confirmed. The numeric keypad input screen closes if the area is touched while being displayed.

Close numeric keypad input screen. All input numbers will be deleted. 3 Touch [Enter] to confirm your entry. 10-EN Radio Display example for FM Radio main screen Presetting Stations Manually 1 2 3 4 Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning. Touch [P1/2] to change the function guide. Touch and hold any one of the preset buttons [P.SET 1] through [P.SET 6] for at least 2 seconds. The selected station is stored. Repeat the procedure to store up to 5 other stations onto the same band.

To use this procedure for other bands, simply select the band desired and repeat the procedure. A total of 24 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, or AM). Displays the preset number/frequency [DX SEEK]\* button: Displays the tuning mode selection list. \* The button displays the current tuning mode. • If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorized. Presetting Stations Automatically The tuner can automatically seek and store 6 strong stations in the selected band in order of signal strength. Listening to the Radio 1 2 3 4 Press SOURCE/. The SOURCE selection screen is displayed. After selecting the desired band, touch and hold [A.MEMO] for at least 2 seconds.

The tuner automatically seeks and stores 6 strong stations into [P.SET 1] to [P.SET 6] in order of signal strength. When the automatic storing has been completed, the tuner goes to the station stored in [P.SET 1].

• If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began. Touch [Radio]. The radio mode is activated and the display changes to the Radio Mode screen. Touch [BAND] to select the desired radio band. Each press changes the bands as follows: FM-1 FM-2 FM-3 AM FM-1 Tuning to Preset Stations Touch [DX SEEK] to choose the tuning mode.

DX SEEK Local SEEK MANUAL You can tune in the preset stations in memory on each band using the preset number. • There are two modes you can select for auto tuning, DX and Local: - DX (Distance) mode; Both strong and weak stations will be tuned in. - Local mode; Only strong stations will be tuned in. The initial setting is DX. 1 2 After selecting the desired band, touch [P1/2] to change the function guide. Touch any one of the preset buttons [P.SET 1] through [P.SET 6] that has a station stored to it. The preset station is received. 5 Touch [ ], [ ] or [ ], [ ] to change the radio frequency up or down respectively.

In manual mode, touch and hold to change the frequency continuously. 11-EN CD/MP3/WMA/AAC Display example for MP3/WMA/AAC main screen Fast forward : Touch and hold [ ]. To pause playback Touch [ / Touching [ ]. / ] again will resume playback. To eject the disc Press . [ ] button: Refer to page 22

CD: Displays the Track text\*/Disc text\*. • If there is neither Track nor Disc name information, "NO TEXT" will be displayed. MP3/WMA/AAC: After displaying the file name in the upper line, the track name is displayed if there is ID3 tag information. After displaying the folder name in the lower line, the album name/artist name are displayed if there is ID3 tag information. CD: Displays play state/track number/progress bar/elapsed time/remain time.

MP3/WMA/AAC: Displays play state/folder number/track number/progress bar/elapsed playback time/remain time.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>

\* Displayed when a CD text disc is inserted. • If the disc does not eject, press and hold for at least 3 seconds. • The IVE-W530EBT/IVE-W530ABT/IVE-W530E models include a built-in MP3/WMA/AAC unit. You can play CD-ROMs, CD-Rs, and CD-RWs containing MP3/WMA/AAC files on this unit. Use the format compliant with this unit. For further information about playing or storing MP3/WMA/AAC files, refer to pages 13 and 14 before using the unit. • Any file protected by DRM (Digital Rights Management) copy protection, cannot be played back on this unit. • The unit can play discs containing both audio data and MP3/WMA/AAC data. • The track display for CD audio data playback is the track numbers recorded on the disc.

• Three-inch (8cm) CD's cannot be used. • If an MP3/WMA/AAC disc with many files and folders is played, it takes a little longer than normal to start playback. • Touch [ ] to activate the search mode. For operations, refer to "Search Function" on page 22. • Touch [10KEY] to activate direct search mode. For operations, refer to "Numeric Keypad Input Operation" on page 17. • The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back. • If the disc is left in the unit after pressing , the disc is automatically pulled back into the unit and paused. In this case, start playback by touching [ / ] or eject again and remove the disc within 15 seconds. Repeat Play Touch [ ] to play back repeatedly the track currently being played.

The track (file) will be played repeatedly. Touch [ CD: ] again and select OFF to deactivate Repeat play. (off) (Repeat one) MP3/WMA/AAC: 1 Touch [PI/2]\*1 to change the function guide. 2 Touch [ ] and select the desired Repeat play. \*2 (Repeat folder) (off) Playback 1 2 Press SOURCE/. The SOURCE selection screen is displayed. Touch [Disc]. The display shows the Disc screen. When a CD/MP3/WMA/AAC is inserted into the DISC SLOT of the IVE-W530EBT/IVE-W530ABT/IVE-W530E, with the label side facing up, the unit starts to play the CD/MP3/WMA/AAC. (Repeat one) 3 Touch [ (file). ] or [ ] to select the desired track \*1 Display may vary depending on the connected devices. \*2 Only files in a folder are repeatedly played back. Returning to the beginning of the current track (file) : Touch [ ]. Fast reverse : Touch and hold [ ]. Advancing to the beginning of the next track (file) : Touch [ ].

12-EN M.I.X. (Random Play) Touch [ ] during playback. The tracks (files) on the disc will be played back in a random sequence. To cancel M.I.X. play, touch [ CD: (off) ]. What is WMA? WMA, or "Windows Media™ Audio," is compressed audio data. WMA is similar to MP3 audio data. What is AAC? AAC is the abbreviation for "Advanced Audio Coding," and is a basic format of audio compression used by MPEG2 or MPEG4. Method for creating MP3/WMA/AAC files Audio data is compressed using software with MP3/WMA/AAC codecs. For details on creating MP3/WMA/AAC files, refer to the user's manual for that software. MP3/WMA/AAC files that can be played back by this device have the following file extensions: MP3: "mp3" WMA: "wma"(ver.

2, 8, and 9 are supported) AAC: "m4a", "mp4" WMA is not supported for the following files, Windows Media Audio Professional or Windows Media Audio 9 Pro Lossless. There are many different versions of the AAC format. Confirm that the software being used conforms to the acceptable formats listed above. It's possible that the format may be unplayable even though the extension is valid. Playback of AAC files encoded by iTunes is supported. Supported playback sampling rates and bit rates MP3/WMA/AAC: 1 Touch [PI/2]\*1 to change the function guide. 2 Touch [ ] and select the desired M.I.X. play.

\*2 \*3 (off) \*2 \*1 Display may vary depending on the connected devices. \*2 Only files in a folder are played back in random sequence in the M.I.X. Folder mode.

\*3 All files in a disc are played back in random sequence. • If the search mode (page 22) is activated, the M.I.X. Play mode will be cancelled. Selecting Folders (concerning MP3/ WMA/AAC) Touch [ ] or [ ] to select the folder. MP3 Sampling rates: 48 kHz, 44.1 kHz, 32 kHz, 24 kHz, 22.05 kHz, 16 kHz, 12 kHz, 11.025 kHz, 8 kHz Bit rates: 32 - 320 kbps WMA Sampling rates: 48 kHz, 44.1 kHz, 32 kHz Bit rates: 48 - 320 kbps AAC Sampling rates: 48 kHz, 44.1 kHz, 32 kHz About MP3/WMA/AAC CAUTION Bit rates: 32 - 192 kbps Except for private use, duplicating audio data (including MP3/ WMA/AAC data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty. What is MP3? MP3, whose official name is "MPEG Audio Layer 3," is a compression standard prescribed by the ISO, the International Standardization Organization and MPEG which is a joint activity institution of the IEC. This device may not play back correctly depending on sampling rates. ID3 tags/WMA tags This device supports ID3 tag v1 and v2, and WMA tag.

If tag data is in an MP3/WMA/AAC file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data (maximum 64 characters). This device can only display single-byte alphanumeric characters and the underscore. For non-supported characters, "No Support" is displayed.

The number of characters may be limited, or not correctly displayed, depending on the tag information. MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality. The MP3 format realises such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds. 13-EN Producing MP3/WMA/AAC discs MP3/WMA/AAC files are prepared, then written to a CD-R or CD-RW (DVD-R/DVD-RW) using CD-R writing software. A disc can hold up to 1,000 files/255 folders (including Root Folders), and the maximum number of folders is 255.

Playback may not be performed if a disc exceeds the limitations described above. Media supported The media that this device can play back are CD-ROMs, CD-Rs, CD-RWs, DVD-Rs and DVD-RWs. Corresponding File Systems This device supports discs formatted with ISO9660 Level 1 or Level 2. Under the ISO9660 standard, there are some restrictions to remember. The maximum nested folder depth is 8 (including the root directory).

The number of characters for a folder/file name is limited. Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '\_' (underscore).

This device also can play back discs in Joliet, etc., and other standards that conform to ISO9660. However, sometimes the file names, folder names, etc. , are not displayed correctly. Formats supported This device can read CD-DA sector from Mixed Mode CD or Enhanced CD (CD-Extra), (and support CD-ROM XA (IVE-W530EBT/IVE-W530E only)).



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>

This device cannot correctly play back discs recorded with Track At Once or packet writing. Order of files Files are played back in the order that the writing software writes them to the disc. Therefore, the playback order may not be what's expected. Verify the writing order in the software's documentation. The playback order of the folders and files is as follows. (The following numbers may differ from actually displayed numbers.) Terminology Bit rate This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

Sampling rate This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

Encoding Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format. Tag Song information such as track titles, artist names, album names, etc., written into MP3/WMA/AAC files. Root folder The root folder (or root directory) is found at the top of the file system.

The root folder contains all folders and files. It is created automatically for all burned discs.

Root Folder Folder MP3/WMA/AAC File 14-EN DVD/Video CD Display example for DVD Video main screen Playing a Disc IVE-W530EBT/IVE-W530ABT/IVE-W530E has a built-in DVD player. When an optional Alpine DVD/Video CD/CD player is connected to the IVE-W530EBT/IVE-W530ABT/IVE-W530E, you can control it from the IVE-W530EBT/IVE-W530ABT/IVE-W530E (except some operations). A WARNING It is dangerous for the driver to watch the TV/DVD/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur. Install the IVE-W530EBT/IVE-W530ABT/IVE-W530E correctly so that the driver cannot watch TV/DVD/Video unless the vehicle is stopped and the emergency brake is applied.

[ ] button: Changes to Navigation screen. [ ] button: Displays the SETUP selection screen. [ ] button: Changes to full screen. Displays the disc (DVD VIDEO, Video CD (IVE-W530EBT/IVE-W530E only)) being played back. Displays tag information for DivX®.

If the IVE-W530EBT/IVE-W530ABT/IVE-W530E is not installed correctly, the driver will be able to watch the TV/DVD/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured. A • If [ ] on the DivX® mode screen is touched, the search list screen is displayed. Refer to "Search Function" (page 22). • Some operations cannot be carried out depending on the disc or playback screen. • Displays of the function guide [P1/2], etc., may vary depending on the connected device(s). To display the DVD mode screen (IVE-W530EBT/IVE-W530E only) • If you try to activate the auxiliary device while driving, the display will show the warning-Picture off for your safety. Disc types that can be used for each heading are represented by the following marks. DVD Commercial Video discs (used for the distribution of movies, etc.

) or a DVD-R/DVDRW, DVD+R/DVD+RW recorded in a video mode can be used. Video-CD discs can be used. (IVE-W530EBT/IVE-W530E only) CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/ DVD+RW discs and Flash memory that are recorded in the DivX® mode can be used. Caution • Not all functions will operate for every DVD. See the individual DVD's instructions for details on the features supported. • Fingerprints on a disc may adversely affect playback. If a problem occurs, remove the disc and check for fingerprints on the playback side. Clean the disc if necessary. • If you switch the power or Ignition Key OFF or change sources during playback, playback will continue where you left off when you resume playback. • If you try to perform an invalid operation (based on the type of disc being played), the following mark is displayed on the monitor screen: • Play Position Memory Function Even if you turn power off or switch the Ignition Key to OFF during playback or change the source, playback will continue from the point where playback stopped when the power is turned ON again.

15-EN 1 2 Press SOURCE/. The SOURCE selection screen is displayed. 2 Touch [Key]. The menu operation mode will be displayed. Touch [Disc]\*. The display shows the DISC mode screen. Insert a disc with the label side facing up. The unit starts to play the disc. When an optical Alpine DVD player is connected, insert a disc into the DVD/Video CD/CD player, and the player starts playing. \* When you want to play a DivX file from a USB device, touch [USB].

• The operation screen changes to the visual screen in the DVD mode for 5 seconds after an operation has been performed. Touch the display panel to display the operation screen again. • The display mode can be changed by touching [WIDE]. For operation, see "Switching Display Modes" on page 23. Touch [ ] to return to the previous display. (Operation may not be possible, depending on the disc.) To eject the disc Press . • The reverse side of a double-sided DVD will not be played automatically. Remove the disc, turn it over, and reinsert it. • If the disc does not eject, press and hold for at least 3 seconds.

• Do not insert discs containing maps for the navigation system. Doing so could result in damage. • Be sure that the remote input lead is connected to the remote output lead of this unit when a DVD player is connected. If not correctly connected, touching operation cannot be performed. • Refer also to "DVD Setup" (pages 24 to 25). • During V CD play, touch [TOP MENU] to return to preview screen. (IVE-W530EBT/IVE-W530E only) • If the disc is left in the unit after pressing , the disc is automatically pulled back into the unit and stopped. In this case, start playback by touching [ / ] or eject again and remove the disc within 15 seconds. • While "Index reading" is displayed by DivX®, the fast-forwarding/fast-reversing and repeat functions, etc. cannot be used.

3 Select a desired menu item by touching [ ], [ 4 Touch [Enter] to confirm the selected item. ], [ ] or [ ]. Numeric Keypad Input Operations 1 Touch screen to display the operation keys. 2 Touch [Key]. The menu operation mode appears.

3 Touch [Key] again. The numeric keypad input mode screen appears. If a menu screen appears On DVDs, menu screens may appear automatically. If this happens, perform the operation described below to start playback. Direct Menu Operations 1 Touch the DVD menu directly.

• Some operations cannot be performed depending on the disc. Menu Operations 1 Touch screen to display the operation keys. The numeric keypad input screen closes when the area is touched while being displayed. Touch [ ] to close the numeric keypad input screen. 4 Touch a desired number.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)  
<http://yourpdfguides.com/dref/5199439>

5 Touch [Enter] on the numeric keypad mode screen to confirm your selection. 16-EN Numeric Keypad Input Operations (IVE-W530EBT/IVE-W530E only) 1 Touch [P1/2] in the Video CD mode to change to the function guide. 2 Touch [10KEY]. The numeric keypad is displayed. 3 Touch and input a desired number.

4 Touch [Enter] to confirm. • Depending on the V CD disc, this function may not be available. Numeric Keypad Input Operation You can quickly find the desired track/file or folder by inputting its' track/file or folder Number in this mode. Select a Track/File/Chapter 1 2 3 4 Touch [P1/2]\* in the CD/MP3/WMA/AAC/DVD (except stop) mode to change to the function guide. Displaying the Top Menu Screen When a DVD contains two or more titles, the top menu screen appears. \* The display differs, depending on the source (mode). Touch [10KEY]. The numeric keypad is displayed. Touch [TOP MENU] on the DVD mode main screen. The top menu screen appears.

• To perform necessary operations, see "If a menu screen appears" on page 16. Touch and input a desired number. Touch [Enter] to confirm. The selected Track/File/Chapter is selected. Displaying the Menu Screen With a DVD having two or more menus, a menu screen will appear for the programmes available, in addition to the main programmes.

• For CD, during Track select mode, touch [ ], etc. to quit. • For MP3/WMA/AAC/DVD, during File/Chapter select mode, touch [ ] again to change to Folder/Title select mode. Touch [MENU] on the DVD mode main screen. The menu screen appears.

• To perform necessary operations, see "If a menu screen appears" on page 16. Select a Folder/Title 1 2 3 4 Touch [P1/2]\* in the MP3/WMA/AAC/DVD stop mode to change to the function guide. \* The display differs, depending on the source (mode). Displaying the Menu Operation Mode Screen Touch [10KEY]. The numeric keypad is displayed. 1 2 Touch [P1/2]\* on the DVD mode main screen. The function guide changes. Touch and input a desired number. Touch [Enter] to confirm. The first file/chapter in the selected Folder/Title begins to play back.

\* The display differs, depending on the disc (mode). Touch [MENU CONT]. The menu operation mode screen appears. • For further operation, see "If a menu screen appears" on page 16. • During File/Chapter select mode, touch [ ] again to change to Folder/Title select mode. • During Folder/Title select mode, touch [ ], etc. to quit. Stopping Playback (Pre Stop) ( IVE-W530EBT/IVE-W530E only) Press the stop button during playback to stop playback. That position is stored in the memory. 1 2 Touch [ ] once during playback.

"Pre Stop" is displayed. Touch [ / ] in the Pre Stop mode. Playback starts from the position at which it was stopped. • For some discs, the position at which playback was stopped may not be accurate. 17-EN Stopping Playback ( IVE-W530EBT/IVE-W530E only) Touch [ ] twice during playback.

"Stop" is displayed, and playback stops. • Playback starts from the beginning when [ ] playback is stopped. Slow Motion Playback ( IVE-W530EBT/IVE-W530E only) When [ ] is touched and held while in the pause mode, the 1/3th speed slow motion playback mode is set. Stop touching [ ] to pause, and touch [ / ] to 1 / ] is touched while 2 Fast-forwarding/Fast-reversing ( IVE-W530EBT/IVE-W530E only) ] (FastDVD-Video, DivX®: • No sound is played during slow motion playback.

Selecting Folders Touch [ ] or [ ] to select the folder. 1 During playback, touch and hold [ reverse] or [ ] (fast-forward). When touched and held for more than 0.5 second, the disc is forwarded/reversed at double speed. When held for 5 more seconds or longer, the disc is forwarded/reversed at 10 times the normal speed. When held for 10 seconds or longer, the disc is forwarded/reversed at 20 times the normal speed. Repeat Playback ( IVE-W530EBT/IVE-W530E only) Use this function to play the disc's chapters, tracks, etc. repeatedly. 2 Stop touching [ ] or [ ] to return to normal DVD Video 1 Touch [ ] .

• No sound is played during fast-forwarding/fast-reversing. • For DVDs, the menu screen may reappear during fast-forwarding/ fast-reversing. • Operation may not be possible, depending on the disc. The repeat mode switches every time the button is touched. The chapter is played repeatedly. The playback returns to normal mode. Finding the Beginnings of Chapters/Files ( During playback, touch [ IVE-W530EBT/IVE-W530E only) ] or [ ] . • Display may vary depending on the connected devices. Video CD (IVE-W530EBT/IVE-W530E only) The chapter/track/file switches each time the button is touched, and playback of the selected chapter/track/file starts. :Touch this to start playback from the beginning of the following chapter, track or file.

:Touch this to start playback from the beginning of the current chapter, track or file. • Some DVDs do not have chapters. 1 During playback, touch [ ] . The repeat mode switches every time the button is touched. The track is played repeatedly.

Playback does not repeat. Supplementary explanation "Chapters" are divisions of movies or musical selections on DVDs. "Tracks" are divisions of movies or musical selections on Video CD and music CDs. • Display may vary depending on the connected devices. • The track/disc repeat modes cannot be used on Video CDs with playback control (PBC).

• For some discs it is not possible to switch the repeat mode. DivX® 1 Playing Still Frames (Pausing) ( IVE-W530EBT/IVE-W530E only) / ] . Touch [ ] after touching [P1/2]\*. The repeat mode switches every time the button is touched. \* Touch [P1/3] while playing a DivX from USB Flash Memory. The file is played repeatedly. 1 2 During playback, touch [ Touch [ / The folder is played repeatedly. ] to resume playback. The disc is played repeatedly. • No sound is played during the still frame mode.

• The image or sound may stop temporarily when playback starts from the pause mode. This is not a malfunction. 18-EN Searching by Title/Folder Number Use this function to easily find positions on the DVD using the DVD's titles. Switching the Angle On DVDs in which scenes have been filmed from multiple angles, the angle can be switched during playback. 1 2 • - During playback, touch [P1/2]\*. The function guide changes. 1 2 3 4 Touch [P1/2]\* \* while playback is stopped. The function guide appears. 1/2 \* The display differs, depending on the disc (mode). \*1 The display differs, depending on the disc

\*2 Touch [P1/3] while playing a DivX from USB Flash Memory. Touch [ANGLE]. The angle switches between the angles recorded on the disc every time the button is touched. Some time may be required for the angle to change. Depending on the disc, the angle may switch in one of two ways.

Seamless: The angle switches smoothly. Non-seamless: When the angle is switched, a still picture is displayed first, after which the angle switches.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>

Touch [10KEY]. The numeric keypad input mode screen appears. Enter a desired title by touching its title number.

See page 16 for operation of the numeric keypad. Confirm your selection by touching [Enter]. Playback will start from the title number selected. • This function cannot be used on discs on which no title numbers are recorded. • Playback starts from the beginning of the chapter/track number in the state of Pre Stop. • Some disc may not accept any operation. Switching the Audio Tracks (IVE-W530EBT/IVE-W530E only) DVDs with multiplex audio or audio languages allow switching the sound during playback. Searching Directly by Chapter, File Number Use this function to easily move to the beginnings of the chapters or files on the disc. 1 2 During playback, touch [P1/2]\*1/\*2. \*1 The display differs, depending on the disc (mode).

\*2 Touch [P2/3] while playing a DivX from USB Flash Memory. Touch [AUDIO]. The sound switches between the alternate audio tracks recorded on the disc every time the button is touched. 1 2 3 4 Touch [P1/2]\*1/\*2 in any mode other than stop mode. The function guide will appear. \*1 The display differs, depending on the disc (mode). \*2 Touch [P1/3] while playing a DivX from USB Flash Memory. Touch [10KEY]. The numeric keypad input mode screen will appear. • The alternate track selected becomes the default setting every time the power is turned on or the disc is replaced.

If the disc does not include that track, the disc's default language is selected instead. • Not all discs will allow changing the alternate audio tracks during playback. In these cases, select audio tracks from the DVDs menu. • There may be a delay before the selected alternate track begins to play. Touch and enter the chapter or track number you want to play.

See page 16 for operation of the numeric keypad. Video CDs (IVE-W530EBT/IVE-W530E only) 1 2 During playback, touch [P1/2]. The function guide changes. Touch [Enter] to confirm your selection. Playback will start from the selected chapter or track.

Touch [AUDIO]. The left and right channels will be output as shown, each time the button is touched. Audio LR Audio LL Audio RR Audio LR • This function is not available for a disc on which chapters or tracks are not stored. 19-EN Switching the Subtitles (Subtitle Language) With DVDs on which multiple subtitle languages are recorded, the subtitle language can be switched during playback; moreover, subtitles can be hidden. About DivX DivX® is a codec (software) programme to compress moving images while maintaining image quality using a highly advanced encoding. 1 2 During playback, touch [P1/2]\*1/\*2. The function guide changes. \*1 The display differs, depending on the disc (mode). \*2 Touch [P2/3] while playing a DivX from USB Flash Memory. • Official DivX® Certified product • Plays all versions of DivX® video (including DivX® 5) with standard playback of DivX® media files • DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified® to play DivX® video, including premium content. The unit can play back CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/ DVD+RW discs and USB Flash Memory that are recorded in the DivX® mode with extension "avi", "divx" or "div". Touch [SUBT.]. Touching this button repeatedly selects sequentially the subtitle languages recorded on the disc, and then turns the subtitles OFF. The optimum size for DivX® disc playback is as follows: Screen Size: 32 to 720 pixel (horizontal) × 32 to 576 pixel (vertical) • There may be a delay before the selected subtitle appears. • Not all discs will allow changing the subtitles during playback. In these cases, select subtitles from the DVDs menu. • The subtitle language selected becomes the default setting every time the power is turned on or the disc is replaced. If the disc does not include that language, the disc's default language is selected instead.

However, the subtitle language may differ depending on the disc. • For some discs, the subtitles will be displayed even when this is set to OFF. However, the subtitle language may differ depending on the disc. With an aspect ratio other than 16:9, black bars may be displayed on the left and right sides, or at the top and bottom of the screen. Image bit rate: "Peak 8 Mbps" Home Theatre Profile supported The following audio recording systems are supported.

MPEG1 Layer III 32 to 320 kbps MPEG2 Layer III 8 to 160 kbps MPEG2.5 Layer III 8 to 160 kbps Switching from the disc menu For some discs, the audio language, angle and subtitles can be switched from the disc menu. ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.

com for more information and software tools to convert your files into DivX videos. 1 2 Touch [MENU] or [TOP MENU] to display the menu. Select an item to confirm it. See "If a menu screen appears" on page 16. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. 20-EN Other Useful Features Adjusting the Audio Setting the Treble Control You can change the Treble Frequency emphasis to create your own tonal preference.

Touch the title bar of Treble to display the Treble adjusting screen. • Adjustment cannot be performed when Defeat is set to ON. Setting the Treble level You can emphasise the treble frequency. Touch [ ] or [ ] of Level to select the desired treble level. Setting range: -7 to +7 • You can adjust this setting by pressing and holding Rotary encoder (AUDIO) directly. 1 2 Touch [ ]. The SETUP selection screen is displayed. Touch the title bar of Audio Setup. The display changes to the AUDIO setup screen. Setting the Treble Centre Frequency The displayed treble frequency is emphasised.

Touch [ ] or [ ] of Freq. to select the desired treble centre frequency. Setting range: 10 kHz, 12.5 kHz, 15 kHz, 17.5 kHz • The treble level settings will be individually memorized for each source (FM, AM, CD, etc.

) until the setting is changed. The Treble frequency settings adjusted for one source are effective for all other sources (FM, AM, CD, etc.). • The function is inoperable when Defeat is set to ON. Display Example for Audio Adjustment Screen Adjusting Balance/Fader • • • • Touching [ ] will return to the previous display.

Scroll the list one line at a time by touching [ ] or [ ]. Scroll the list one page at a time by touching [ ] or [ ]. Touching [Exit] will change to the main source screen. Touch the title bar of Balance/Fader. The display changes to the Balance/Fader adjusting screen.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)

<http://yourpdfguides.com/dref/5199439>

Display Example for Balance/Fader Screen Setting the Bass Control You can change the Bass Frequency emphasis to create your own tonal preference. Touch the title bar of Bass to display the Bass adjusting screen. • Adjustment cannot be performed when Defeat is set to ON. Setting the Bass level You can emphasise or weaken the bass frequency. Touch [ ] or [ ] of Level to select the desired bass level.

Setting range: -7 to +7 • You can adjust this setting by pressing and holding Rotary encoder (AUDIO) directly. A Adjusting the Fader Setting the Bass Centre Frequency The displayed bass frequency is emphasised. Touch [ ] or [ ] of Freq. to select the desired bass centre frequency. Setting range: 60 Hz, 80 Hz, 100 Hz, 200 Hz Touch [F] or [R] to adjust the volume of the front and rear speakers. Setting range: F15 to R15 B Adjusting the Balance Setting the Bass Bandwidth Changes the boosted bass bandwidth to wide or narrow. A wider setting will boost a wide range of frequencies above and below the centre frequency. A narrower setting will boost only frequencies near the centre frequency. Touch [ ] or [ ] of Q to select the desired bass band width. Setting range: 1, 1.

25, 1.5, 2 • The bass level settings will be individually memorized for each source (FM, AM, CD, etc.) until the setting is changed. The bass frequency and bass band width settings adjusted for one source are effective for all other sources (FM, AM, CD, etc.).

• The function is inoperable when Defeat is set to ON. Touch [L] or [R] to adjust the sound volume of the left and right speakers. Setting range: L15 to R15 C Adjusting the Balance/Fader Directly ] to a desired setting. Touch and move [ Or touch a desired setting range, and [ ] will move to that location. Touch [L] or [R] of Balance and [F] or [R] of Fader for fine-tuning.

Subwoofer On and Off Touch [ ] or [ ] of Subwoofer to set to ON or OFF. OFF: ON: Subwoofer output is off. Subwoofer output is on. 21-EN Adjusting the Subwoofer Level When ON is set in "Subwoofer On and Off", the item can be adjusted. 1 Touch the title bar of Subwoofer. The display changes to the Subwoofer Adjusting screen. 2 Touch [ ] or [ ] of Level to adjust the subwoofer output. Setting range: 0 to 15 • You can adjust this setting by pressing and holding Rotary encoder (AUDIO) directly. Display Example for Search Screen Setting the Subwoofer System When ON is set in "Subwoofer On and Off", the item can be adjusted. 1 Touch the title bar of Subwoofer.

The display changes to the Subwoofer Adjusting screen. 2 Touch [ ] or [ ] of System to select to System 1 or System 2. System 1: Subwoofer level changes according to the main volume setting. System 2: Subwoofer level change is different from the main volume setting. For example, even at low volume settings, the subwoofer is still audible. Adjusting Nav. Mix Level Touch [ ] or [ ] of Nav. Mix Level to adjust the volume of navigation interruption. Setting range: 0 to 15 • This adjustment becomes available when Nav. Mix is turned ON in "Setting the Navigation Interruption" (page 31).

Select directly by touching [ ], and its track (or folder/file) is played back. is displayed if there is a hierarchical list. Scroll the list one line at a time by touching [ ] or [ ]. Scroll the list one page at a time by touching [ ] or [ ]. Touch [ ] to return to the previous list screen.

Touching [Exit] will turn off the search screen, and return to previous main screen. Internal CD player mode 1 The track list\* screen appears. \* If the CD is text compatible only. 2 Touch [ ] of a desired track text\*. The selected track will be played back.

• "TRACK" is displayed in the track text list if there is no text on the disc. Adjusting Highpass Filter When Defeat is set to OFF, touch the title bar of H.P.F. to adjust screen. Touch [ ] or [ ] of Front H.P.F. to adjust the front speaker. Setting range: OFF, 60 Hz, 80 Hz, 100 Hz Touch [ ] or [ ] of Rear H.

P.F. to adjust the rear speaker. Internal MP3/WMA/AAC/DivX® Player mode 1 The folder list screen appears. Select a desired folder and then touch the title bar. ( appears only when a file is present in the selected folder.) The file list screen is displayed. • Touch [ ] to play back the folder directly. Setting range: OFF, 60 Hz, 80 Hz, 100 Hz • Select OFF when no adjustment is required. Turning Defeat ON or OFF Touch [ ] or [ ] of Defeat to set to ON or OFF.

2 Touch [ ] of a desired file name. The selected file will be played back. Search Function Rear Selection Function The rear entertainment function independently routes different sources to the front and the rear inside a car. For example, while listening to the radio or other audio source in the front, DVD can be enjoyed in the rear with the optional rear monitor and headphones. 1 Touch [ ] on the function guide while in the CD or MP3/WMA/AAC or DivX® mode.

The search list screen is displayed. Select a desired track or folder Touch [ ] for direct playback. When a hierarchical list is prepared, will be displayed. Touch the title bar to display the respective hierarchy list screens. 1 2 Press SOURCE/.

The SOURCE selection screen is displayed. Touch [Rear]. Rear Select display appears. • This function cannot be used when "Setting the Picture/Sound Output" (page 32) is set to OFF in the System Setup. • If [Main] on the Rear Select screen is touched, the screen changes to the main source screen. 22-EN 3 Touch the desired source such as visual (auxiliary input, built-in DVD, etc.) to select. • Touch [Off] to cancel the rear entertainment function. • When the AUX1 IN is set to OFF and AUX2 IN is set to iPod Video, the AUX source is not displayed. Refer to "Setting the AUX Mode" (page 32).

• Some sources such as DVB-T (TUE-T250DV), etc. can be displayed on the rear monitor only when they are the same as the main source. Switching the Visual Source Only (Simultaneous Function) You can watch the video portion of another source while listening to the current source. 1 2 Touch [V.Sel]. The VISUAL selection screen appears. Switching Display Modes While your vehicle is parked, touch [WIDE] on the visual source screen. Each touch changes the display modes as follows: Mode 1 (WIDE) Mode 2 (CINEMA) Mode 3 (NORMAL) Mode 1 (WIDE) Touch desired visual source. The visual source is switched to the selected one. Cancelling the Simultaneous Function 1 2 Touch [V.

Sel]. Touch [Normal]. The simultaneous function is cancelled. In Mode 1 (Wide), the monitor displays a normal picture wider to fit in a wide-screen monitor by evenly stretching out the picture horizontally. • To apply the setting, set to V.

Sel in "Setting the VISUAL Button" (page 27). • The simultaneous function cannot be used when the Audio source is in the navigation mode. When Navi is set in "Setting the VISUAL Button" (page 27), only the navigation screen can be recalled. • When the AUX1 IN is set to OFF and AUX2 IN is set to iPod Video, the AUX source is not displayed.



[You're reading an excerpt. Click here to read official ALPINE IVE-W530E user guide](http://yourpdfguides.com/dref/5199439)  
<http://yourpdfguides.com/dref/5199439>