



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE KCE-150V. You'll find the answers to all your questions on the ALPINE KCE-150V in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ALPINE KCE-150V User guide ALPINE KCE-150V Operating instructions ALPINE KCE-150V Instructions for use ALPINE KCE-150V Instruction manual ALPINE KCE-150V

ALPINE KCE-150V RGB Composite Converter

Points to Observe for Safe Usage

Points à respecter pour une utilisation sûre

Puntos que debe respetar para un uso seguro

Warning / **Avertissement** / **Advertencia**

Caution / **Attention** / **Precaución**

Installation

Connections

ACC power lead (Red)

Ground lead (Black)

To Audio Output Terminal (R)

To Video Input Terminal

To Audio Input Terminal (L)

To Video Output Terminal

To Audio Output Terminal (L)

To Video Output Terminal

Conducteur de courant ACC (Rouge)

Conducteur de terre (Noir)

À la borne de sortie audio (R)

À la borne de sortie vidéo

À la borne de sortie audio (gauche)

À la borne de sortie vidéo

À la borne de sortie audio (gauche)

À la borne de sortie vidéo

Conductor de alimentación ACC (Rojos)

Conductor de conexión a tierra (Negro)

Al terminal de salida audio (derecha)

Al terminal de salida vídeo

Al terminal de salida audio (izquierda)

Al terminal de salida vídeo

Al terminal de salida audio (izquierda)

Al terminal de salida vídeo

Conducteur de courant ACC (Rouge)

Conducteur de terre (Noir)

À la borne de sortie audio (R)

À la borne de sortie vidéo

À la borne de sortie audio (gauche)

À la borne de sortie vidéo

À la borne de sortie audio (gauche)

À la borne de sortie vidéo

Conductor de alimentación ACC (Rojos)

Conductor de conexión a tierra (Negro)

Al terminal de salida audio (derecha)

Al terminal de salida vídeo

Al terminal de salida audio (izquierda)

Al terminal de salida vídeo

Al terminal de salida audio (izquierda)

Al terminal de salida vídeo



[You're reading an excerpt. Click here to read official ALPINE KCE-150V user guide](http://yourpdfguides.com/dref/5199455)
<http://yourpdfguides.com/dref/5199455>

Manual abstract:

Here is what these pictorial displays mean. Understanding them is important for reading this manual. Meaning of displays This label is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions will result in severe injury or death. This label is intended to alert the user to the presence of important operating instructions. Failure to heed the instructions can result in injury or material damage. KCE-150V RGB/Composite Converter • OWNER'S MANUAL Please read before using this equipment. Doing so may lead to accident, fire or electric shock. USE ONLY IN VEHICLES WITH A 12 VOLT NEGATIVE (–) GROUND. Check with your dealer if you are not sure.

Doing so may obstruct forward vision or hamper movement. hALT USE IMMEDIATELY IF A PROBLEM APPEARS. @@@@Failure to do so may cause failure of unit or vehicle. hAVE THE WIRING AND INSTALLATION DONE BY EXPERTS. @@@@do NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

@@@@@@@@ 2. Attach the exposed adhesive side to the underside of the Unit, in a central location. Do not cover the serial number. 3. Make sure the mounting location is clean, dry and free from contaminants.

4. Remove the protective strip from the other side of the Velcro™ pad. 5. Press the unit onto its mounting location. 2 Ground lead (Black) Connect the lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided. 3 To Audio Output Terminal (R) POWR SUPPLY R AUDIO L TUNER INPUT TUNER RGB / COMPOSITE CONVERTER KCE-150V VIDEO INPUT VIDEO (MONO) L AUDIO R VIDEO VIDEO OUTPUT L AUDIO R REMOTE Remote control sensor/ Capteur de l'émetteur de télécommande/ Sensor de control remoto/ Fernbedienungssensor/ Sensore del telecomando/ Fjärrkontrollsensor/ 4 To Audio Output Terminal (L) 5 Remote Control Lead (White/Brown) 6 To Audio Input Terminal (R) 7 To Audio Input Terminal (L) 55 6 7 (Sold separately) (Vendue séparément) (Vendido separadamente) (Einzeln zu beziehen) (Venduto separatamente) (Säljs separat) 8 To Video Input Terminal CVA-1000R/ CVA-1000E 9 To Audio Output Terminal (R) p To Audio Output Terminal (L) q To Video Output Terminal 8 9 p q VCR CVA-1000R CVA-1000E 5 CVA-1000R: CVA-1000E: 55 Please read the Owner's Manuals of the products connected also. @@@@.



[You're reading an excerpt. Click here to read official ALPINE KCE-150V user guide](http://yourpdfguides.com/dref/5199455)

<http://yourpdfguides.com/dref/5199455>