



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE RUE-4202. You'll find the answers to all your questions on the ALPINE RUE-4202 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ALPINE RUE-4202 User guide ALPINE RUE-4202 Operating instructions ALPINE RUE-4202 Instructions for use ALPINE RUE-4202 Instruction manual ALPINE RUE-4202




RUE-4202

Remote Control Unit

Owner's Manual

Controls on Remote Control

- ① **Source Button**
Press to select the audio source.
- ② **Volume Adjustment Buttons**
To increase the volume level:
Press the [V] button
To decrease the volume level:
Press the [V] button
- ③ **▲ Button**
Radio mode: Pressing the button will select, in ascending order, stations programmed into the radio's presets as shown below.
[1] → [2] ... [6]
CD Changer mode: DISC Select (UP) Button
Press the button to select a disc in ascending order.
MP3/WMA mode: Folder Select (UP) button. Press this button to select the folder.
MP3 compatible CD changer mode (while playing back MP3):
Folder Select (UP) / DISC Select (UP) button
Press this button to select a folder in ascending order.
Press and hold this button to select a disc in ascending order.
Tape mode: Pressing this button enters the Program Sensor Up mode. This allows for music selection towards the end of the tape.
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC. button.
- ④ **◀ Button**
Radio mode: SEEK (DN) Button
CD/CD changer mode: Press the button to go back to the beginning of the current track.
Tape mode: REW Button
- ⑤ **▶/II Button**
Press the button to switch between the Play and Pause modes for CD or MD and Tape.
- ⑥ **Audio Processor Button**
Each press of the button changes the audio processor mode.
Press ▲ or ▼ button to perform setting / adjustment.

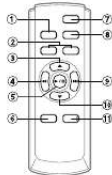

- ⑦ **Power Button**
Press the button to turn the power on/off.
 - ⑧ **Band Button**
Radio mode: BAND Button
Changer mode: BAND Button
Switches channels (when a Multi-Changer Switching device is connected).
Tape mode:
Press the button to change between the A and B side of the tape.
 - ⑨ **▶/II Button**
Radio mode: SEEK (UP) Button
CD/CD changer mode: Press the button to advance to the beginning of the next track.
Tape mode: FF Button
 - ⑩ **▼ Button**
Radio mode: Pressing the button will select, in descending order, stations programmed into the radio's presets as shown below.
[6] → [5] ... [1]
CD Changer mode: DISC Select (DN) Button
Press the button to select a disc in descending order.
MP3/WMA mode: Press the Folder Select (DN) button. Press this button to select the folder.
MP3 compatible CD changer mode (while playing back MP3):
Folder Select (DN) / DISC Select (DN) button
Press and hold this button to select a disc in descending order.
Tape mode: Pressing this button enters the Program Sensor Down mode. This allows for music selection towards the beginning of the tape.
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC. button.
 - ⑪ **Mute Button**
• Press the button to lower the volume by 20 dB instantly. Press the button again to cancel.
• Press the button for at least 2 seconds to raise the monitor. Press the button again to lower the monitor. (Head unit with Monitor Display, etc.)
- * Depending on the device you are using, you cannot operate or may need to operate differently some devices on the remote control.
For details, refer to the Owner's Manual of the device you purchased.

Handling Precautions

Do not drop or apply shock to the unit. It may get permanently damaged.
Keep the unit away from water and moisture, direct sun and heat, and excessive dust.
Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.

Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.
Do not operate this unit in a manner that could distract you from driving safety.

Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.

- 1 **Opening the battery cover.**
Slide out the battery cover while firmly pressing the direction of arrow.
- 2 **Replacing the battery.**
Put the batteries in the case observing the polarities as illustrated.
- 3 **Closing the cover.**
Push the cover as illustrated until a click is heard.



In Case of Difficulty

Problem	Cause	Solution
Remove Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit.	Point the remote control directly toward your head unit.

Specifications

Battery Type	AAA sized dry batteries
Battery Quantity	2
Dimensions (W x H x D)	42 x 121 x 22mm (1-21/32" x 4-25/32" x 7/8")
Weight (without battery)	50g (1.8 oz)
Accessory	Remote Control Unit Holder



ALPINE ELECTRONICS MARKETING, INC.
1-1-8 Nishi-Gokiso,
Shinagawa-ku,
Tokyo 141-0031, Japan
Phone 03-5496-8231

ALPINE ELECTRONICS OF AMERICA, INC.
19140 Glenhurst Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
777 Superfield Road, Toronto,
Ontario M3J 2M6, Canada
Phone 1-800-ALPINE-1 (1-800-257-4631)

DONGGUAN GAOCI PRINTING CO., LTD
YANG WU NO.2 IND. DISTRICT DALING SHAN TOWN
DONG GUAN CITY GUANG DONG CHINA

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
161-165 Pineson Highway, Helmon
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH
Frankfurter Ring 117,
89067 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fleetchamsted Highway, Coventry CV4 9TW,
U.K.
Phone 0870-33 33 703

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 388 101 280)
98, Rue de la Belle Étoile, Z.I. Parc Nord II,
B.P. 50016, 93945 Rosny Charles de Gaulle
Cedex, France
Phone 01-48-30-989

ALPINE ITALIA S.p.A.
Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Garmara 36, Pabellón 32
01013 Móstoles (Alcala) AP DO 133, Spain
Phone 945-283389

68-0412320-A
Printed in China (V)



[You're reading an excerpt. Click here to read official ALPINE RUE-4202 user guide](http://yourpdfguides.com/dref/1080456)
<http://yourpdfguides.com/dref/1080456>

Manual abstract:

@@ Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water. Do not operate this unit in a manner that could distract you from driving safety. Press the button to call the external audio processor mode when the external audio processor is connected. Applicable battery: Use two "AAA" sized dry batteries or equivalent. @@@@This allows for music selection towards the end of the tape. @@@@Push the cover as illustrated until a click is heard. Power Button Press the button to turn the power on/off. @@@@@This allows for music selection towards the beginning of the tape. @@Press the button for at least 2 seconds to raise the monitor. Press the button again to lower the monitor.

Depending on the device you are using, you cannot operate or may need to operate differently some devices on the remote control. Slide out the battery cover while firmly pressing the direction of arrow. Replace the battery with a new one. @@.



[You're reading an excerpt. Click here to read official ALPINE RUE-4202 user guide](http://yourpdfguides.com/dref/1080456)
<http://yourpdfguides.com/dref/1080456>