




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ALPINE TUE-T012. You'll find the answers to all your questions on the ALPINE TUE-T012 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ALPINE TUE-T012
User guide ALPINE TUE-T012
Operating instructions ALPINE TUE-T012
Instructions for use ALPINE TUE-T012
Instruction manual ALPINE TUE-T012

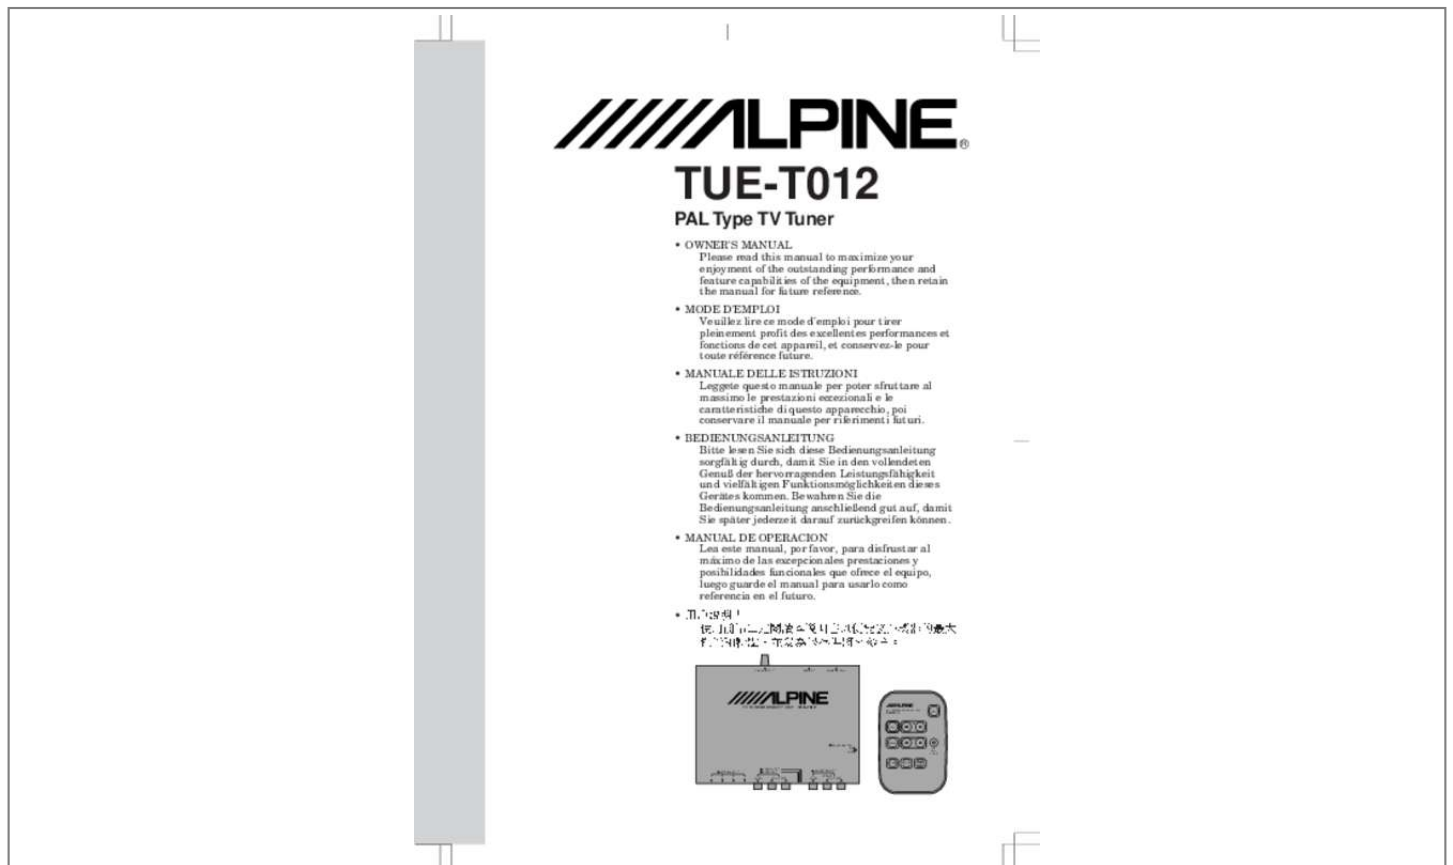

[You're reading an excerpt. Click here to read official ALPINE TUE-T012 user guide](http://yourpdfguides.com/dref/5199585)

<http://yourpdfguides.com/dref/5199585>

Manual abstract:

VIDEO AUTO VIDEO OUTPUT VIDEO INPUT 4 VIDEO L AUDIO R NAVIGATION INPUT VIDEO (MONO) L AUDIO R MANUAL TRAVEL ANTENNA INPUT 1 2 3 Precautions WARNING The exclamation point within an equilateral triangle and "WARNING" are intended to alert the user to the presence of important operating instructions. USE THE CORRECT AMPERE RATING II punto esclamativo all'interno di un triangolo WHEN REPLACING FUSES Replace fuses only with fuses of the same rated equilatero e la scritta "AVVERTIMENTO" indicano all'utilizzatore la presenza di importanti ampere. HALT USE IMMEDIATELY IF A PROBLEM APPEARS When problems appear, stop using the system immediately and contact the dealer from whom you purchased the equipment. Some problems which may warrant immediate attention include a lack of sound, noxious odors or smoke being emitted from the unit, or foreign objects dropped inside the unit. 3 Precautions CAUTION The exclamation point within an equilateral triangle and "CAUTION" are intended to alert the user to the presence of important operating instructions. English DO NOT RAISE THE VOLUME EXCESSIVELY Keep the volume at a level where you can still hear outside noises while driving. Driving while unable to hear outside sounds could cause an accident. DO NOT USE THIS EQUIPMENT OUTSIDE THE VEHICLE Do not use this equipment for purposes other than those listed for a vehicle. INSERT WITH THE CORRECT BATTERY POLARITY Do not replace with other than specified battery. When inserting the battery, be sure to observe proper polarity (+ and -) as instructed. @@@@Return it to your Alpine dealer or the nearest Alpine Service Station for servicing. The monitor power is turned on. pWR Press the PWR button again. The monitor power is turned off. note: q On-screen display Operation contents are displayed. The contents automatically disappear after about 3 seconds. □ Contents displayed on the screen may remain, this is a residual image effect peculiar to the LCD and not failure. □ The screen may become somewhat white when used under cold condition. □ Please understand that an extremely few number of pixels may lack or turn on continuously, though the LCD panel is made with very high precision technology. 11 Basic Operation Screen Display during Cruising English 1 14 PICTURE OFF FOR YOUR SAFETY AUTO This unit is controlled in connection with the parking brake for your safety. • When the parking brake is released (your car is running), a screen shown at right will appear. (running mode) • When the parking brake is locked (your car is in stop), a TV picture will appear. The mode is switched each time the button is pressed. Notes: Navigation mode • This is for the navigation connection for the future. 13 Basic Operation English Setting Channel Bandwidth of Your Country This operation registers the channel bandwidth by selecting your country on the screen. 1 2 Press the CALL button for more than 2 seconds. CALL CH Select the country name by pressing the CH (or) button. Notes: • Pressing the CH (or) button continuously changes the country names successively. □ The country name at the center is the country name currently selected. Notes: • Setting for this function can be made in the parking mode. 15 Basic Operation Adjusting the Screen English Brightness, color density and tint of the screen can be adjusted. Make these adjustments with the color control SW set to "ON". 1 BRIGHT MODE Press the MODE button. The mode will be changed each time the button is pressed and displayed on the screen. COLOR TINT 2 BRIGHT Screen display/Affichage d'écran/ Display dello schermo - BRIGHT + Adjust by pressing the BRIGHT button (/) while the mode is being displayed. Notes: • The BRIGHT adjustment can be made by directly pressing the BRIGHT button (/) without performing the step 1. □ When the color control SW is changed from "OFF" to "ON", make the TINT adjustment again. □ When the RGB connection is made in the Navigation mode, only the BRIGHT adjustment can be made. □ The TINT adjustment can be made in the Navigation mode when a NTSC system navigation is connected to the RCA jacks. 17 TV Operation Using Auto Preset English By searching channels from 2 to 69 automatically and memorizes all the channels which can be received. In cruising and traveling, the local channels can be set by one touch. @@1 AUTO SEEK Press the AUTO button for at least 2 seconds. SEEK will appear on the display and the auto preset operation starts. @@@@The channels over the 16 are not displayed but memorized. @@@@The unit returns to the previous record status. @@) The auto mode will be set. @@@@1 TRAVEL SEEK Press the TRAVEL button. The travel search will start. tRAVEL 2 After completion of the travel search. @@Note: If no station receivable exist, the travel search may not stop. @@@@The channel display disappears and the channel is selected. @@@@In such a case, one of following three ways can be used. 1 TRAVEL KEY SEEK START After a while, TRAVEL KEY → will appear on the screen. 2 Select one of three ways. Waiting (for automatic resumption) In case where the signal is interrupted temporarily in a tunnel, etc., the unit automatically returns to the previous condition when the signal is received again.) SEEK Set the auto preset again When you want to continue for seeing the picture with the auto preset mode, set the auto preset again.) 27 TV Operation Confirming Channel (Channel Call) English 1 Channel selection mode CALL Press the CALL button The mode is switched each time you press the button. Channel memorization mode 12 Channel selection mode Displays the channel currently selected and the function (mode) operated for about 3 seconds. 29 TV Operation English Audio Interruption Function This function allows the sound guide of the ALPINE navigation system or TV sound to output an ALPINE head unit. 1 2 ON mode MODE Press the MODE button for more than 2 seconds. BRIGHT Select a mode with the BRIGHT button (within 5 seconds. Or) ON mode: Outputs the TV sound or the navigation sound guide to the head unit. NAVIGATION mode OFF mode NAVIGATION mode: Outputs the navigation sound guide to the head unit. 3 Press the MODE button. MODE Notes: • Setting of this function can be made when the AV input/output select switch is in the OUT position with the parking mode selected. 3 Press the MODE button. □ Perform each operation within 5 seconds. 31 Remote Control Handling Precautions English Do not drop or apply shock to the unit. it may get permanently damaged. Keep the unit away from water and moisture, direct sun and heat, and excessive dust. Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning. Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water. Do not operate this unit in a manner that could distract you from driving safety.



[You're reading an excerpt. Click here to read official ALPINE TUE-T012 user guide](http://yourpdfguides.com/dref/5199585)
<http://yourpdfguides.com/dref/5199585>

Keep the remote control holder away from a magnetic card, etc.

, as a magnet is used for the holder. English 1 2 Opening the battery case 1 Place the remote upside down on a flat, level surface. Looking at the back of the remote, grasp the battery holder at the bottom of the unit between your forefinger and thumb. Insert a pointed object into the left side of the elongated hole.

Slide the pointed object to the right (as indicated by the arrow) while at the same time pulling on the battery holder.

2 Pull the battery holder gently out with your thumb and forefinger. Replacing the battery Put the battery in the case with the (+) indication upward as shown in the illustration. Closing the case Push the battery holder back into the remote until a click is heard. @@This guide will help you isolate the problem if the unit is at fault. @@@@ □ Start engine or place the key in ACC position. □ Operate remote control so that it faces the sensor. Main power switch of the monitor is not in STANDBY. Out of service area of station being received. □ Check by moving car in other location. @@ – Move car to a location free from interference.

*Double or triple pictures or rolling picture appear. □ Signals are reflected by mountain or buildings near car. Cause and Solution • English High frequency signals from TV are received by car radio. □ Keep away antenna leads and other wire leads from TV. Audio interruption function does not work in combination with navigation system. □ Move the car to other location and check it again. □ Move the car to other location to use it. □ If you want to use in that location, turn the TV antenna's booster switch to off position. * The fluorescent tube replacement is not free of charge even within the warranty period, for the tube is an article of consumption. About 2m (from remote control sensor), within 30 degrees from each left and right side Dimensions (W x H x D)/Dimensioni (L x H x P)/ Dimensioni (L x H x P) .
60mm (2-3/8") x 90m.*



[You're reading an excerpt. Click here to read official ALPINE TUE-T012 user guide](http://yourpdfguides.com/dref/5199585)
<http://yourpdfguides.com/dref/5199585>