



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for ASROCK 775I65G. You'll find the answers to all your questions on the ASROCK 775I65G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual ASROCK 775I65G
User guide ASROCK 775I65G
Operating instructions ASROCK 775I65G
Instructions for use ASROCK 775I65G
Instruction manual ASROCK 775I65G



Copyright Notice:

No part of this installation guide may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc. Products and corporate names appearing in this guide may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this guide are furnished for informational use only and subject to change without notice, and should not be construed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this guide. With respect to the contents of this guide, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages, including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the guide or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance. *Perchlorate Material special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate

ASRock Website: <http://www.asrock.com>

Published February 2007
Copyright © 2007 ASRock INC. All rights reserved.

ASRock 775I65G Motherboard

English



[You're reading an excerpt. Click here to read official ASROCK 775I65G user guide](http://yourpdfguides.com/dref/2695609)
<http://yourpdfguides.com/dref/2695609>

These two Serial ATA (SATA) connectors support SATA data cables for internal storage devices.

Either end of the SATA data cable can be connected to the SATA hard disk or the SATA connector on the motherboard. Please connect the black end of SATA power cable to the power connector on the drive. Then connect the white end of SATA power cable to the power connector of the power supply. If the rear USB ports are not sufficient, this USB 2. This USB4_5 connector is shared with the USB 2.

0 ports 4 ,5 on ASRock I/O Plus™. When using the front panel USB ports by attaching the front panel USB cable to this connector (USB4_5), the USB ports 4,5 on ASRock I/O Plus™ will not be able to function. this header supports an optional wireless transmitting and receiving infrared module. These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card. This is an interface for the front panel audio cable that allows convenient connection and control of audio devices.

+5VA is used for audio power only, please don't connect it to any other power, such as USB. 2. HD (Azalia) audio front panel and AC'97 audio front panel have different pin-definition. Incorrect connection of the audio front panel and the front panel audio header may cause permanent damage to this motherboard. This header accommodates several system front panel functions. Please connect the chassis fan cable to this connector and match the black wire to the ground pin. @@@@Please connect an ATX power supply to this connector. @@This motherboard adopts Intel® ICH5 south bridge chipset that supports Serial ATA (SATA) hard disks. You may install SATA hard disks on this motherboard for internal storage devices. This section will guide you to install the SATA hard disks.

STEP 1: Install the SATA hard disks into the drive bays of your chassis. If you just want to install only one SATA HDD, the installation process is complete at this step. If you want to install two SATA HDDs, please continue to do the following steps. Before you install O.



[You're reading an excerpt. Click here to read official ASROCK 775I65G user guide](http://yourpdfguides.com/dref/2695609)
<http://yourpdfguides.com/dref/2695609>