



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AUDIOBAHN AVM3102DVD. You'll find the answers to all your questions on the AUDIOBAHN AVM3102DVD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual AUDIOBAHN AVM3102DVD

User guide AUDIOBAHN AVM3102DVD

Operating instructions AUDIOBAHN AVM3102DVD

Instructions for use AUDIOBAHN AVM3102DVD

Instruction manual AUDIOBAHN AVM3102DVD

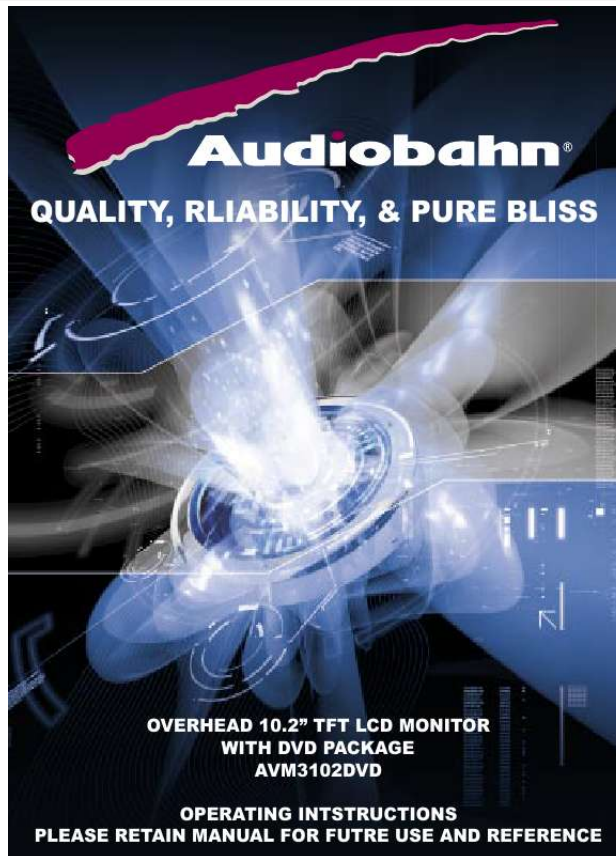

[You're reading an excerpt. Click here to read official AUDIOBAHN AVM3102DVD user guide](http://yourpdfguides.com/dref/309576)
<http://yourpdfguides.com/dref/309576>

Manual abstract:

2" TFT LCD MONITOR WITH DVD PACKAGE AVM3102DVD OPERATING INSTRUCTIONS PLEASE RETAIN MANUAL FOR FUTURE USE AND REFERENCE 1. This unit has an FM transmitter function. You need to adjust the frequency to correspond with the frequency you wish to tune the radio to. 2. For more details, refer to page 30. Identification of Controls Picture 1 4, 16 12 1 5 3 7 4, 16 9 10 11 15 14 12 6 2 8 13 10 Identification of Controls 1. DVD disc insert slot. 2. Play Button. (In emergency mode, Direction Left) 3.

Stop Button. (In emergency mode, Direction Right and Emergency Start) 4. @ @ 5. Eject Button. (In emergency mode, Enter Button) 6.

POWER Button 7. F.SKIP Button (In emergency mode, Direction Up) 8. R.SKIP Button (In emergency mode, Direction Down) 9.

Dome Lights - provide additional Interior illumination. 10. Three position Dome Light Switch. Auto -The dome lights will turn on automatically in this position. Off - The dome lights will not turn on in this position. On - Turns on the dome lights. 11. @ @ 12. Flip Down LCD Panel. 13.

Auxiliary A Input. 14. Auxiliary B Input. 15. Memory Card Slot 16. @ @ @ @ 2. VCD, CD Mode Press the FF () or FR () button on the remote and press again to search at faster speed. VCD(2X / 4X / 8X / 16X of normal speed.) CD(2X / 4X / 8X / 16X of normal speed.) To resume normal play, Press the PLAY button. 3. MP3 Mode Press the FF () or FR () button on the remote and press again to search at faster speed.(2X / 4X / 8X of normal speed.) To resume normal play, Press the PLAY button. CD-DA 1.

In Stop Mode, when press PROGRAM Button, Program Menu appears. 2. When the PROGRAM button is pressed, PROGRAM P00:00 is displayed on the screen. 3. Enter the number of the desired TRACK and press the ENTER button.

When the number of the desired TRACK is entered, PROGRAM PXX:YY is displayed on the screen (XX is the number of programmed tracks and YY is the last entered track number.) for example, "PROGRAM P 3: 5" indicates that a total of 3 track 8 are programmed and last track number is 5. 4. Press PLAY Button.

Then Program Play will be started. MP3 1. In Stop Mode, when press PROGRAM Button, Program Menu appears upside MP3 Menu. 2. Select the appropriate track number, using the LEFT() / RIGHT() or UP() / DOWN() button Press the ENTER button. Continuously press the appropriate numbers using Number Button, press ENTER button.

Clear Program Play 1. In Stop Mode, when press PROGRAM Button, Program Menu appears. 2. Press Program Button once again. Then Program Play will be cleared. Repeat the current track, chapter, title, or a chosen section (A-B). When playing a DVD 1. Press the REPEAT button on the remote. Repeat screen appears. 2.

Select Chapter Repeat On, Title Repeat On, Repeat Off pressing REPEAT button. 3. To return to normal play, select Repeat Off and Chapter Repeat On A-B Repeat pressing REPEAT button again. - Press REPEAT A-B button at the point where you want the repeat play to start(A). - Press REPEAT A-B button at the point where you want the repeat play to stop(B).

A chosen section (A-B) will be repeated. - To return to normal play, press REPEAT A-B button again, to select Off. Repeat A-B (A) Repeat A-B (B) Repeat A-B Cancel Note DVD repeats play by chapter or title, CD and VCD repeat play by disc or track. Depending on the disc, the Repeat function may not work. If the title or track is completed before marking the end(B), the end of title or track becomes B automatically.

@ @ @ @ - Press ENTER button. PLAY begins at selected Title/Chapter. VCD Mode - When press the GOTO button, GoTo screen appears. - Enter the numbers of Time which you want. - Then PLAY begins at selected Track. MP3 Mode - During play, MP3 screen appears. @ @ - Press ENTER button.

@ @ During play or pause mode, press the ZOOM button on the remote. 2. @ @ 3.

@ @ 4 To resume normal play, Press the ZOOM button. @ @ During play, press the Display button on the remote. - Current title, chapter number and elapsed time will be displayed. @ @ When Playing a VCD 1. During play, press the Display button on the remote. - Current elapsed, remain time will be displayed.

@ @ When Playing a CD 1. During play, press the Display button on the remote. @ @ elapsed remain total elapsed total remain Note What is a chapter?

@ @ What is a Title? A DVD may contain several different titles. @ @ @ @ 2.

Select the desired language using the SUBTITLE button again. - This function is a disc dependent. @ @ @ @ 2. Select the desired Audio type using the AUDIO button again. @ @ During play, press the TOP MENU or MENU button on the remote.

- According to disc, TOP MENU or MENU button will work. 2. @ @ 3. @ @ @ @ @ @ Press the ENTER button after moving the cursor to EXIT menu in Screen.

Using the Direction Button, move to the desired items or list in Main menu or sub-menu.

1. With the unit in Stop mode, press the SETUP button AUDIO VIDEO LANG LOCK EXIT on the remote, the SETUP menu appears. 2. Using the Direction button, select AUDIO VIDEO DIGITAL OUT DOWNMIX DYNAMIC RNG ON STEREO FULL ENTER LANG(Language) LOCK EXIT in Main Menu Set up screen 3. To return to the previous menu, using LEFT() / RIGHT() or UP() / DOWN() buttons. 1. Press the SETUP button on the remote. 2. Select the AUDIO

in Main Menu using the LEFT() / RIGHT() buttons. 3.

Select the desired item in sub-menu using the UP() / DOWN() buttons. Then the desired item's color will be changed. AUDIO VIDEO LANG LOCK EXIT 1) Digital Output 1. OFF 2. ON : Converts to Dolby Digital Bitstream(5.1CH). Select ON when using the Digital, Audio Output. DIGITAL OUT DOWNMIX DYNAMIC RNG OFF ON ENTER Audio Menu / Digital out Note : Be sure select the correct Digital Output or audio will be not heard. 2) DOWN MIX 1. LT/RT : Left/Right Speaker only.

2. STEREO : 3. OFF : 3) DYNAMIC RNG 1. FULL : 2. 7/8~1/8 : AUDIO VIDEO LANG LOCK EXIT DIGITAL OUT DOWNMIX DYNAMIC RNG LT/RT STEREO ENTER Audio Menu / Down Mix 3.

OFF : 4. Move to lists in sub-menu using the RIGHT() buttons. Select the desired item in list using ENTER button. Depending on the type of television you have, you may want to adjust the screen setting. 1.

Press the SETUP button on the remote. 2. Select the VIDEO in Main Menu using the LEFT() / RIGHT() buttons. 1) OSD LANG : Select the desired Language in Screen AUDIO VIDEO LANG LOCK EXIT 2) DISPLAY MODE : 16:9 WIDE : You can view the full 16:9 picture on your wide screen TV 4:3 PAN &

SCAN : Select this for converting size TVs when you want to see the central portion of 16:9 screen (Extreme left and right side of movie picture will be cut off.) 4:3 LETTER BOX : Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with 4:3 ratio screen. 3)

NTSC/PAL NTSC PAL AUTO : Depending on the actual DVD Video discs, select AUTO(NTSC or PAL) 4) SCREEN SAVER ON OFF OSD LANG DISPLAY

MODE NTSC/PAL SCREEN SAVER ENGLISH FRENCH GERMAN ITALIAN SWEDISH AUDIO VIDEO LANG ENTER LOCK EXIT OSD LANG DISPLAY

MODE NTSC/PAL SCREEN SAVER 16 : 9 WIDE 4 : 3 PAN & SCAN 4 : 3 LETTER BOX ENTER AUDIO VIDEO LANG LOCK EXIT OSD LANG DISPLAY

MODE NTSC/PAL SCREEN SAVER AUTO NTSC PAL ENTER Video Menu / TV Type 3.

[You're reading an excerpt. Click here to read official AUDIOBAHN](#)



[AVM3102DVD user guide](http://yourpdfguides.com/dref/309576)
<http://yourpdfguides.com/dref/309576>

Move to lists in sub-menu using the RIGHT() button. Select the desired item in list using ENTER button. Then the color of the item will be changed. Depending on the DVD, 4:3 LETTER BOX may be selected automatically instead of 4:3 PAN & SCAN and vice versa.

AUDIO VIDEO LANG LOCK EXIT AUDIO SUBTITLE DISC MENU ENGLISH FRENCH SPAMSH CHINESE JAPANESE ENTER 1. Press the SETUP button on the remote. 2. Select the LANG in Main Menu using the LEFT() / RIGHT() buttons. 3. Select the desired item in sub-menu using the UP() / DOWN() buttons. 1)Audio: Setup of the Audio Language Use the Audio preference menu to select the soundtrack language. @@@@Press the SETUP button on the remote. 2. Select the LOCK in Main Menu using the LEFT() / RIGHT() buttons.

3. Select the desired item in sub-menu using the UP() / DOWN() buttons. @@Move to the list in sub-menu using the RIGHT() button. Select the desired item in list using ENTER button. Then the color of the item will be changed.

1. Press the M.MENU Button on the remote, the PICTURE screen appears. 2. @@Picture Function Set up FM Exit 1.

Press the PIC button on the remote, the PICTURE screen appears. 2. Select the desired items in sub-menu using the UP() / DOWN() buttons. Bright Contrast Color Tint Preset 3. Adjust the level of picture using the UP() / DOWN() buttons. after moving right side of sub-menu using the LEFT() / RIGHT() or ENTER button. 4. To resume normal play, moving to EXIT menu using the UP() or the LEFT() / RIGHT() buttons, press ENTER button. BRIGHT CONTRAST COLOR TINT PRESET 80 45 45 22 PICTURE 1. Press the FUNC button on the remote, the Function screen appears.

2. Select the desired items in sub-menu using the UP() / DOWN() buttons. Wide Mode Dimmer 3. Adjust the level of picture using the UP() / DOWN() buttons. after moving right side of sub-menu using the LEFT() / R.



[You're reading an excerpt. Click here to read official AUDIOBAHN AVM3102DVD user guide](http://yourpdfguides.com/dref/309576)
<http://yourpdfguides.com/dref/309576>