



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AUDIOBAHN AW1208T. You'll find the answers to all your questions on the AUDIOBAHN AW1208T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AUDIOBAHN AW1208T
User guide AUDIOBAHN AW1208T
Operating instructions AUDIOBAHN AW1208T
Instructions for use AUDIOBAHN AW1208T
Instruction manual AUDIOBAHN AW1208T



[You're reading an excerpt. Click here to read official AUDIOBAHN AW1208T user guide](http://yourpdfguides.com/dref/348838)
<http://yourpdfguides.com/dref/348838>

Manual abstract:

Fs 35.1 Hz 28.9 Hz 28.4 Hz Qts 0.43 0.31 0.32 Qes 0.49 0.36 0.36 Qms 3.

3 2.16 2.95 Vas (Liters) 12 Liters 33 Liters 88 Liters Vas (Cu. Ft.) 0.

4 Cu. Ft. 1.2 Cu.Ft.

*3.1 Cu.Ft. Re 1.85 ohms 1.85 ohms 1.90 ohms Le 1.4 mH 1.55 mH 2.45 mH Mmd 240 Grams 239 grams 272 grams Xmax +/-20 mm +/-20 mm +/-20 mm
RMS 1000 watts 1500 Watts 2000 watts Sd 0.*

*031 M2 0.044 M2 0.075 M2 Freq. Resp. 22Hz-500Hz 20Hz-500Hz 18Hz-500Hz Efficiency 90 dB 91 dB 89 dB An EBP of less then 45 is SUGGESTED for
only a sealed box and greater then 65 for a ported box. EBP Dimensions 6 1/4" 9 1/4" 10 7/8" 0.22 Cu. Ft. 7" 11 1/8" 12 3/4" 0.27 Cu.*

Ft. @@@@Ft.) Port Size (Inches) Port Vel. (%) -3dB (Hz) Tune Freq. (Hz) Sub Disp.

(Cu. Ft.) Port Disp.(Cu. Ft.

) Total Vol. (Cu. @@Ft.) Port Size (Inches) Port Vel. (%) -3dB (Hz) Tune Freq. (Hz) Sub Disp. (Cu. Ft.) Port Disp.(Cu.

Ft.) Total Vol. (Cu. @@Ft.) Port Size (Inches) Port Vel. (%) -3dB (Hz) Tune Freq. (Hz) Sub Disp. (Cu. Ft.) Port Disp.

(Cu. Ft.) Total Vol. (Cu. @@@@An EBP of less then 45 is SUGGESTED for only a sealed box and greater then 65 for a ported box.

*EBP 50 80 52 The larger a sealed box is, the lower the sub will play, but the less power it will handle. The smaller a sealed box is, the higher the frequency
the sub will play, and the more power it will handle. Model # Sealed Minimum (Cu. Ft.) Maximum (Cu.*

@@NR = (Not Recommended) 8.



[You're reading an excerpt. Click here to read official AUDIOBAHN](#)

[AW1208T user guide](#)

<http://yourpdfguides.com/dref/348838>