




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP LT4216A. You'll find the answers to all your questions on the AYP LT4216A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AYP LT4216A
User guide AYP LT4216A
Operating instructions AYP LT4216A
Instructions for use AYP LT4216A
Instruction manual AYP LT4216A

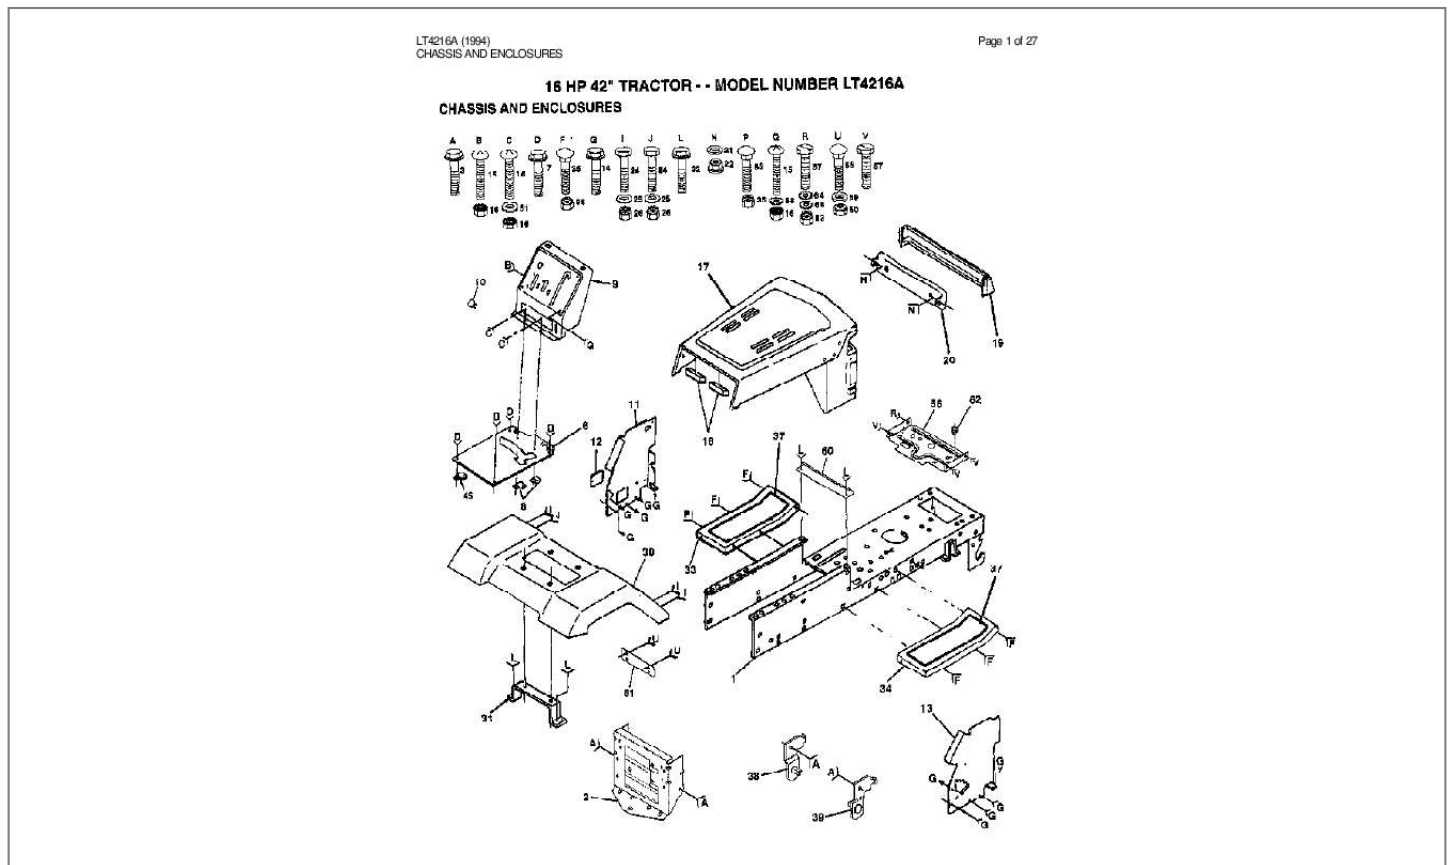

[You're reading an excerpt. Click here to read official AYP LT4216A user guide](http://yourpdfguides.com/dref/439240)
<http://yourpdfguides.com/dref/439240>

Manual abstract:

1-PC PLUG BUTTON T PANEL DASH LH COVER ACCESS SUB= 155934X010 SCREW LT SCREW NUT HOOD/GRILLE.ASM SUB= 532126938 SUB= 133954 SUB= 918132257 WASHER PM PAL NUT LT SUB= 74780612 WASHER NUT FENDER PNT BRACKET SUPT FEND SCREW SUB= 145244X500 SUB= 145243X500 BOLT SUB= 73690600 FOOTREST PAD BRACKET ASM LH BRACKET ASM RH "CLIP,INSULATOR" NUT WASHER SUB= 72110608 SUB= 74760616 SUB= 140281X431 SCREW LOCKWASHER WASHER SPACER FENDER LT PLATE EXTEN FEND SUB= 532124028 SUB= 73690500 LOCKWASHER.5/16.E BOLT D Page 2 of 27 LT4216A (1994) DECALS Page 3 of 27 LT4216A (1994) DECALS Ref # 1 3 4 5 6 8 9 10 11 13 15 16 17 18 Part Number 141901 143219 141898 141897 143216 143217 141499 136830 143222 140837 143223 143220 143303 141872 138311 143454 143455 C42 LSB42 MP42 CH208 LBD48 LC05 Qty Description DECAL INST OP DAS DECAL LOGO GRILLE DECAL CAUT FEND DECAL CLUT/BRAKE DECAL CHASSIS KGR DECAL.HD.RH.KGRO DECAL HOOD LH WIZ DECAL.V.BELT DECAL.GRILLE. KGRO DECAL BRAK PARK DECAL.GRILLE.KGRO DECAL FEND QUICK SUB= 272270 DECAL DANGER CT/F DECAL HANDLE LIFT MANUAL.O.LT4216. E MANUAL.O.LT4216.S GRASS CATCHER SNOW THROWER SUB= MP42A TIRE CHAINS SNOW BLADE WHEEL WTS. Page 4 of 27 LT4216A (1994) DRIVE Page 5 of 27 LT4216A (1994) DRIVE Ref # 1 2 3 4 5 6 8 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 Part Number 142607 110422X 123666X 12000028 121520X 17490512 141003 76020416 105701X 19151216 71040412 10040400 74780544 73800500 121520X 74780616 73800600 17490512 106933X 130804 73800600 73350600 106888X 19131316 76020412 140448 71673 130807 127275X 74760512 73800500 122424X 120183X 19211616 1572H 123674X 74760644 4470J 109070X 19131312 73800600 105706X 110812X 12000039 127783 123789X 123205X 74760624 73680600 19131316 105710X 76020412 105709X 76020412 130801 127274X 140312 19131312 Qty Description SUB= 145605 SUB= 146682 PULLEY TRANS SUB= 2267J STRAP TORQUE SCREW ROD SHIFT FEND LT PIN COTTER 1/8 WASH-SHFT PLT LT WASHER SUB= 74550412 LOCKWASHER BOLT HEX NUT STRAP TORQUE BOLT NUT SCREW KNOB T (1/2-HOLE) BRAKE ROD NUT NUT SPRING ROD LT WASHER COTTER PIN ROD PARK BRAKE PLUNGER CAP T TRANSAXLE MTG BKT "KEEPER,BELT LH T" BOLT NUT SUB= 149001 NYLON BEARING WASHER LT SUB= 2882J PULLEY. IDLER.FLAT BOLT SPACER T BELT KEEPER LT WASHER NUT "LY, BEARING" WASHER LT KLIP RING SUB= 139245 ARM IDLER RETAIN BELT SUB= 74930624 SUB= 73690600 WASHER "LINK, CLUTCH T" COTTER PIN "SPRING, RETURN LT" COTTER PIN SUB= 138255 "KEEPER,BELT RH T" KEEPER BELT CNTSP WASHER Page 6 of 27 LT4216A (1994) DRIVE Ref # 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 80 81 82 83 84 85 86 87 88 89 90 95 100 Part Number 17490612 8883R 140186 71170764 10040700 129921 74760616 19131312 73680600 134683 74760616 19132012 73680600 109502X 121749X 12000001 123583X 121748X 131487 136933 123782X 19171216 132183 73530400 71208 19212016 12000008 139964 124346X 17490612 19111216 Qty Description SCREW PEDAL COVER T PULLEY.ENGINE BOLT LOCKWASHER KEEPER.BELT.ENG.L BOLT WASHER SUB= 73690600 KEEPER BELT ENG BOLT WASHER SUB= 73690600 SPACER LT WASHER E-RING LT SQUARE KEY WASHER ARM SHIFT TRANS SHAFT ASM.SHIFT "SPRING,TORSION" WASHER TIE ROD NUT 1/4-28 BUSHING WASHER D KLIP RING SUB= 918139964 NUT SCREW WASHER M Page 7 of 27 LT4216A (1994) ELECTRICAL Page 8 of 27 LT4216A (1994) ELECTRICAL Ref # 1 2 3 4 5 6 7 8 9 10 11 12 19 20 21 22 23 24 25 26 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 70 Part Number 121265X 74760412 19091016 10040400 121264X 73220400 7697J 7603J 109596X 72240460 102476X 123198X 10090400 73350400 136850 4152J 11150400 108423X 132202 108824X 4207J 121305X 140399 140400 141226 140401 110712X 140336 17021008 104445X 108236X 109553X 140414 71110408 131563 138406 73640400 140413 Qty Description SUB= 123899X BOLT LT WASHER LOCKWASHER "CAP,BATTERY " SUB= 50675 "DRAIN TU T, BATT" "TRAY T, BATTERY" HOSE CLAMP T BOLT SUB= 150109 SUB= 146525 SUB= 10040400 NUT "HARNESS,LIGHT SOC" HEADLAMP BULB LOCKWASHER CABLE ASM. SUB= 146147 FUSE HYT CABLE T SWITCH SEAT SUB= 163088 SUB= 145774 COVER KEY SWITCH KEY MLD GEN DELTA SWITCH LT BRACKET SWITCH IN SCREW SWITCH-INTER. @@@@SRTG. BEAR. @@@@T SPACER LT SUB= 918120953X PIN T TAP SCREW SUB= 108992X WASHER LT NLA NUT.LOCK.5/16-24 SEAL OIL DANA5416 SUB= 126976X Page 25 of 27 LT4216A (1994) WHEEL AND TIRES Page 26 of 27 LT4216A (1994) WHEEL AND TIRES Ref # 1 2 3 4 5 6 7 8 9 10 11 Part Number 59192 65139 106222X 59904 106732X551 278H 9040H 106108X551 138468 7152J 104757X Qty Description VALVE CAP VALVE STEM LT SUB= 122073X TUBE.5.3/4.5/6 "RIM FRT 6" ASM" FITTING LT "FLANGE, BE.



[You're reading an excerpt. Click here to read official AYP LT4216A user guide](http://yourpdfguides.com/dref/439240)
<http://yourpdfguides.com/dref/439240>