




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP LT4218A. You'll find the answers to all your questions on the AYP LT4218A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual AYP LT4218A**  
**User guide AYP LT4218A**  
**Operating instructions AYP LT4218A**  
**Instructions for use AYP LT4218A**  
**Instruction manual AYP LT4218A**

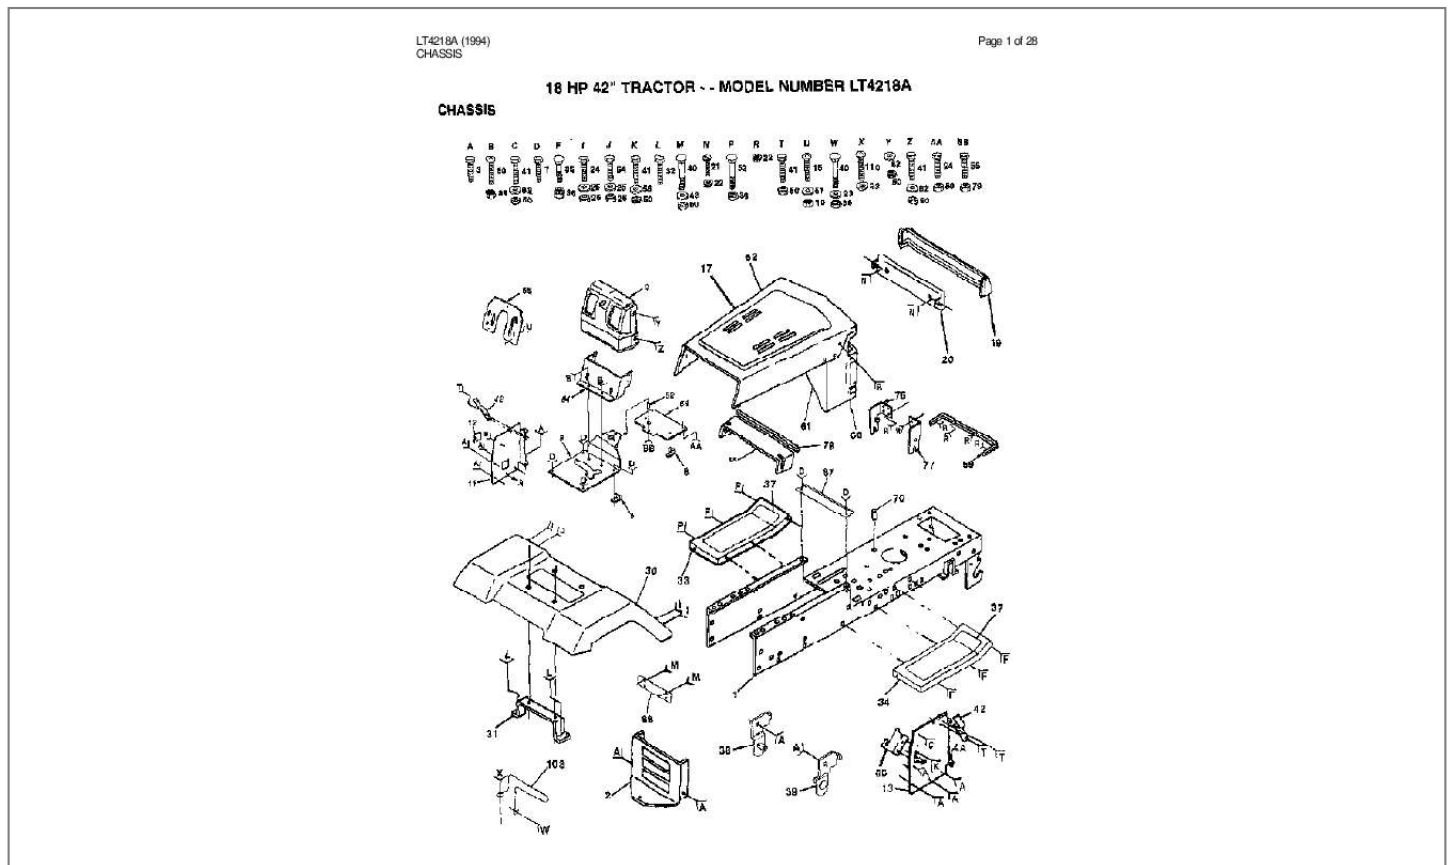

[You're reading an excerpt. Click here to read official AYP LT4218A user guide](http://yourpdfguides.com/dref/439246)  
<http://yourpdfguides.com/dref/439246>

**Manual abstract:**

DASH.LH COVER ACCESS PANEL DASH RH NOT SCREW NUT HOOD/GRILLE ASM LENS T SUB= 918132257 SCREW SPECIAL PAL NUT LT WASHER HYT SUB= 74780612 WASHER FENDER PNT BRACKET SUPT FEND SCREW SUB= 145244X500 SUB= 145243X500 BOLT SUB= 73690600 FOOTREST PAD BRACKET ASM LH BRACKET ASM RH BOLT D BOLT BRACKET.ASM.SUPT. WASHER NUT WASHER PM SPACER SUB= 72110608 SUB= 74760616 BOLT LOCKWASHER STRAP FENDER ASM GRILLE ASM WELD ASSY-PANEL SIDE PANEL SIDE LH ASM DASH LOWER PLATE DASH SILKSC "BAFFLE,HOOD" PLATE.SUPT.BATTER SUB= 9151R BRACKET.RH BRACKET.LH FOAM STRIP T NUT SCREW NUT WASHER BRACKET LT Page 2 of 28 LT4218A (1994) CHASSIS Ref # 87 88 108 110 Part Number 139977 139978 135029 17490616 Qty Description SPACER FENDER LT PLATE EXTEN FEND MUFFLER GUARD SCREW GTV Page 3 of 28 LT4218A (1994) DECALS Page 4 of 28 LT4218A (1994) DECALS Ref # 1 2 3 5 6 7 8 10 11 12 13 14 15 18 19 20 Part Number 141901 136830 143219 140837 141898 141897 143220 143214 141872 143216 143303 135429 143215 139443 139697 143221 138311 143489 143490 C42 LC05 MP42 LSB42 LBD48 CH208 Qty Description DECAL INST OP DAS DECAL.V. BELT DECAL LOGO GRILLE DECAL BRAK PARK DECAL CAUT FEND DECAL CLUT/BRAKE DECAL FEND QUICK DECAL HD RH DECAL DANGER CT/F DECAL CHASSIS KGR SUB= 272270 DECAL.ENG.272757 DECAL HD LH DECAL.ENG.272101 SUB= 272629 DECAL DECK MULCH DECAL HANDLE LIFT MANUAL.

O.LT4218A MANUAL.O.LT4218A GRASS CATCHER WHEEL WTS. @@@@SRTG.

BEAR. @@SHIFTER BOOT PUCK T SCREW TAP W/SEAL SUB= 2225J ASM KIT SHIM 4689 GEAR SPUR 15 TTH WASHER T KEY WOODRUFF-DANA SUB= 167148 SUB= 95-8060-6F "RING,RETAINING LT" "CHAIN,24 PTCH LT" BEARING.FLNG.5510 GEAR SPUR 14 TTH COLLAR CLUTCH KIT.ASM.CLUTCH KY SUB= 148268 SHAFT INTERM DANA WOODRUFF KEY "RING,RETAINING LT" SPROCKET 18T T SPACER YT GEAR SPUR 37 TTH GEAR SPUR 35 TTH SUB= 124644X GEAR 25T LT GEAR SPUR 22 TT SPUR GEAR 19T "WASHER, PLAIN LT" WASHER 025 SPACER ASSM GEAR COMB SHAFT IDLER SPACER T SPROCKET 9T LT SUB= 167148 ASM KIT SHIM SHAFT T "SCREW, TAPPING LT" GEAR SPUR 12 TTH SUB= 124641X "GEAR, SPUR 25T LT" GEAR 28T T "GEAR, SPUR 31T LT" WASHER 060 NEOPRENE WASHER WASHER 031 SUB= 154658 GEAR LT "RING,RETAINING LT" SUB= 120478X SHAFT T Page 25 of 28 LT4218A (1994) TRANSAXLE Ref # 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 Part Number 106592X 120475X 142680 120961X 7294J 108989X 120953X 120954X 134799 138244 108996X 120956X 73810500 143045 120416X Qty Description "GEAR,MITER 15T YT" SUB= 154659 HOUSING LOWER TNS PUCK T BRAKE DISC. T SPACER LT SUB= 918120953X PIN T TA.



[You're reading an excerpt. Click here to read official AYP LT4218A user guide](#)

<http://yourpdfguides.com/dref/439246>