





Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP QP17H42STA. You'll find the answers to all your questions on the AYP QP17H42STA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AYP QP17H42STA
User guide AYP QP17H42STA
Operating instructions AYP QP17H42STA
Instructions for use AYP QP17H42STA
Instruction manual AYP QP17H42STA

SCHEMATIC

TRACTOR -- MODEL NUMBER QP17H42STA

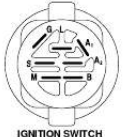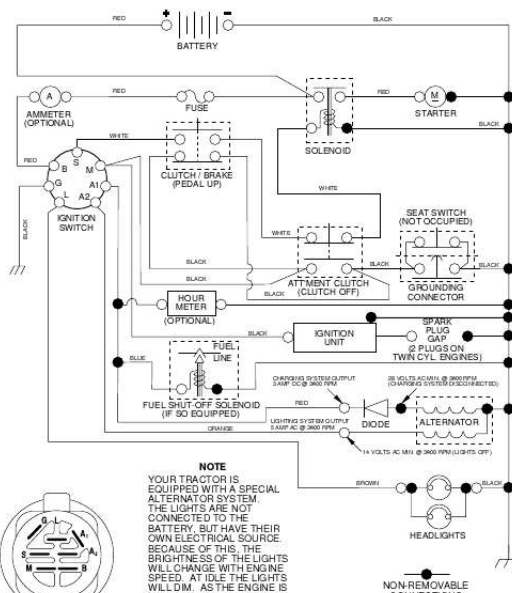

POSITION	CIRCUIT	"MAKE"
OFF	M-G-A1	NONE
RUN/NEUTRAL	B-A1	A2-L
RUN	B-A1	NONE
START	B-S-A1	NONE

NOTE
YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.



[You're reading an excerpt. Click here to read official AYP QP17H42STA user guide](http://yourpdfguides.com/dref/439981)
<http://yourpdfguides.com/dref/439981>

49 Wrk Lg Nut Hex Jam 3/8-16 Unc Knob Inf 3/8-16 Unc Blk W/sym Trunion Infin Height Bearing Pvt Lift Spherical Nut Crownlock 3/8 - 24 Pointer Height
Indicator Plug Hole Blk 1.485/1.515 Dia.
Screw 5/16-18 x 1 Washer 11/32 x 1-1/2 10 Ga. Indicator Height STLT Nut Hex Flange Lock Nut PUSh Phos & Oi NOTE: All component dimensions given in
U.S. inches 1 inch = 25.4 mm 45 .



[You're reading an excerpt. Click here to read official AYP](#)

[QP17H42STA user guide](#)

<http://yourpdfguides.com/dref/439981>