



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for AYP RBSP2255A. You'll find the answers to all your questions on the AYP RBSP2255A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AYP RBSP2255A
User guide AYP RBSP2255A
Operating instructions AYP RBSP2255A
Instructions for use AYP RBSP2255A
Instruction manual AYP RBSP2255A

RBSP2255A (1998)
GEAR CASE ASSEMBLY

Page 1 of 7

LAWN MOWER - - MODEL NO. RBSP2255A
GEAR CASE ASSEMBLY PART NUMBER 702511

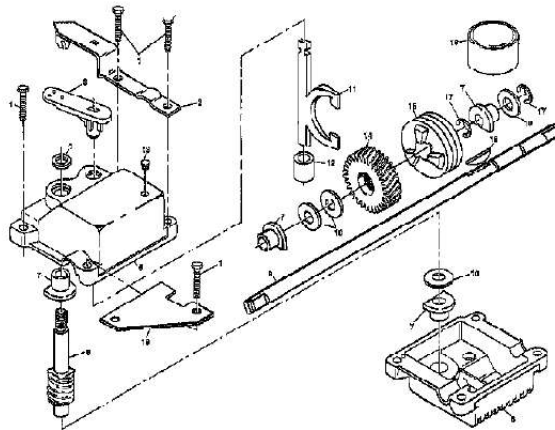

[You're reading an excerpt. Click here to read official AYP RBSP2255A user guide](http://yourpdfguides.com/dref/440113)
<http://yourpdfguides.com/dref/440113>

Manual abstract:

1/4-20 BRACKET.GEARCASE SHIFTER SEAL KIT GEARCASE HALV BEARING SHAFT.WORM SHAFT.DRIVE THRUST WASHER CLUTCH YOKE BUSHING.GEAR BOX PLUG PM GEAR.HELICAL CLUTCH JAW SUB= 6066J RING T HI PRO KEY SPRING BRKT Page 2 of 7 RBSP2255A (1998) LAWN MOWER Page 3 of 7 RBSP2255A (1998) LAWN MOWER Ref# 1 2 3 4 5 7 8 9 10 11 12 16 17 18 20 21 22 23 24 25 26 28 29 30 31 32 33 34 35 36 38 39 40 41 42 43 45 46 47 50 51 54 55 57 59 60 61 62 63 64 65 68 69 70 71 72 73 77 Part Number 155890 147049 146883 63601 130861 700417 144929 136376 83816 213146 151023 128415 141846 150050 84596 87677 59708 133040X479 140540 700365X479 156378X479 54583 133190X479 132001 66426 151721X479 131959 51793 77400 83923 148443 142748 62335 145935X004 700331X004 87877 146630 700327X007 150078 151588X479 151589X479 851201X004 150406 144964 851084 850263 851074 141114 851514 162482 88652 133170X479 134612 700326X007 751592 147738 145285 Qty Description SUB= 164265 BAIL.CNTRL.DELUXE SUB= 164286 SUB= 73800400 "CABLE,ENG ZONE CO" "CONTROL, THROTTLE" SCREW.HXHD.WASH.

KNOB HANDLE SCREW PM CABLE CLAMP KIT.DOOR.REAR BLIND RIVET DECAL DANGER E/S SCREW.HXTAP.10-24 ENGINE. PULLEY.FWG HI PRO KEY PM SCREW REAR BAFFLE SKIRT.REAR.FGD.22 BAFFLE. SIDE BACK PLATE SCREW DISCHARGE BAFFLE ROPE GUIDE SUB= 7192J LOWER HANDLE BOLT.HANDLE.LM HAIRPIN COTTER HUB CAP HEX FLANGE LOCKNT WHEEL.8X2.RAD.GRN BOLT SHLD 3/8-16 "WASHER, BELLEVIL." ARM.AXLE.ASM.BZP.

@@BRACKET.HDL.LH. @@@@HUB CAP NUT.HXFLG.LOCK. WHEEL 8X2 RAD GRN E-RING.7/16.RE. PINION. GEAR DUST SHROUD PM KNOB PM WHEEL.ADJ.ASM.LH. WHEEL. ADJ.ASM.RH. @@FRAME.CATCHER. 2.5 GRASS BAG SUB= 157769 BUSHING.HEX LOCKNUT Page 7 of 7.



[You're reading an excerpt. Click here to read official AYP RBSP2255A user guide](#)
<http://yourpdfguides.com/dref/440113>