




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP RR1238B. You'll find the answers to all your questions on the AYP RR1238B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AYP RR1238B
User guide AYP RR1238B
Operating instructions AYP RR1238B
Instructions for use AYP RR1238B
Instruction manual AYP RR1238B

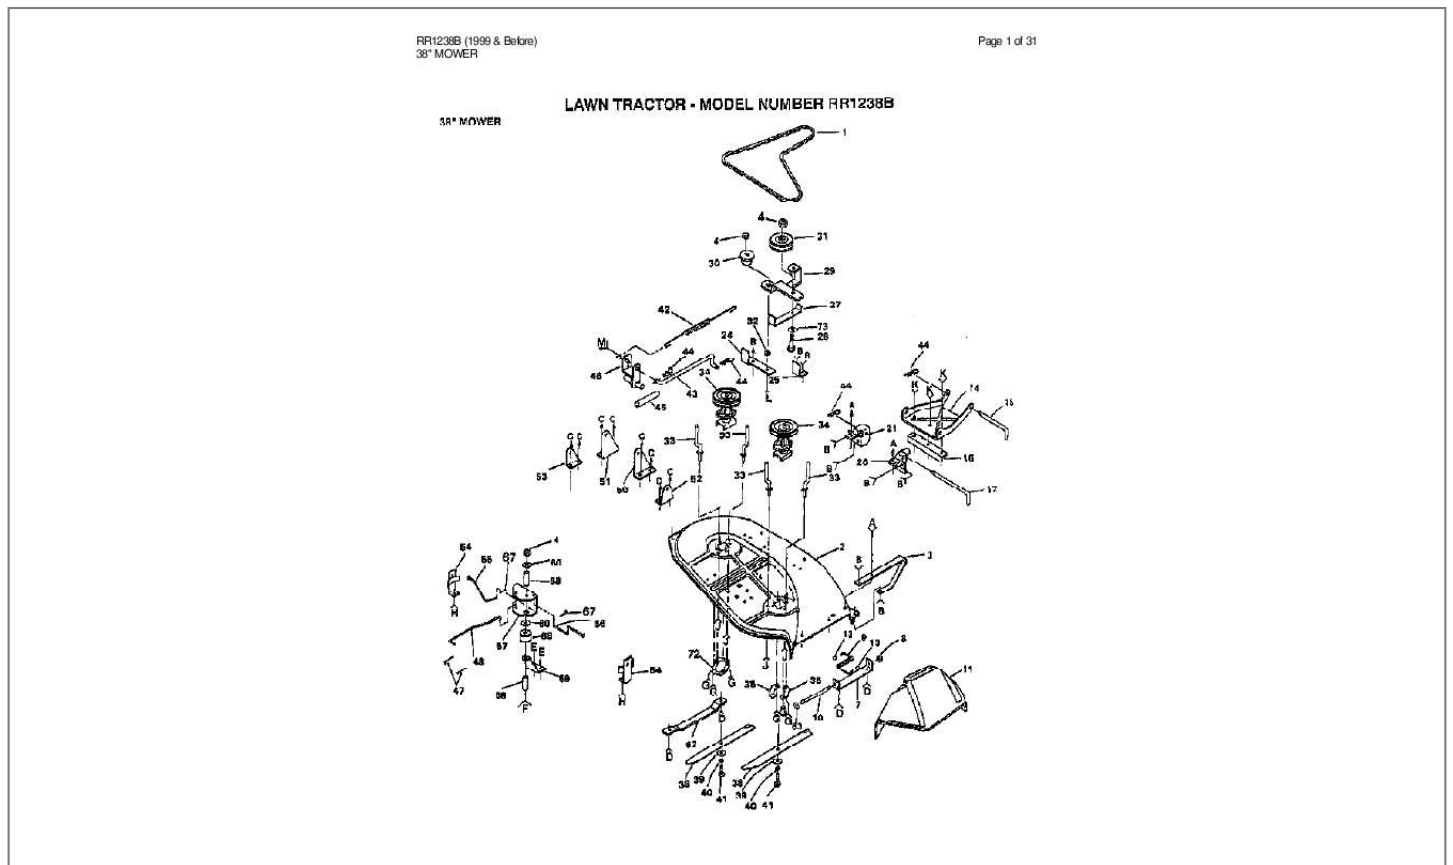

[You're reading an excerpt. Click here to read official AYP RR1238B user guide](http://yourpdfguides.com/dref/440315)
<http://yourpdfguides.com/dref/440315>

Manual abstract:

79.1.MWR SUB= 144725 SUB= 128772 SUB= 73690600 SUB= 137607 NUT PUSH M SUB= 123713X ROD-HINGE T DEFLECTOR-SHLD T CAP-SLEEVE LT LINK.PARALLEL "ROD, FRT. @@@@SRTG. BEAR. ROD-TIE LT SUB= 126847X WASHER COTTER PIN LOCKWASHER SUB= 7810H SUB= 532130468 SPINDLE-LH LT SUB= 130524 FITTING LT "FLANGE, BEARING" SUB= 106732X427 VALVE CAP VALVE STEM LT SUB= 122073X WASHER HUB CAP TUBE.5.3/4.5/6 WASHER WASHER CAP STOP PLASTIC "DECAL,STR WHL" SUB= 138956 Page 28 of 31 RR1238B (1999 & Before) TRANSAXLE Page 29 of 31 RR1238B (1999 & Before) TRANSAXLE Ref# 1 2 3 4 5 6 7 8 8 8 8 8 8 9 10 11 11 11 11 11 11 11 11 11 11 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 Part Number 3865 1919 1151 3626 3623 4336 3884 3885 3886 3887 3888 3889 3121 3890 1100 1099 1959 1441 1423 1082 1424 1068 1425 1358 1145 1319 3312 3876 1374 4134 3590 3624 3625 1542 3773 3631 3828 1369 3883 1375 3627 3830 3841 3786 3785 3867 3783 3869 3741 3628 1423 3422 4286 3877 3901 3645 3853 3749 Qty Description HOUSING UPPER SCREW BALL DETENT SPRING, DETENT SCREW, SET ASSY SHIFTER O-RING WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN RING RETAINING RING RETAINING WASHER PLAIN WASHER PLAIN WASHER, PLAIN . 632 X 1.00 X .026 WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER PLAIN WASHER, PLAIN .632 X 1.00 X .060 WASHER PLAIN O-RING WASHER, PLAIN .632 X 1.38 X .046 KEY WOODRUFF #9 ASSY KIT INPUT SHAFT PINION, BEVEL, 14 TEETH RING, RETAINING CHAIN, 24 PITCHES BEARING, FLANGE GEAR SPUR, 14 TEETH COLLAR CLUTCH KEY CLUTCH KEY WOODRUFF #3 SHAFT INTERMEDIATE KEY, WOODRUFF, #61 RING, RETAINING SPROCKET, 18 TEETH SPACER GEAR, SPUR, 37 TEETH GEAR, SPUR, 35 TEETH GEAR, SPUR, 30 TEETH GEAR, SPUR, 25 TEETH GEAR, SPUR, 22 TEETH GEAR SPUR WASHER, PLAIN .640 X 1. 37 X .061 WASHER, PLAIN .632 X 1.00 X .026 SPACER .630 X 1.00 X .169 ASSY GEAR COMB 12&35 TEETH SHAFT IDLER SPACER .635 X .875 X . 755 SPROCKET, 9 TEETH GEAR, BEVEL, 42 TEETH WASHER PLAIN Page 30 of 31 RR1238B (1999 & Before) TRANS.



[You're reading an excerpt. Click here to read official AYP RR1238B user guide](http://yourpdfguides.com/dref/440315)
<http://yourpdfguides.com/dref/440315>