




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP RT180AR. You'll find the answers to all your questions on the AYP RT180AR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AYP RT180AR
User guide AYP RT180AR
Operating instructions AYP RT180AR
Instructions for use AYP RT180AR
Instruction manual AYP RT180AR

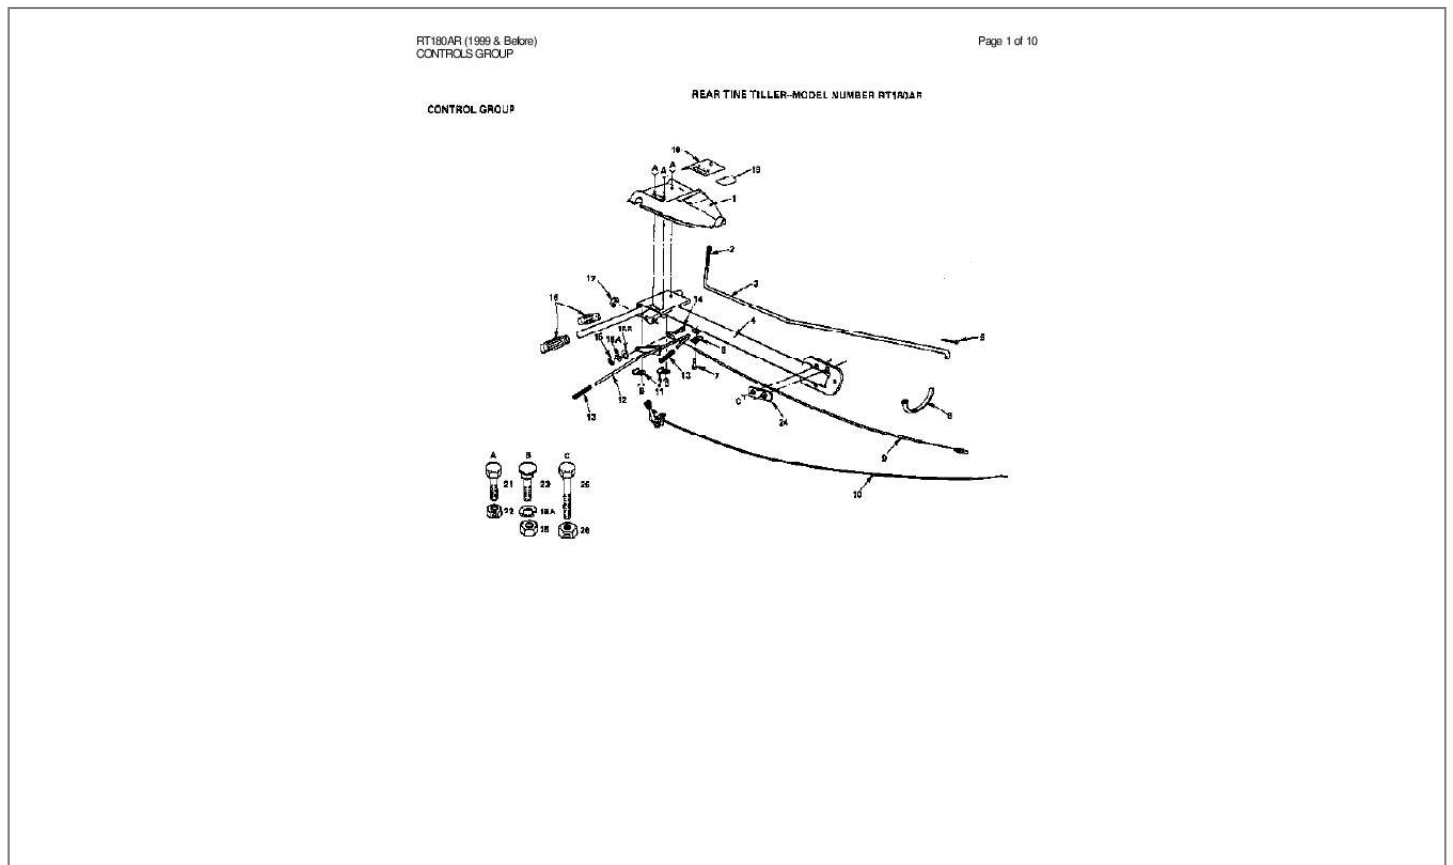

[You're reading an excerpt. Click here to read official AYP RT180AR user guide](#)

<http://yourpdfguides.com/dref/440330>

Manual abstract:

HEX.5/16-18 LOCKWASHER NUT.HEX.3/8-16UNC WASHER BOLT TI BOLT TI SUB= 83923 SCREW TI NLA WASHER Page 4 of 10 RT180AR (1999 & Before) MAIN FRAME, NUTS, BOLTS Page 5 of 10 RT180AR (1999 & Before) MAIN FRAME, NUTS, BOLTS Ref # 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 22 27 Part Number 74760528 10040500 73220500 74760616 10040600 73220600 72110404 10040400 73220400 74930568 19111116 72140608 5394H 72140505 74610616 73610600 74610624 74760668 72470636 19111214 72140506 104214X Qty Description BOLT LOCKWASHER NUT.HEX.5/16-18 BOLT LOCKWASHER NUT.HEX.3/8-16UNC BOLT LOCKWASHER SUB= 50675 BOLT TI WASHER SUB= 72110608 SUB= 73930600 BOLT BOLT SUB= 7810H BOLT.3/8-24X1-1/2 BOLT - HEX BOLT CRT WASHER BOLT NUT TI Page 6 of 10 RT180AR (1999 & Before) MAIN FRAME, TINE ASSY Page 7 of 10 RT180AR (1999 & Before) MAIN FRAME, TINE ASSY Ref # 1 2 3 4 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 28 29 30 31 32 33 34 35 36 38 39 40 41 42 43 44 45 47 48 49 50 51 52 53 54 55 56 Part Number 102718X 23200506 4368J 190402 674A295 673H406 100094K 673H455 100108K 1572H 5014J 5015J 795R 4929H 4921H 678H381 4914H 100445L 678H380 3146R 8386J 104102X358 104084X358 104178X358 102713X358 4440J 100247K 8389J 73220600 673H399 74930656 8392J 12000036 8394J 8393J 104087X358 104476X 102719X 8382J 8381J 104886X 100099L 101194M 101193M 102720X 100106K 104680X 100473M 2649M 8377J 102818X358 9484R 10040600 19131414 102710X Qty Description NLA SET SCREW SHEAVE CRT ENGINE - 8 HP NLA SUB= 8450J LEVER ASSY T SUB= 8700J DECAL, SHIFT INDICATOR SUB= 2882J WHEEL TI TIRE TI SUB= 65139 RIVET.PAN HD.

1.75 SPRING.RETAINER SUB= 101193M KEY TI TINE ASSY CRT SUB= 101194M RETAINER.SPRING TINE SHLD BRKT TI SUB= 108710X505 SUB= 104084X505 SUB= 104178X505 SUB= 102713X505 HINGE CRT PIN HINGE CRT GRIP TI NUT.HEX.

3/8-16UNC SUB= 674A299 BOLT LATCH BRACKET TI KLIP RING TI SPRING TI STAKE PIN TI SUB= 108711X505 NLA DECAL - TINE SHIELD SPACER TI SPACER TI NUT FLANGE CRT HANDLE LOCK CRT TINE.LH.CRT TINE RH CRT DECAL - BELT GUARD SUB= 105611X SUB= 4371J "SHEAVE 10"" CRT" KEY T SUB= 138399 SUB= 102818X505 CONDIUT CLIP T LOCKWASHER WASHER OWNER'S MANUAL Page 8 of 10 RT180AR (1999 & Before) TRANSMISSION P/N BREAKOUT Page 9 of 10 RT180AR (1999 & Before) TRANSMISSION P/N BREAKOUT Ref # Part Number 100432R 1 674A286 2 8370J 3 8547J 4 8546J 5 100413K 6 674A291 7 674A290 8 4358J 9 8358J 10 8371J 11 100371K 12 7392M 13 8353J 14 8354J 15 12000039 16 4360J 17 1370H 18 4895H 19 100724M 20 8367J 21 674A294 22 8366J 23 8359J 24 5020J 25 8372J 26 4353J 27 100433M 28 8357J 29 674A289 30 6803J 31 12000040 32 8356J 33 100016K 34 100434K 35 8365J 36 100436L 37 674A288 38 4357J 39 9674R 40 9676R 41 9672R 42 10040700 43 73610700 44 674A284 45 74760512 46 10040500 47 73220500 48 100107K 49 100430K 6066J Qty Description SUB= 160370 SUB= 150430 BOLT TI REVERSE GEAR TI CLUSTER GEAR TI "CRT, BEARING" SUB= 674A290 SPROCKET ASSY TI WASHER REDUCTION SHFT TI CHAIN TI SPRING-SHIFT CRT SUB= 100482K SHIFT FORK TI SHIFT SHAFT TI KLIP RING SUB= 102136X "T, BEARING" "TI, BEARING" SHAFT INPUT T NLA SUB= 105378X NLA INPUT PINION TI NEEDLE BRNG LT GEARCASE GSKT TI SUB= 106389X GEAR CLUSTER CRT REVERSE GEAR TI GEAR ASSY TI NEEDLE BEARING TI KLIP RING REVERSE SHAFT TI SHAFT CRT SUB= 106392X SUB= 106394X SHAFT ASSY CRT SUB= 142145 SUB= 106393X SUB= 147344 SUB= 147344 CUP.FORMED. .



[You're reading an excerpt. Click here to read official AYP RT180AR user guide](http://yourpdfguides.com/dref/440330)
<http://yourpdfguides.com/dref/440330>