



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for AYP YE10L36B. You'll find the answers to all your questions on the AYP YE10L36B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


**User manual AYP YE10L36B**  
**User guide AYP YE10L36B**  
**Operating instructions AYP YE10L36B**  
**Instructions for use AYP YE10L36B**  
**Instruction manual AYP YE10L36B**

YE10L36B (1999 & Before)  
BRAKE/REAR MOWER LIFT

Page 1 of 35

## REPAIR PARTS

10 HP 38" TRACTOR -- MODEL NUMBER YE10L36B  
BRAKE / REAR MOWER LIFT ASSEMBLY

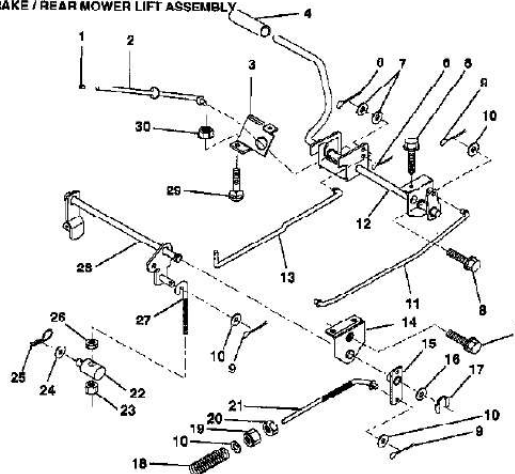

\* STANDARD HARDWARE -- PURCHASE LOCALLY  
NOTE: All component dimensions given in U.S. inches  
1 inch = 25.4 mm



[You're reading an excerpt. Click here to read official AYP YE10L36B user guide](http://yourpdfguides.com/dref/441347)

<http://yourpdfguides.com/dref/441347>

**Manual abstract:**

RETAINER LOCKNUT "LINK, MOWER REAR" SUB= 140776 SUB= 72270506 NUT Page 2 of 35 YE10L36B (1999 & Before) DASH Page 3 of 35 YE10L36B (1999 & Before) DASH Ref# 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 Part Number 122015X 130913 123487X 8544R 8548R 73510400 2751R 19091216 74760428 19091413 121249X 3720R 126450X 126115X 122023X 124346X 72110404 130745 134744 18000408 19090816 134014 Qty Description SUB= 141523 SUB= 138393 HOSE CLAMP SUB= 295J FUEL LINE T NUT CLIP T WASHER PM BOLT WASHER SPACER SPLIT SPRING M "KNOB,HGT RETAINER" KNOB ADJUSTER QUAD NUT BOLT SUPT ASSY DASH CROSS BRACE SUB= 818000408 WASHER PLUG DOME Page 4 of 35 YE10L36B (1999 & Before) DECALS Page 5 of 35 YE10L36B (1999 & Before) DECALS Ref# 1 2 3 5 6 7 8 9 11 12 13 14 Part Number 126860X 122036X 122037X 127192X 123689X 133795 121349X 109820X 123637X 121549X 123649X 125690X 133626 131745 134727 Qty Description "DECAL,LIGHT BOX" NLA NLA DECAL MODEL SIDE PANEL NLA DECAL CAUTION DECAL WARNING DECAL YT SUB= 138269 DECAL DECAL WARNING DECAL OPERATORS MANUAL OP MANUAL NLA Page 6 of 35 YE10L36B (1999 & Before) ELECTRICAL Page 7 of 35 YE10L36B (1999 & Before) ELECTRICAL Ref# 1 2 3 5 6 7 8 9 10 11 12 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 34 35 Part Number 73510400 108423X 133909 108236X 104445X 109553X 17021008 122147X 123620X 124211X 4406R 7192J 121305X 73510500 108824X 128353 132223 73350400 10090400 74780408 11050400 131563 109081X 74760412 19091016 10040400 121264X 73220400 73510600 11050600 Qty Description NUT CABLE ASM. SUB= 123899X BRACKET LT SWITCH-INTER. @@.



[You're reading an excerpt. Click here to read official AYP YE10L36B user guide](#)  
<http://yourpdfguides.com/dref/441347>