


You can read the recommendations in the user guide, the technical guide or the installation guide for BEHRINGER VMX300. You'll find the answers to all your questions on the BEHRINGER VMX300 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BEHRINGER VMX300
User guide BEHRINGER VMX300
Operating instructions BEHRINGER VMX300
Instructions for use BEHRINGER VMX300
Instruction manual BEHRINGER VMX300



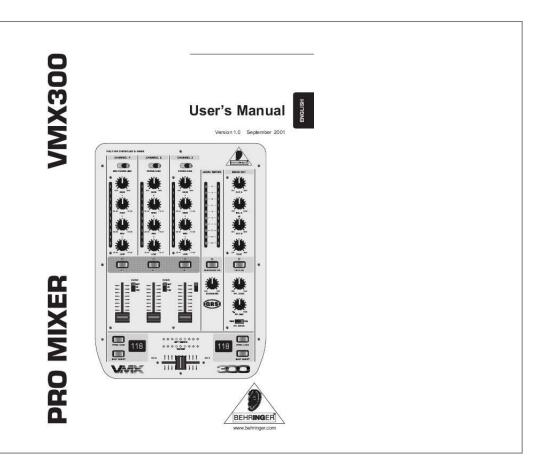

You're reading an excerpt. Click here to read official BEHRINGER VMX300 user guide

http://yourpdfguides.com/dref/2304003

## Manual abstract:

DETAILED SAFETY INSTRUCTIONS: All the safety and operation instructions should be read before the appliance is operated. Retain Instructions: The safety and operating instructions should be retained for future reference. Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to. Follow instructions: All operation and user instructions should be followed. Water and Moisture: The appliance should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.). Ventilation: The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat: The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat. Power Source: The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Grounding or Polarization: Precautions should be taken so that the grounding or polarization means of an appliance is not defeated. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles and the point where they exit from the appliance. Cleaning: The appliance should be cleaned only as recommended by the manufacturer.

Non-use Periods: The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time. Debris and Liquid Entry: Care should be taken that debris and/or liquids do not enter the enclosure through openings. Damage Requiring Service: The appliance should be serviced by qualified service personnel when: - The power supply cord or the plug has been damaged; or - Debris or liquid has entered the appliance; or - The appliance has been exposed to rain; or - The appliance does not appear to operate normally or exhibits a marked change in performance; or - The appliance has been dropped, or the enclosure damaged. Servicing: The user should not attempt to service the appliance beyond that which is described in the operating instructions. All other servicing should be referred to qualified service personnel.

2 PRO MIXER VMX300 FOREWORD Dear Customer, Welcome to the team of PRO MIXER users and thank you for demonstrating your faith in us by purchasing the BEHRINGER VMX300. Writing this foreword to you is an extremely pleasant task. After several months of intensive brainstorming and the subsequent realization of their ideas, our engineers finally achieved an ambitious goal: the construction of an outstanding DJ MIXER, which, due to its remarkable functions, provides maximum flexibility and impressive performance. As with any new product, the development of this new PRO MIXER also meant a great deal of responsibility. Throughout the entire planning and development phases, we kept you the discerning end-user and DJ, your requirements and your requests at the focal point of our considerations. Meeting your professional expectations required a lot of effort and more than a few night shifts, but this is exactly the kind of challenge that keeps us alive and kicking. Developing a new product always brings a large number of people together, and its a great feeling when all involved can take pride in the results. It is an important part of our philosophy to share our gratification with you, since youre the mos important member of the BEHRINGER team. With your highly competent suggestions for new products, youve contributed immensely to the development and success of our company. In return, we bring you uncompromising quality, guaranteed by the stringent BEHRINGER quality control system, as well as excellent technical and audio specifications, at an extremely favorable price.

We hope that this will enable you to fully unfold your creativity without being hampered by budget constraints. We are often asked how we manage to produce such high-grade devices at such unbelievably low prices. The answer is quite simple: its you, our customers! Lots of satisfied customers means large sales volumes, which in turn enables us to reduce production and logistics expenses. We believe its only fair to pass this benefit back to youafter all, your success is our success! I would like to thank everyone who helped make our new PRO MIXER project possible and successful. Each of those people made very personal contributions, from our engineers and designers to our numerous staff members and finally to you as a BEHRINGER user. My friends, its been worth the trouble! Thank you very much, Uli Behringer 3 PRO MIXER Professional 3-channel ultra low-noise DJ mixer PRO MIXER VMX300 VMX300 s Intelligent dual auto-BPM counter with time and beat sync display s Super-smooth Ultraglide faders with up to 500,000 life cycles s Awesome QRS 3D surround effect s Dedicated curve control for all faders s VCA engines for utmost reliability and smooth audio performance s Extremely steep frequency separation via frontpanel 3-way kill switches with revolutionary keyboard-like tap & hold action s Gain and 3-band kill EQ (-32 dB) per channel s Precise level meters with peak hold function per channel s Crossfader reverse switch s Auto-talkover function with separate depth control s Extremely low-noise ULN-(Ultra-Low Noise) design, like those on professional studio consoles s Gold-plated cinch sockets for excellent audio qualities s Super-rugged construction ensures long life, even under the most demanding conditions s Manufactured under ISO9000 certified management system 4 PRO MIXER VMX300 TABLE OF CONTENTS 1.

INTRODUCTION....

... 5 1.1 Before you get started .....

. 5 2. FRC	ONT PANEL	
(2122222	40.50 CX	
6 2.1 2.2 2.3 2.4	\$ 2.5 2.6 Input channels	
. Main out section		

. PFL section	
••••	
••••	
0.00.00	
QRS 3D surround function	
••••	
·····	
Beat counter	

	<del></del>
	······
Crossfa	der section
	<del></del>
	·····
77788	3. REAR PANEL
	·····
	·····
<del></del>	·······
	·······
	·····
. 9 4. SPECI	FICATIONS
	······
	<del></del>
	·····
<del></del>	

12 5. WARRANTY
<b></b>
13 1.
INTRODUCTION With the BEHRINGER PRO MIXER VMX300, you have purchased an absolutely state-of-the-art DJ mixer. Its extensive features, i.e. beat

INTRODUCTION With the BEHRINGER PRO MIXER VMX300, you have purchased an absolutely state-of-the-art DJ mixer. Its extensive features, i.e. beat counter and effects loop, open the door to new and creative ways of working, while making it suitable for a variety of professional applications. At the same time, the VMX300 is extremely easy to operate, allowing you to completely unfold your creativity.

Time waits for no one, and neither you nor we want to be left behind. Thats why we invested months of research and development into creating a DJ mixer that offers up-to-date features and technology to give you a true cutting edge for your performances.



You're reading an excerpt. Click here to read official BEHRINGER VMX300 user guide

http://yourpdfguides.com/dref/2304003

Fully optimized for dance club applications and DJ systems, the VMX300 promises full-blown DJing funand success. Lets be honest: nobody likes reading users manuals. We know you want to plug in and get jammin, but please take the time to read the following instructions.

Weve kept them as short as possible, and it will be well worth the few minutes it takes you. Armed with a thorough understanding of the VMX300s features and functions, youll be able to get the most out of this exciting product. + The following instructions will give you a brief run-down on the terminology and functions of the VMX300. After reading, please store this manual in a safe place for future reference. 1.1 Before you get started Your PRO MIXER was carefully packed in the factory and the packaging is designed to protect the unit against rough handling. Nevertheless, we recommend that you carefully examine packaging and contents for any signs of physical damage which may have occurred during transit. + If the unit is damaged, please do not return it to BEHRINGER, but notify your dealer and the shipping company immediately. Otherwise, claims for damage or replacement may not be granted. Shipping claims must be made by the consignee.

Please take care to always ensure adequate ventilation. Do not place the PRO MIXER near heating units or heat-generating devices in order to avoid overheating. + CAUTION! We would like to point out that high volumes can permanently damage your sense of hearing and/or your headphone or speaker systems. Therefore, please turn the MAIN control in the MIC/MAIN section all the way to the left before turning on the mixer. And please exercise caution and common sense when setting volume levels. 1. INTRODUCTION 5 PRO MIXER VMX300 2. FRONT PANEL Fig. 2.1: Front view of the PRO MIXER VMX300 6.2

FRONT PANEL PRO MIXER VMX300 2.1 Input channels 1 The MIC/PHONO-LINE switch allows you to select the input signal, choosing between microphone and line/phono. Whether the right-hand position selects the line or mic input depends on the position of the PHONO/LINE switch on the rear panel (see ). The PNONO/LINE switch on channels 2 and 3 selects one of the input pairs on the respective channel. The PHONO setting (and inputs) are intended for turntables; for all other signal sources, i.

e. a CD or MD player, use the LINE setting and inputs. A second switch on the rear panel enables the phono input pair to be switched to line level, allowing 2 line-level units to be connected and selected via the PHONO /LINE switch (). Never connect line-level equipment to the highly sensitive phono inputs! The output levels of phono cartridge systems are in the millivolt range, whereas CD and MD players, as well as tape decks, provide outputs levels in the volt range. @@The GAIN control is used to adjust the input signal level.

The overall level of your signal is also effected by the EQ settings. @@@@@@@@@@@@@The CHANNEL fader adjusts the final channel volume. @@The CURVE switch underneath the channel fader enables yot, the corresponding channel is running out of sync. @@@@@@@@@@@Pressed upwards, the switch locks into the reversed position (HOLD). To reset it, simply push it downwards. @@@@@@@With other DJ mixers, the kill switches override the channel EQs. @@@@@There are no KILL switches for channel 1. @@@@@@@For best results, use headphones with an impedance rating of at least 32 Ohms. 3. REAR PANEL With the exception of MIC INPUT and HEADPHONES, all of the VMX300s audio connections are located on the rear panel and supplied as RCA connectors.

Fig 3.1: Rear view of the PRO MIXER VMX300 28 29 30 31 32 33 34 The PHONO inputs for all three channels are primarily intended for turntable connection (see PHONO/LINE switch below). The LINE inputs may be used for connecting tape decks, CD or MD players etc. The GND connection allows grounding of a turntable. The PHONO/LINE switch on channel 1 allows you to select either the PHONO or LINE inputs. Be sure to set the MIC/PHONO-LINE switch on the front panel to the PHONO-LINE position. The PHONO/LINE switches on channels 2 and 3 allow you to set the input sensitivity of the PHONO inputs to line level, so that they can also be used for connection of tape decks, CD or MD players etc. The VMX300 is equipped with an effects loop for external effects devices. The SEND output sends the PFL signal to a connected device, e.g.

a reverb unit. The resulting effect signal can be input to the MAIN OUT section via the RETURN input. The effect level must be adjusted on the external effects unit. The RETURN input can also be used as an extra input for connection of an additional signal source (e.g.

sampler)also in this case the level must be set on the external device. If an external effects unit is connected via the VMX300s effect loop, the selected PFL signal is sent to the unit. If you change the PFL section setting, e.g. to pre-listen to another channel, that signal will be sent to the effects unitthe effect signal of a different track will be mixed to your MAIN OUT signal.

Remember: the effects unit gets its signal from the PFL section (see ). 3. REAR PANEL 9 + PRO MIXER VMX300 35 36 Use the AMP output to connect the VMX300 to an amplifier. The level is controlled by the OUT A control in the MAIN OUT section. The BOOTH output offers a connection for an additional amplifier and/or loudspeaker system. The level is controlled by the OUT B control in the MAIN OUT section. In order to avoid power-up thumps, which can damage your loudspeakers, please power up your amplifier last. There should be no signal present, e.g. no music playing, when you turn on your amp.

In addition, we suggest that you set all volume-related controls to zero (down) before powering up your system. Following these precautions will save you from unpleasant and potentially dangerous surprises. The TAPE output enables you to record your performance by connecting a tape deck, DAT recorder etc. Unlike the AMP and BOOTH outputs, the TAPE level is fixed, so that you have to adjust the input level on the recorder. The POWER ON switch turns on the PRO MIXER. FUSE HOLDER/VOLTAGE SELECTOR. Before you connect the equipment to an AC outlet, please be sure that the voltage displayed corresponds with your local AC voltage. If you should need to replace the fuse, be sure to replace it with one of the same type and value. Some units allow you to switch between 230 V and 115 V by rotating the fuse holder. To operate the unit at 115 V, you must install a fuse with a higher ampere rating. This is the socket for the power cable. The impulse behavior of any given amplifier circuit depends largely upon the power supplys inherent reserves. All mixers contain numerous operational amplifiers (op-amps) for processing line-level signals. Due to the restricted performance of their power supplies, many mixers show stress symptoms when used under extreme conditions, resulting in inferior audio quality. Thanks to its generously proportioned power supply, this will never happen to your VMX300: The sound will always be clear, transparent and powerful.

http://yourpdfguides.com/dref/2304003



You're reading an excerpt. Click here to read official BEHRINGER VMX300 user guide

SERIAL NUMBER. Please take the time to fill out and return the warranty card within 14 days after the date of purchase. This will entitle you to all the benefits of our extended warranty. Alternatively, you can register online at www.behringer.

com. + 37 38 39 + 40 41 10 3. REAR PANEL PRO MIXER VMX300 4. SPECIFICATIONS AUDIO INPUTS Mic input Phono inputs 1, 2 and 3 Line inputs 1, 2 and 3 Return AUDIO OUTPUTS Main Out Booth Out Tape Out Send Headphones EQUALIZER (+/-8 dB) Stereo Low Stereo Mid Stereo High Kill Low Kill Mid Kill High GENERAL Signal-to-noise ratio (S/N) Crosstalk Distortion (THD) Frequency response Input gain adjustment POWER SUPPLY AC voltage 46 dB gain, servo-balanced 40 dB gain @ 1 kHz, unbalanced 0 dB gain, unbalanced 0 dB gain, unbalanced max. +21 dBu @ +5 dBU (Line In) max. +13 dBu typically 0 dBu typically 125mW @ 1 % THD +12 dB/-32 dB @ 50 Hz +12 dB/-32 dB @ 1,2 Hz +12 dB/-32 dB @ 10 kHz -54 dB @ 50 Hz -44 dB @ 1 kHz -26 dB @ 10 kHz > 85 dB (Line) > 77 dB (Line) < 0,05% 20 Hz - 20 kHz -20 dB - +9 dB USA/Canada U.K./Australia Europe 120 V ~, 60 Hz, fuse T 500 mA H 240 V ~, 50 Hz, fuse T 315 mA H 230 V ~, 50 Hz, fuse T 315 mA H DIMENSIONS AND WEIGHT Dimensions (H x W x D) Weight approx. 3 1/2" (88 mm) x 9 1/2" (241 mm) x 13 1/10" (332 mm) approx. 3.

5 kg (7 lbs. 4 oz) BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated. 4. SPECIFICATIONS 11 PRO MIXER VMX300 5. WARRANTY § 1 WARRANTY CARD/ONLINE REGISTRATION To be protected by the extended warranty, the buyer must complete and return the enclosed warranty card within 14 days of the date of purchase to BEHRINGER Spezielle Studiotechnik GmbH, in accordance with the conditions stipulated in § 3. Failure to return the card in due time (date as per postmark) will void any extended warranty claims. Based on the conditions herein, the buyer may also choose to use the online registration option via the Internet (www.behringer.

com or www.behringer.de). § 2 WARRANTY 1. BEHRINGER (BEHRINGER Spezielle Studiotechnik GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year from the original date of purchase, in accordance with the warranty regulations described below.

If the product shows any defects within the specified warranty period that are not due to normal wear and tear and/or improper handling by the user, BEHRINGER shall, at its sole discretion, either repair or replace the product. 2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid. 3. Warranty claims other than those indicated above are expressly excluded.

§ 3 RETURN AUTHORIZATION NUMBER 1. @@All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number. 2. @@3. Shipments without freight prepaid will not be accepted. § 4 WARRANTY REGULATIONS 1. @@@@2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship.

The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not.

Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation. 3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, potentiometers, keys/buttons and similar parts. 4. Damages/defects caused by the following conditions are not covered by this warranty: s misuse, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals. s connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used. s damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER. 5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.

6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer. 7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyers expense. BEHRINGER will inform the buyer of any such circumstance.

If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

§ 5 WARRANTY TRANSFERABILITY This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER. § 6 CLAIM FOR DAMAGES Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product. § 7 OTHER WARRANTY RIGHTS AND NATIONAL LAW 1. This warranty does not exclude or limit the buyers statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract. 2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law. The information contained in this manual is subject to change without notice.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studiotechnik GmbH. BEHRINGER is a registered trademarks. ALL RIGHTS RESERVED. © 2001 BEHRINGER Spezielle Studiotechnik GmbH. BEHRINGER Spezielle Studiotechnik GmbH, Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany Tel. +49 (0) 21 54 /92 06-0, Fax +49 (0) 21 54 /92 06-30 12 5. WARRANTY.



You're reading an excerpt. Click here to read official BEHRINGER

VMX300 user guide

http://yourpdfguides.com/dref/2304003