



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLACKBERRY 7230. You'll find the answers to all your questions on the BLACKBERRY 7230 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual BLACKBERRY 7230 User guide BLACKBERRY 7230 Operating instructions BLACKBERRY 7230 Instructions for use BLACKBERRY 7230 Instruction manual BLACKBERRY 7230

### Tips and Troubleshooting

BlackBerry Wireless Handheld™

**TIPS**

**To HANDHELD**  
Turn on the handheld  
Turn off the handheld  
Turn on/off the radio  
Turn on/off background lock the handheld  
Lock the keyboard  
Unlock the keyboard  
\*The lock icon appears when a password is set.

**NAVIGATING**  
Move the cursor  
Click an item  
Return to the previous screen  
Move backward/forward  
Select multiple items  
Move to the top of a screen  
Move to the bottom of a screen  
Page up or down in a list

**Typing TEXT**  
Capitalize a letter  
Insert a period  
Type the alternate character on a key  
Insert a special character  
Insert a symbol  
Enter Call-log mode  
Enter NUM lock mode  
Exit NUM lock or Call-log mode

**EDITING TEXT**  
Enter selection mode  
Select text  
Copy selected text  
Paste selected text  
Cut selected text

**MISCELLANEOUS**  
Search for text  
Clear a field  
Search for messages

**Do this**  
Press the **Power** button  
Hold the **Power** button **Off**  
Click the **Power** **Off** icon  
Click the **Screen On/ Wireless Off** icon  
Press the **Power** button  
Click the **Lock** icon  
Click the **Keyboard Lock** icon  
Double-click the trackball

Roll the trackwheel **Off**  
Press the **Alt** key + roll the trackwheel  
Highlight the item + click the trackwheel  
Press the **Escape** button  
Press the **Back**, **Forward** key  
Hold the **Shift** key + roll the trackwheel  
Press **T**  
Press the **End** letter of the item  
Press the **Alt** key + roll the trackwheel

Hold the letter  
Press the **Space** key twice  
Press the **Alt** key + the key  
Hold a letter + roll the trackwheel  
Press the **Symbol** key + click a symbol  
Press the **Alt** key + the **Right Shift** key  
Hold the **Right Shift** key + press the **Alt** key  
Press the **Right Shift** key

Press the **Alt** key + click the trackwheel  
Enter selection mode + roll the trackwheel  
Enter selection mode + hold the **Shift** key + roll the trackwheel  
Press the **Alt** key + click the trackwheel **Off**  
Click the trackwheel + **Click Copy**  
Press the **Shift** key + click the trackwheel **Off**  
Click the trackwheel + **Click Paste**  
Click the trackwheel + **Click Cut**

Click the trackwheel + **Click Find** + Type text  
Click the trackwheel + **Click Clear Field**  
Open the message application + **Click the trackwheel** + **Click Search**

### Quick Reference

BlackBerry Wireless Handheld™

**ICONS**

Messages, Phone, Contacts, Calendar, Tasks, Services, My Applications, Calculator, BrickBreaker, MemoPad, Profiles, Keyboard Lock, Lock, My Office, Mobile Email, Settings, Send Messages, Alarm, Home Zone, reciving data, transmitting data, Wireless On, Wireless Off, Power Off

**STATUS INDICATORS**

battery power, changing, no battery inserted, charging, Home Zone, meaning, reciving data, transmitting data

**Product information**

**MECHANICAL PROPERTIES**  
Weight: Approximately 140 g (4.9 oz) including battery  
Size (L x W x H): 113 x 74 x 21 mm (4.4 x 2.9 x 0.84 in.)  
Memory: 16 MB. Flash memory, 2 MB SRAM

**DISPLAY AND NOTIFICATION FEATURES**  
Display: High resolution 240 x 160 pixel screen, 65,000 color TFT display, backlit screen and keyboard  
Notification: LED indicator, audible notification, mechanical vibrator

**POWER**  
Battery: Rechargeable lithium ion (Li-Ion)  
SIM interface: Supports 3V SIM cards  
Port: Combined data synchronization and USB compatible charging port  
Travel power adapter: +5V DC/500 mA, AC power adapter, with interchangeable location-specific plugs

**RECOMMENDED OPERATING AND STORAGE TEMPERATURES**  
Handheld operating: 0 to 50°C (32 to 122°F)  
Handheld storage: 10 to 30°C (50 to 86°F)  
Travel charger operating: 0 to 45°C (32 to 113°F)  
Travel charger storage: -30 to 75°C (-22 to 167°F)

**RADIO SPECIFICATIONS FOR THE BLACKBERRY 7230 WIRELESS HANDHELD™**  
In-band support: GSM/GPRS 900, DCS 1800, PCS 1900 MHz  
Power class: Class 1 (GSM 1800, PCS 1900, Class 4 (GSM 900) as defined in GSM 02-06  
Transmitting frequency: GSM 880-915 MHz, DCS 1710-1785 MHz, PCS 1850-1910 MHz  
Receiving frequency: GSM 925-960 MHz, PCS 1800-1880 MHz, PCS 1920-1990 MHz

**REGULATORY CONFORMANCE**  
FCC Type Certification Review Board (PTCRB)  
Federal Communications Commission (FCC)  
Industry Canada (IC)  
Underwriters Laboratories UL60950 requirements for Canada and US  
Radio & Telecommunications Terminal Equipment (RTE) Directive 1999/5/EC  
Global Certification Forum Certification Criteria (GCF/CC) requirements  
Specific details about conformance to the above standards and regulatory bodies may be obtained from Research In Motion.

**Customer support**  
For customer support, contact your service provider.  
• United Kingdom  
• Netherlands  
• Germany  
• Italy  
• France  
• Spain

©2005 Research In Motion Limited. All rights reserved. The BlackBerry and RIM families of related marks, logos and symbols are the exclusive property of and trademark of Research In Motion Limited. No representation or warranty whatsoever is made about this document, including its accuracy or completeness. The information contained herein is subject to change without notice. Published in Canada: MAT10210-001. Model number: 88230CC

**NETWORK STATUS INDICATORS**

	GPRS	GPS	GSM	GPS	GPS
Wireless coverage	-	-	-	-	-
Emergency calls	-	-	-	-	-
MMS message	-	-	-	-	-
Phone	-	-	-	-	-
Email and PIM messages	-	-	-	-	-
Internet	-	-	-	-	-

**OPEN AN APPLICATION**  
1. On the Home screen, click an icon.  
• If the icon represents an application, the application opens.  
• If the icon represents a folder, the folder opens.

**NAVIGATE YOUR TIME**  
• Click **Services** or **My Office** to open a browser.  
• Click **My Applications** to display the icons for the BlackBerry game, the calculator, and any additional applications.  
• Click **Contacts** to open the address book application.  
• Click **Settings** to open the options application.

**MAKE A PHONE CALL**  
1. Open the phone.  
2. Click **One Time Dial**. The Enter Phone Number dialing box appears.  
3. Type a phone number.  
4. Click **Call**.  
5. To end the call, press the **Escape** button.

**TURN ON/OFF BACKLIGHTING**  
1. Press the **Power** button.

**SEND AN EMAIL MESSAGE**  
1. Open the messages application. The Messages screen appears.  
2. Click the trackball. A menu appears.  
3. Click **Compose Email**. The Select Address screen appears.  
4. Click **Use OneKey**. A menu appears.  
5. Click **Email**. The One Time Email screen appears.  
6. In the **Email** field, type an email address.  
7. Click the trackball. A menu appears.  
8. Click **Continue**.  
9. In the **Subject** field, type a subject.  
10. Press the **Enter** key.  
11. Type a message.  
12. Click the trackball. A menu appears.  
13. Click **Send**. The message is sent.

**Move the cursor**  
Roll the trackwheel.

**Click an item**  
Roll the trackwheel to highlight an item. Click (press) the trackwheel.

**Type text**  
Hold the handheld with both hands and press the keys.

**Return to previous screen**  
Press the **Escape** button.

\*Your handheld might vary from the depictions on this card.



You're reading an excerpt. [Click here to read official BLACKBERRY 7230 user guide](http://yourpdfguides.com/dref/2711898)

**Manual abstract:**

@@ - If the icon represents a folder, the folder opens. **TURN ON/OFF BACKLIGHTING** 1. Press the Power button. **SEND AN EMAIL MESSAGE NAVIGATE YOUR THEME** · Click Services or My Office to open a browser. · Click My Applications to display the icons for the BrickBreaker game, the calculator, and any additional applications. · Click Contacts to open the address book application. · Click Settings to open the options application. Move the cursor Roll the trackwheel. Click an item Roll the trackwheel to highlight an item. Click (press) the trackwheel.

Type text Hold the handheld with both hands and press the keys. Return to previous screen Press the Escape button. **MAKE A PHONE CALL** \*Your handheld might vary from the depictions on this card. 1. Open the phone.

2. Click One Time Dial. The Enter Phone Number dialog box appears. 3. Type a phone number.

4. Click Call. 5. To end the call, press the Escape button. 1. Open the messages application. The Messages screen appears. 2. Click the trackwheel. A menu appears.

3. Click Compose Email. The Select Address screen appears. 4. Click [Use Once]. A menu appears. 5. Click Email. The One Time Email screen appears. 6. In the Email field, type an email address. 7. Click the trackwheel. A menu appears. 8.

Click Continue. 9. In the Subject field, type a subject. 10. Press the Enter key.

11. Type a message. 12. Click the trackwheel. A menu appears. 13. Click Send. The message is sent. Customer support For customer support, contact your service provider. @@All rights reserved.

@@@The information contained herein is subject to change without notice. Published in Canada. @@@@Select one of the following options: · Use your computer. @@@@2. 3. 4. 5. 6. 7. @@@@Press the battery cover release button.

Slide off the cover. If the battery is inserted, remove it. Slide the SIM card holder away from you. Lift the SIM card holder. Insert the SIM card into the holder so that the notches align.

Close the SIM card holder. Slide the SIM card holder toward you to lock it. 2. Generate an encryption key b) Slide the appropriate attachment piece into the power adapter. a) Verify that your handheld is connected to your computer.

b) On the Windows taskbar, click Start. c) Select Programs > BlackBerry > Desktop Manager. The BlackBerry Desktop Manager window appears. A dialog box appears. d) Complete the on-screen instructions. V N P G Space key CALCULATOR Add Subtract Multiply Divide Clear the screen Display the result I U

A G Y Enter key 3. Enable email redirection North America Europe United Kingdom Australia · BlackBerry Enterprise Server: Email is forwarded to your handheld automatically. · BlackBerry Desktop Redirector: On the Windows taskbar, click Start. Select Programs > BlackBerry > BlackBerry Desktop Redirector. @@The handheld does not turn on.

The handheld does not charge. The date and time are incorrect. The handheld is PIN-locked. Other issues. Possible Solution Press the Power button. Charge the handheld. Reinsert the battery. Check all connections. @@Contact your service provider. Refer to "Troubleshooting" in the Blac.



[You're reading an excerpt. Click here to read official BLACKBERRY](http://yourpdfguides.com/dref/2711898)

[7230 user guide](http://yourpdfguides.com/dref/2711898)

<http://yourpdfguides.com/dref/2711898>