



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLACKBERRY DTEK50. You'll find the answers to all your questions on the BLACKBERRY DTEK50 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLACKBERRY DTEK50**  
**User guide BLACKBERRY DTEK50**  
**Operating instructions BLACKBERRY DTEK50**  
**Instructions for use BLACKBERRY DTEK50**  
**Instruction manual BLACKBERRY DTEK50**



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*. 8 Touch screen gestures.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.. 9 Apps, widgets, and shortcuts.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*. 13 Personalizing your device.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *16 Phone and voice*.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.... *17 Phone icons*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

....*17 Find your own phone number.*

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

... 17 Change your ringtone..

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....17 Making calls.

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

....18 Receiving calls.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*19 Blocking calls.....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 21 Add a contact or number to your speed dial list...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 22 Call waiting and call forwarding.....*

.....  
.....

.....  
.....  
.....

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 23 Start a conference call....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

23 LTE calling.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. 24 Wi-Fi calling..

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 28 *Download an app on Google Play* ...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

... 28 *Organizing your home screen*..

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.. 28 *Messenger*..

.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....



.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....30 *About the Google app and Now on Tap.*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 32 *™™ Clock...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.. 32 *BlackBerry Device Search.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....35 *Location services and Google Maps...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 37 *Google Chrome and Downloads...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.... 39 *Printing.*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
*.40 Settings.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.. 42 Change your device settings.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*...42 Customize the quick settings menu.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*... 42 Notifications..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *42 Storage space and media cards...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *52 Battery and power...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*. 70 Display....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*... 74 Advanced interactions..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.. 77 Convenience key.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*77 Accounts.....*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... *78 Accessibility.*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

....79 Users.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....81 Backup and reset.

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....83 Update your device software....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....





... 94 Security settings.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

. 95 Legal notice ....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

... 100™ User Guide Setup and basics Setup and basics Your device at a glance 1. 2. 3. 4. 5. 6. 7.

8. Headset jack Notification LED and front flash Front camera Volume up/down key Convenience key Nano SIM card and media card (microSD card) tray USB port Power on/off key 5 User Guide Setup and basics Insert the SIM card Your device uses a nano SIM card. If you don't have a SIM card or don't have the right type of SIM card, contact your service provider. CAUTION: Do not use a larger SIM card that was cut to a smaller size. Your device might not recognize the SIM card, or the SIM card might get stuck because it is thicker than a nano SIM card.

1. Release the tray by pushing the tip of the tool (provided in the box) into the hole on the right side of your device. If you don't have the tool that came with your device, you can also use a paper clip. 2. 3.

4. Pull out the tray completely and set it on a flat surface. Hold the SIM card so that the metal contacts are facing away from you. Align the notch on the SIM card with the notch in the smaller section of the tray. Put the SIM card in the tray. 5. Push the tray back into the slot. 6 User Guide Setup and basics Insert a media card If you want more storage for pictures, videos, music, and documents, you can insert a media card (microSD card). 1. Release the tray by pushing the tip of the tool (provided in the box) into the hole on the right side of your device.

If you don't have the tool that came with your device, you can also use a paper clip. 2. 3. 4. Pull out the tray completely and set it on a flat surface. Hold the media card so that the metal contacts are facing away from you. Align the notch on the media card with the notch in the larger section of the tray. Put the media card in the tray. 5. Push the tray back into the slot.

7 User Guide Setup and basics Turn your device on or off Press and hold the Power on/off key (on the left side of your device). •• To turn off your device, tap Power off. To turn your device off and then on again, tap Restart. Turn off the screen Press the Power on/off key (on the left side of your device). To turn the screen back on, press the Power on/off key, or tap the screen twice.

Move between home screens You can move between your home screens with a gesture on the screen. On the screen, swipe left or right. Get around with navigation buttons No matter what you're doing on your device, navigation buttons appear at the bottom of your screen. Do any of the following: • To go back

to the previous screen, tap 8 . User Guide Setup and basics •To go to your home screen, tap .

• To see your recently opened apps and screens, tap Touch screen gestures Take a moment to learn the common gestures that you can use on the touch screen. Wake up your device Tap the screen twice. Select items Do any of the following: ••To select an item, tap it. If the item can be opened, it opens. To select multiple items, such as photos that you want to share or email messages that you want to delete, touch and hold one item. Tap more items. To clear an item, tap it again. 9 User Guide Setup and basics Scroll or move between items Slide your finger to scroll through a list or move between items, such as photos. Check your notifications You can check your latest notifications (for example, email messages and text messages) at any time.

10 User Guide Setup and basics Swipe down from the top of the screen. Tap a notification to open it or pull down to see more notifications. Open Quick Settings You can open Quick Settings to turn on or turn off common settings such as Wi-Fi and airplane mode. Open an app You can open one of three default apps from anywhere on your device. Slide your finger up from the bottom of the screen. Move your finger over the app that you want to open. Lift your finger. 11 User Guide Setup and basics Use a slider If a slider appears on your screen, you can progress through a file, such as a song or video, or adjust a setting, such as the screen brightness. Drag the slider handle to the right or left. Zoom in to or zoom out from the screen If you want to see something in more detail, such as a photo or part of a map, you can magnify the image.

To zoom in, slide two fingers apart. 12 User Guide Setup and basics To zoom out, slide two fingers together. Tip: In sault, you can swipe to open the BlackBerry Device Search app, the Phone, and the BlackBerry Hub, but you can change the swipe shortcuts in the device settings. 1. 2.

To access a shortcut, swipe up from . Slide your finger to the shortcut, and then release your finger. 15 User Guide Setup and basics Change the shortcuts that you access with the swipe gesture You can change the shortcuts that you access with the swipe gesture. For example, you can set up the gesture to start an action, such as composing an email. 1.

2. 3. @@Tap ••••> Swipe Shortcuts. To set the gesture to open a different app, tap Open app, and then tap an app. To set the gesture to call a contact, tap Speed dial, and then tap a contact. To set the gesture to send an email or a text message to a contact, tap Send message. Tap Email contact or Text contact, and then tap a contact. To set the gesture to start an action, tap All shortcuts. Tap a circle. Turn off a swipe gesture If you set up a gesture to open an app or use a shortcut, to turn off the gesture, do the following: 1.

2. 3. 4. @@Tap > Swipe shortcuts. Tap a circle. Tap Clear. Personalizing your device Learn how to personalize your device and make it uniquely yours. For example, you can change your ringtone or set a picture as your wallpaper. ••••••• Change your device settings Change your ringtone Change your wallpaper Add a contact or number to your speed dial list Add an app, a widget, or a shortcut to your home screen Change your font size Change how you view your recent apps and screens Set up or change a screen lock 16 User Guide Phone and voice Phone and voice Phone icons During a call Icon Description Turn on the speakerphone Mute your microphone Tip: You can also press the Convenience key to mute your microphone.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

Put a call on hold Show the dial pad Make another call Merge calls to start a conference call Split a conference call into multiple calls Find your own phone number 1.

2. @@Tap > About phone > Status > SIM Status. Your phone number appears at the bottom of the screen. If it doesn't appear, your service provider might not have added your phone number to your SIM card. For more info, contact your service provider.

Change your ringtone 1. 2. 3. @@Tap > Sound & notification > Phone ringtone. Tap a ringtone, and then tap OK.

17 User Guide Phone and voice Tip: To use a song or a custom sound as your ringtone, move the .mp3 file you want to use to the Ringtones folder on your™ device. You might need to install a file manager app from the Google Play store first. Making calls Make a call 1. 2. 3. In the Phone app, tap Enter the number. Tap . . Call a recent number 1.

2. In the Phone app, tap . . Beside a name or number, tap Call a contact 1. 2. 3. In the Phone app, tap Tap a contact. Tap the number that you want to call. . . Tip: To send a text message to a contact, beside the number, tap Speed dial a contact For more info about speed dial, see Add a contact or number to your speed dial list. 1. 2. In the Phone app, tap Tap a speed dial contact. .

Show or hide your number on outgoing calls Depending on your service provider, this feature might not be supported. 1. 18 In the Phone app, in the upper-right corner of the screen, tap . User Guide Phone and voice 2. 3.

Tap Settings > Call settings > Additional settings > Caller ID. Tap Show number or Hide number. View your call history You can view past outgoing, incoming, and missed calls on the History screen. 1. 2. In the Phone app, in the upper-right corner of the screen, tap Do any of the following: • To see the details of a specific call, tap a name or phone number, and then tap • To view missed calls, tap Missed. > Clear call log > OK. • To clear your call history, tap . > Call History. Receiving calls Answer or dismiss a call 1.

If your device is locked, touch and hold . . Release your finger. . Release your finger. Answer or Dismiss. • To answer a call, slide your finger until it covers • To dismiss a call, slide your finger until it covers 2. If your device is unlocked, in the call notification, tap Send a quick response to a caller You can send a caller a brief text message instead of answering an incoming call. Depending on the recipient of the quick response, additional text messaging charges might apply. Note: If a call is from an unknown caller, the option to send a quick response does not appear.

1. 2. When you receive an incoming call, touch and hold finger. Do any of the following: • • To send a default message, tap a message. To compose a new message, tap Write your own.

. Slide your finger until it covers and then release your 19 User Guide Phone and voice When you dismiss a call to send a quick response, the caller is sent to voicemail. If you do not have voicemail, the caller receives a busy signal instead. Change your default quick response messages You can create your own quick response messages to replace the available defaults. 1.

2. 3. 4. In the Phone app, in the upper-right corner of the screen, tap Tap the quick response you want to change. Type a new message. Tap OK. > Reset default app. > Settings > Quick responses. To reset to the default quick responses, on the Edit quick responses screen, tap Silence the ringtone when you receive a call If you receive a call while your sound or vibration notifications are turned on, you can quickly silence your ringtone and stop your device from vibrating. After you silence the ringtone, you can still answer or decline the call.

When you receive an incoming call, press the Volume key. Move a call from your headset to your device When you have a Bluetooth headset connected to your device, incoming calls are automatically received on your headset. You can manually move the call back to the device. 1. 2. While on a call, tap • • . Do one of the following: To move the call to your device, tap Handset earpiece. To move the call to your device speakerphone, tap Speaker. Prevent calls from going to your Bluetooth headset You can disconnect your Bluetooth headset from the Phone app so that calls are sent to your device instead. 1.

2. 3. 4. @@Tap Bluetooth. Beside the paired headset you want to disconnect, tap Clear the Phone audio checkbox.

. 20 User Guide Phone and voice Put a call on hold While on a call, tap To resume a call, tap . again. Blocking calls Block all incoming or outgoing calls When you block calls, you can stop all incoming or outgoing calls, and prevent all incoming or all outgoing calls when roaming. Contact your service provider for more info on blocking specific phone numbers.

Depending on your service provider, this feature might not be supported. 1. 2. In the Phone app, in the upper-right corner of the screen, tap Do any of the following: • • To block the types of calls that your device can make, tap Outgoing call barring. Tap an option. To block incoming calls, tap Incoming call barring. Tap an option. > Settings > Call settings > Call barring. The first time that you turn on call blocking, you are prompted to create a password to lock your call blocking settings. To change your call blocking password, tap Change password.

Block a caller Verify that the number you want to block is listed as a number for a contact in your Contacts app. 1. 2. 3. In the Contacts app, tap a contact. Tap > . Select the All calls to voicemail checkbox. Block callers who aren't contacts You can use the priority only mode to ignore calls from callers who aren't contacts. Your phone doesn't ring when you receive a call from someone who's not in your contact list, but your device still lets you know that you missed a call. 1.

@@21 User Guide Phone and voice 2. 3. Tap > Priority only. Tap More Settings > Priority only allows > Calls > Contacts only. Note: By default, priority only mode lasts for one hour.

To change how long it lasts, swipe down from the top of the screen once using two fingers, or twice using one finger. Tap > Priority only. To increase how long the mode stays on, tap , or tap Until you turn this off. Limit the phone numbers that you can call When you set up and use fixed dialing numbers, you can make calls and send text messages (SMS or MMS) only to the phone numbers that you add to the fixed dialing numbers list. For example, if you give your device to your child to use, you can limit the phone numbers that your child can call.

To use fixed dialing numbers, your service provider must set up your SIM card for this feature. Depending on your service provider, this feature might not be supported. 1. 2. 3. 4. 5. 6. 7. 8.

In the Phone app, in the upper-right corner of the screen, tap Tap Settings > Call settings > Fixed Dialing Numbers. Tap Enable FDN. Enter the SIM security code provided to you by your service provider.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

Tap OK. Tap FDN list > Tap Save. > Add contact. Type a name and phone number. . Add a contact or number to your speed dial list Contacts that you add to your speed dial list appear in the 1. 2.

3. In the Phone app, tap Tap . . tab in the Phone app. Tap the picture or letter beside a contact's name.

Remove a contact or number from your speed dial list 1. 2. 22 In the Phone app, tap . Touch and hold the contact you want to remove. User Guide Phone and voice 3.

Drag the contact over Remove. Release your finger. Call waiting and call forwarding Turn call waiting on or off Depending on your service provider, this feature might not be supported. 1. 2. 3. In the Phone app, in the upper-right corner of the screen, tap Tap Settings > Call settings > Additional settings. Tap the Call waiting checkbox. . Set up call forwarding Depending on your service provider, this feature might not be available.

1. 2. 3. In the Phone app, in the upper-right corner of the screen, tap Tap Settings > Call settings > Call forwarding. To change the number that your calls are forwarded to, tap a call forwarding option and type a number. . Start a conference call 1. 2. While on a call, make or answer another call. To merge the calls, tap .

Answer a second call while already on a call Verify that call waiting is turned on. 1. 2. While you are on a call and receive a second call, touch and hold release your finger. Do one of the following: • • 3.

To put the first call on hold and answer the second call, tap Hold current call. To end the first call and answer the second call, tap End current call. . 23 . Slide your finger until it covers and then If you put the first call on hold, to merge both calls and start a conference call, tap User Guide Phone and voice To add more people to the conference call, repeat steps 1 and 2.

Make another call while already on a call When you make another call while you're already on a call, your first call is automatically put on hold. 1. 2. While on a call, tap Do any of the following: • • 3. Use the dial pad to enter a number. Tap above the dial pad to go to the Phone screen. Tap a contact. . . To merge both calls and start a conference call, tap To add more people to the conference call, repeat steps 1 to 3.

Remove people from a conference call 1. 2. While in a conference call, to view the conference call participants, tap Manage conference call. Do one of the following: • To remove a person from the conference call and hang up, tap . . • To remove a person from the conference call and keep them in a separate call, tap LTE calling Turn on Voice over LTE and LTE video calling Voice over LTE and LTE video calling provide high-definition voice and video calling using 4G LTE connections. To use LTE video calling, you must turn on Voice over LTE. Depending on your service provider, this feature might not be supported.

For more information, contact your service provider. 1.

2. 3. @@Tap • • 24 . Tap Advanced Calling. Tap More > Cellular networks > IMS Settings.

Depending on the available options, do one of the following: User Guide Phone and voice 4. 5. 6. Turn on the Advanced Calling, IMS settings, or Enhanced 4G LTE Services switch. Turn on the HD Voice Only, Voice over LTE, or Enhanced 4G LTE Mode switch.

To turn on video calling, turn on the HD Video Calling or Video Call Over LTE switch. Make an LTE video call If your service provider supports LTE video calling, you can make a video call to contacts who have this feature. 1. In the Phone app, do one of the following: • To dial a number, tap • To call a contact, tap 2. Tap . or , and then enter the number. , and then tap a contact. , and then tap a contact. • To call a speed dial contact, tap Note: Depending on your service provider, you might not be able to make an LTE video call to a contact directly from . Instead, call the contact, and then after the call connects, tap > Video call.

Switch to a voice-only call During a video call, tap . again. To switch back to a video call, tap Switch between the front-facing and rear-facing camera During a video call, do one of the following: • Tap • Tap . > Switch camera. Put a video call on hold During a video call, do one of the following: • Tap • Tap . > Hold call. 25 User Guide Phone and voice Share video one way During a voice call, you can share video with the contact you're talking to, if they also have the LTE video calling feature, but the contact doesn't have to share video with you. 1. 2. During a voice call, tap .

Tap One Way Video or Transmit Video Share. Answer an LTE video call 1. 2. When you receive a call, touch and hold Do one of the following: • To answer the call as a video call, slide your finger until it covers • To answer the call as a voice call, slide your finger until it covers . .

Wi-Fi calling Turn on Wi-Fi calling Your device might be able to make and receive calls over Wi-Fi networks, even if you have limited or no mobile network coverage. Depending on your service provider, this feature might not be supported. Contact your service provider for more information. 1.

2. 3. 4. 5. @@Tap > More > Wi-Fi calling. Turn on the Wi-Fi Calling switch. To see when your device will make Wi-Fi calls, turn on Wi-Fi Calling Status. Tap Wi-Fi calling preferences > Connection preferences. • • • To use a Wi-Fi network, even when you have a cellular signal, tap Wi-Fi preferred. To never use a cellular network and only use a Wi-Fi network, tap Wi-Fi only.

To only use a Wi-Fi network for calls when you don't have a cellular signal, tap Cellular network preferred. 26 User Guide Phone and voice Make a Wi-Fi call Make sure that 1. 2. 3. appears at the top of your screen. . In the Phone app, tap Enter the number. Tap . Voicemail Set up your voicemail Depending on your service provider, this feature might not be supported. Contact your service provider for more info.

1. 2. 3. In the Phone app, in the upper-right corner of the screen, tap Tap Settings > Call settings > Voicemail. Do any of the following: • • • To set up voicemail, tap Setup.

If the Voicemail number field is blank, tap Voicemail number, and then enter your voicemail access number. If you don't have a voicemail access number, contact your service provider. To select a notification profile, tap Sound. To set the voicemail notification to vibrate, select the Vibrate checkbox. .

To call your voicemail from the Phone app, touch and hold 1. Visual Voicemail Visual Voicemail is another way to access and manage your voicemail. In an app, you can see and scroll through your messages on your device. Some Visual Voicemail services can also transcribe your voicemail messages into text and send messages over email and SMS. Your service provider might have a Visual Voicemail app preloaded on your device or available for you to download. 27 User Guide Applications and features Applications and features Find help for apps You can learn about apps, such as BlackBerry Hub, Calendar, BlackBerry Camera, DTEK by BlackBerry, and more, at help.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

blackberry.com. Download an app on Google Play™ 1. 2.

3. 4. Open the Google Play™ store app. If necessary, sign in with your Google™ account. Browse or search for an app that you want to download. Tap the app, and then tap Install. Organizing your home screen Move an app, a widget, or a shortcut around 1. 2. Touch and hold an app, a widget, or a shortcut, and then drag it to a new spot. Release your finger.

Move an app or a shortcut to the favorites tray The favorites tray appears at the bottom of each home screen, giving you easy access to your favorite apps or shortcuts. You can add up to four apps or shortcuts to the favorites tray. 1. 2. If the favorites tray is full, touch and hold one of the apps or shortcuts in the tray.

Drag it to a spot on the home screen. Touch and hold the app or shortcut that you want to add, and then drag it to the favorites tray. Add a home screen You can add as many home screens as you want to organize your apps, widgets, and shortcuts. 1. 28 On the home screen, touch and hold the item that you want to move, and then drag it to the right edge of the screen.

User Guide Applications and features 2. 3. Hold the item at the right edge of the screen until the next home screen appears. If necessary, continue to hold the item until a blank home screen appears. Release your finger. Tip: To view different home screens quickly, tap the circles that appear above the favorites tray, and then slide your finger left or right. Change the default home screen Change the home screen that is displayed when you turn on your device or when you tap Note: You might have to tap 1. 2. twice to open your default home screen. .

On the home screen, touch and hold an empty area on the screen. Above the home screen that you want to set as your default, tap . Delete a home screen If you're not using one of your home screens, you can delete it. If you delete the default home screen, the home screen to the right becomes the default home screen. Note: After you delete a home screen, you can't restore it. 1. 2. On the home screen, touch and hold an empty area of the screen. Touch and hold the home screen that you want to remove, and then drag it to the Remove bar at the top of the screen. Organize apps and shortcuts into folders 1.

2. 3. On the home screen, touch and hold an app or a shortcut. Drag the app or shortcut on top of another app or shortcut that you want to include in the same folder. To name the folder, tap the folder.

Tap New folder, and then enter a name. Change how you view your recent apps and screens When you tap , you see a tiled view, a masonry view, or a rolodex view of your recent apps and screens. You can change the view to suit your preferences. 1. 2.

@ Tap > Display > Recents. 29 User Guide Applications and features 3. 4. Select a view. Tap Done. Uninstall an app or remove an app, a widget, or a shortcut from a home screen If you uninstall an app, the app is no longer available on your device. You must reinstall the app if you want to use it. Some built-in apps can't be uninstalled; instead, you can turn off these apps so that they no longer appear in and so that you no longer receive notifications for them. If you remove an app from the home screen, the app is still installed on your device, and you can open the app from 1. 2.

Touch and hold an app, a widget, or a shortcut. Drag the app, widget, or shortcut toward the top of the screen. ••• To uninstall an app, drag the app toward Uninstall. To turn off an app, drag the app toward Disable. To remove an app, a widget, or a shortcut from the home screen, drag the app toward Remove.™™. You can use the Google Play store to reinstall apps that you uninstall. In the Google Play store, tap > My apps > All. You can turn on apps that you turned off in > Apps. At the top of the screen, swipe left on the categories until you see the Disabled category.

Tap an app, and then tap Enable. Messenger Using Messenger You can use the default Messenger app on your device to send, receive, and manage text messages, including SMS and MMS messages. Send a text message 1. 2. 3.

In the Messenger app, tap . . . In the To field, enter a mobile phone number or start typing a contact's name. In the Send message field, type your message, and then tap Tip: You can add an emoticon by tapping 30 in the message field.

To return to the keyboard, tap User Guide Applications and features Send a multimedia message 1. 2. 3. In the Messenger app, tap Tap . In the To field, enter a mobile phone number or start typing a contact's name. and attach a media file: . To expand the camera view to full screen, tap . , and then touch and hold to record the audio. . • To attach a picture you take, tap • To attach a sticker, tap • To attach your location, tap 4.

Tap . • To attach a picture from your library, tap • To attach an audio message you record, tap . . You can also download other stickers and attach them.

Note: If you close the screen while composing a message, it is saved as a draft. You can tap on the conversation to resume typing the message. Delete a message 1. 2. In the Messenger app, touch and hold the message. Tap > Delete.

Manage conversations 1. 2. In the Messenger app, touch and hold a conversation until a toolbar appears along the top of the screen. Do any of the following:

• To delete a conversation, tap • To add a contact, tap • To block a number, tap . or .

. . • To turn notifications on or off, tap . To return the archived conversation to your message list, touch and hold the • To archive a conversation, tap conversation, and then tap . Search for messages in the Messenger app You can easily search the Messenger app for items, such as a contact, phone number, or message.

31 User Guide Applications and features 1. 2. In the Messenger app, tap . In the Search field, type your search term or terms. About the Google™ app and Now on Tap The Google™ app provides useful information when you need it through Google Now™ cards. Google Now™ cards contain personalized info, such as weather updates for your location, or directions to the next event on your agenda. Now on Tap extends the features of the Google™ app to show you relevant information based on the app that you're using. For example, if you and a friend are using BBM to discuss meeting at a restaurant, Now on Tap can provide a card with ratings for the restaurant or directions to the restaurant. After you set up Now cards in the Google™ app, you can touch and to access Now on Tap. hold For more information about the Google app and Now on Tap, see the Help for the Google app.

Clock Setting the alarm clock Set an alarm 1. In the Clock app, tap • 2. 3. 4. . To set an existing alarm, tap the time shown on the alarm. . • To create a new alarm, tap Tap AM or PM. Tap OK. To adjust the alarm time, tap the hour or minute.

Touch and hold the dial, and then slide the dial to your desired time.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

Create or delete an alarm In the Clock app, do one of the following: •To create an alarm, tap > . > . •To delete an alarm, under the alarm that you want to delete, tap Tip: You can add labels to your alarms to help you remember what each alarm is for. 32 User Guide Applications and features Change your alarm ringtone 1.

2. 3. 4. In the Clock app, tap Select a ringtone. Tap OK.

. > . Under the alarm you want to change, tap Set an alarm for multiple days 1. 2. 3. 4. In the Clock app, tap Under an alarm, tap . . Select the Repeat checkbox. Days that the alarm is set to go off are indicated by a letter inside a white circle.

To add or remove a day, tap its letter. Set the snooze length By default, the alarm snoozes for ten minutes. 1. 2. 3. In the Clock app, tap > Settings > Snooze length. Slide your finger up or down over the numbers. When the number you want appears between the lines, tap OK. Set the silence time By default, the alarm is silenced after ten minutes. 1.

2. 3. 4. In the Clock app, tap Tap Silence after. Tap a time.

Tap OK. > Settings. Use the stopwatch 1. 2. In the Clock app, tap Tap the stopwatch.

33 . User Guide Applications and features ••To stop the stopwatch, tap the stopwatch again. To restart the stopwatch after it's been stopped, tap the stopwatch again. . . •To add a lap, tap •To reset the stopwatch, tap Set the timer 1. 2. 3. In the Clock app, tap To start the timer, tap . .

Enter the time in hours, minutes, and seconds. For example, if you want to set an hour-long timer, type 1 00 00. You can do more than just set your timer: •••••To add an extra minute to your running timer, tap To set another timer, tap To reset a timer, tap To delete a timer, tap . . . , and then tap . Set your home time zone 1. 2. 3. In the Clock app, tap Tap Home time zone.

Tap a time zone. . Tip: If you would like the clock to update automatically to your current location's time zone when you're traveling, select the Automatic home clock checkbox. View the time for other locations You can view the time for multiple locations on the clock screen. 1.

2. 3. 4. In the Clock app, tap Tap Tap . .

. Tap the locations that you want to appear on your clock screen. 34 User Guide Applications and features Remove a location from the clock screen 1. 2. 3. In the Clock app, tap Tap . . Clear the checkbox next to the location that you want to remove. Switch to night mode You can dim your screen and keep the time displayed like a bedside clock by switching to night mode. In the Clock app, do one of the following: •Tap •> Night mode.

Touch and hold anywhere on the clock screen. Change the clock style To view the clock in either digital or analog format, in the Clock app, tap > Settings > Style > Analog or Digital. BlackBerry Device Search Search your device With the BlackBerry Device Search app, you can search your device for files, apps, help, and more. You can also type an Instant Actions command in the search field to perform a task quickly. In the BlackBerry Device Search app, type a search term or an Instant Actions command. Change the search categories To look for a specific type of file, you can specify categories to include in searches. For example, if you are looking for a song, you can clear all of the categories except Music. 1. 2. 3.

In the BlackBerry Device Search app, tap Tap OK. 35 > Settings > Search categories. To choose which categories to include in searches, select or clear the checkboxes. User Guide Applications and features Tip: The Extended Search category searches Internet results, cloud apps (such as Google Drive and Google Play ), other apps on your device, and more. To search only the data on your device, clear the Extended Search checkbox.

™™ Do more with your search results You can perform a variety of actions with items in your search results right in the search results screen. The actions available to you depend on the type of item. For example, if one of the search results is an app, you can open the app directly from the search results screen. 1. 2.

Tap a search result. If necessary, tap an action. Stop saving your search history By default, your device keeps the last 20 search results that you visit for quick reference and reuse. If you don't want to save your search results, you can turn off this feature. 1. 2. In the BlackBerry Device Search app, tap Turn off the Save search history switch. > Settings. Tip: To delete an individual search result, swipe left or right on the result. To clear all of your search history permanently, tap > Settings > Clear search history.

Perform tasks quickly with Instant Actions Instant Actions are shortcuts that allow you to perform tasks quickly. Note: Instant Actions use the input language that is set on your device. 1. 2. In the search field, type a command. From the results, tap the instant action. Make a call You can call a contact or dial a phone number right from the search field. Type phone, dial, or call, and then enter a contact name or phone number. Send an email Type email or mail, and then enter a contact name. 36 User Guide Applications and features Send a text message Type either sms, message, msg, or text, and then enter a contact name or phone number.

Play music Type play, and then enter a song name, artist name, or album name. Get directions Type map, and then enter the name of a business or address. Create a note Type note or memo, and then enter a title for the note. Create a task Type task or todo, and then enter a title. Troubleshooting: BlackBerry Device Search I can't find an email using the BlackBerry Device Search app The BlackBerry Device Search app only searches email that is in the BlackBerry Hub.

To learn how to add email accounts to the BlackBerry Hub, read the Help for the BlackBerry Hub. Location services and Google Maps About location services You can turn on location services so that location-based applications and services, like Google Maps™, can find your location. Location-based applications can use GPS technology and other positioning information to provide you with information, such as driving directions. 37 User Guide Applications and features From the Location settings screen, you can also see the apps that are using location services. If you decide that you don't want an app to know your location, you can turn off location permissions for that app.

For more information about turning app permissions on or off, see the help for Security. Turn location services on or off 1. 2. 3. @@Tap > Location. At the top of the screen, turn the switch on or off. Change location modes With location modes, you can set how accurately your device detects your location. You can choose from the following location modes: •••1. 2. 3.

High accuracy: Uses GPS, Wi-Fi networks, mobile networks, and Google location services to find your location accurately. ™ Battery saving: Uses Wi-Fi networks, mobile networks, and Google location services to find your location, while conserving your battery life.



[You're reading an excerpt. Click here to read official BLACKBERRY](http://yourpdfguides.com/dref/5905661)

[DTEK50 user guide](http://yourpdfguides.com/dref/5905661)

<http://yourpdfguides.com/dref/5905661>

Device only: Uses GPS only to find your location. This mode might use more battery life than battery saving mode, and might not be as fast as high accuracy mode. @@Tap > Location > Mode. Tap an option.™ Turn Location History on or off Location History is a Google service that creates a private map of where you go with your device, and uses the map to give you useful information, such as commute predictions and more relevant search results. 1. 2. 3. 4. @@Tap > Location > Google Location History. If necessary, add your Google™ account. At the top of the screen, turn the switch on or off.™ 38 User Guide Applications and features About Google Maps™ Google Maps™ helps you to find businesses, restaurants, and other places of interest, and can provide you with turn-by-turn directions to your destination.

Find help for Google Maps™ Do one of the following: • In Google Maps™, tap • > Help. Visit the Maps for mobile Help Center at support.google.com/gmm/android. Google Chrome™ and Downloads Find help for Google Chrome™ Visit the Chrome for Android Help Center or, in Google Chrome , tap™ > Help & feedback.

Downloads You can use the Downloads app to manage files that you download from email, BBM messages, hangouts, Google Chrome™, and more. Streamed music and videos don't appear in the Downloads app. Downloads icons Icon Description Delete a downloaded file Share a downloaded file View download as a list or as thumbnails Sort files by name, date, or file size 39 User Guide Applications and features Printing Print from your device You can print webpages, photos, documents, and more from your device using compatible Wi-Fi or Bluetooth enabled printers and printers connected to your computer. Not all applications support printing. 1. 2. 3. In an app, tap > Print. Depending on the app, this option might appear in a different location, or might be called something different, such as Share & export. Tap the top of the screen, and then tap the printer that you want to use.

Tap . Note: You may have to install a printing service and add a printer before you can print. Install a printing service 1. 2. 3. 4. 5. 6. 7. @@Tap > Printing. Tap Add service. Tap the service that's compatible with your printer, and then tap Install. To find a compatible service, find your wireless printer's brand or consult its user guide. Tap twice. Tap the printer service that you just installed.

If the service isn't listed, swipe down from the top of your screen, and then tap the notification for your newly installed printer service. Turn on the switch for that service, and then tap OK. Wait for the service to find printers automatically. Add a printer In most cases, after you install a printer service, your device finds your printer automatically. If your device can't find your printer, you might be able to add it manually.

1. 2. 3. 4. 5. @@Tap > Printing. Tap the printer service for the printer that you want to use. If the printer service is turned off, turn it on. Tap Add printer. Follow the instructions on the screen.

40 User Guide Applications and features Printing using Google Cloud Print™ You can use Google Cloud Print™ to print from your device to a Cloud Ready printer or to any printer that's connected to a computer. To print to a printer that's not Cloud Ready, you must also do the following: • • Make sure that Google Chrome™ is installed on your computer, and then log in to the same Google™ account that you use on your device. When you print, make sure that your computer is turned on. To learn more about setting up and using Google Cloud Print™, see https://support.google.com/cloudprint/. 41 User Guide Settings Settings Change your device settings 1. 2. @@Tap a setting or, to see more settings, tap . Tip: To find a setting quickly, tap , and then type the setting that you're looking for.

Customize the quick settings menu 1. 2. 3. @@Tap • . To move a setting, drag the icon to another position, and then release your finger. , and then release your finger. , and then tap a setting. Do any of the following: • To remove a setting, drag the icon over • To add a setting, tap 4. Tap Save. To use the default quick settings, tap Reset.

Notifications Manage your notifications Notifications let you know about new messages, calendar events, app updates, and more. When you receive a notification, an indicator appears in the upper-left corner of the screen. Check and open your latest notifications 1. 2. 3. 42 Swipe down from the top of the screen with one finger. If necessary, pull down to see more notifications. Tap a notification to open it. User Guide Settings Block or prioritize a notification 1. 2.

3. 4. Swipe down from the top of the screen with one finger. Touch and hold a notification. Tap . Turn on the Block all or Treat as priority switch. Dismiss a notification 1. 2. Swipe down from the top of the screen with one finger. Swipe left or right on a notification.

or Clear All. Note: To dismiss all of your notifications at once, tap Change the volume of your notifications You can quickly access the volume sliders for notifications, media, and alarms when you press the "Volume up/down key" and then tap 1. 2. 3. .

You can also customize the volume from the device settings screen. @@Tap > Sound & notification. Drag any of the sliders to the right or left. Note: The Ring volume slider adjusts the volume for both your ringtone and your notification sounds. If you want to™ control these volumes separately, you can find apps for that in the Google Play store.

Change your notification sounds Note: To change notification sounds and vibration settings for a specific app, look in the Settings screen inside the app. For example, if you want to turn off notification sounds for new emails, open BlackBerry Hub, open the Settings screen, and change the notification settings for your email account. Change the default notification sound The default sound only applies to apps that are set to use the default. 1. 2. @@Tap > Sound & notification > Default notification ringtone. 43 User Guide Settings 3. 4. Tap a notification sound. Tap OK.

To turn sounds on or off for features such as screen locking or the dial pad, tap Other sounds. Turn any of the switches on or off. Add a custom notification sound Note: If your device uses Android for Work, you can't select custom notification sounds for apps inside your work space. 1. 2. 3. Save the .mp3 file you want to use to the Notifications folder in your device's internal storage. When you set the notification sound in an app's settings or change the default notification sound, tap the file name of your .mp3 file.

Tap OK. Turn off all sounds and notifications Do not disturb lets you quickly silence your device when you don't want to be interrupted, like in a movie theater or during an important meeting. You can also choose to receive only certain notifications, like calls or alarms.



[You're reading an excerpt. Click here to read official BLACKBERRY](http://yourpdfguides.com/dref/5905661)

[DTEK50 user guide](http://yourpdfguides.com/dref/5905661)

<http://yourpdfguides.com/dref/5905661>

Turn on do not disturb 1. 2.

3. 4. 5. @@Tap . Tap Total silence, Alarms only, or Priority only.

To change how long do not disturb stays on, tap + or -, or tap Until you turn this off. Tap Done. Tip: You can quickly turn on alarms only mode by pressing the Volume down key until the volume is all the way down, then pressing the key once more. Keep some sounds and notifications on You can use priority only mode to receive the notifications that are most important to you while keeping everything else silent. 1. 2. 3. @@Tap > Priority only > More settings > Priority only allows. Choose the types of notifications you want to keep on. 44 User Guide Settings Turn off all sounds and notifications except calls 1.

2. 3. 4. 5. @@Tap > Priority only > More settings > Priority only allows. Turn off the Reminders and Events switches. Tap Messages > None. Tap Calls > From anyone. Automatically turn on do not disturb at certain times You can automatically turn on do not disturb at regular times or during all events of a certain type in your calendar. 1.

2. 3. 4. 5. @@Tap > Sound and notification > Do not disturb > Automatic rules.

Tap one of the existing rules or add a new one. If necessary, change the rule's settings. If necessary, tap the switch at the top of the screen to turn on the rule.

Customize notifications for an app To change notification sounds and vibration settings for a specific app, look in the Settings screen inside the app. For example, if you want to turn off notification sounds for new emails, open BlackBerry Hub, open the Settings screen, and change the notification settings for your email account.

To change system-level notification settings for individual apps, follow the steps below. 1. 2. 3. 4. @@Tap > Sound & notification > App notifications. Tap an app. Do one of the following: ••••• To stop receiving notifications from the app, turn on the Block all switch. To see notifications from the app at the top of your notifications list, and to receive priority notification interruptions, turn on the Treat as priority switch. If available, to set a custom LED color for the app, turn on the Customize LED Color switch.

Tap LED Color and then tap a color. To stop seeing notifications slide onto the top of your screen, turn off the Allow peeking switch. To hide notification contents on the lock screen, turn on the Hide sensitive content switch. To see this switch, a screen lock option, such as a password, must be set and the option When device is locked on the Sound & notification screen must be set to Show all notification content. 45 User Guide Settings You can grant some apps access to your notifications. Typically, these will be apps that present notifications to you in <sup>TM</sup> another context, like Android Auto or BlackBerry Hub. To see these apps, or to turn access on and off, tap > Sound & notification > Notification access. Tap an app to turn access on or off. Change how notifications are displayed on your lock screen You can customize your settings so that only the notifications that you want to see show up on the screen when your device is locked. Note: Settings that you choose for the lock screen override notifications settings for individual apps.

For information about setting a screen lock, see Set up or change a screen lock. 1. 2. 3. @@Tap ••> Sound & notification > When device is locked.

To get all notifications on the lock screen, including the contents of incoming email messages and chats, tap Show all notification content. To receive a notification, but keep the contents hidden (such as who sent an email or the title of the song you downloaded), tap Hide sensitive notification content. (To see this option, a screen lock option, such as a password, must be set.) To prevent notifications from appearing on the lock screen, tap Don't show notifications at all. Do one of the following: • Add owner info to your lock screen You can add your name, a personal message, or any other information that displays on your device when the screen is locked.

1. 2. 3. @@Tap > Security > Lock screen message. Type your name or the message you want to display on the lock screen and tap Save. BlackBerry Productivity Tab The BlackBerry Productivity Tab provides quick access to your upcoming events, new messages, tasks, and contacts. The tab is available on all device screens. 46 User Guide Settings By default, the tab is turned on and is centered on the right edge of the device screen. If you want to turn off the tab, > Display, and then turn swipe down from the top of the screen once using two fingers, or twice using one finger. Tap off the Productivity Tab switch.

View productivity information and open apps 1. 2. 3. Swipe on the tab toward the center of the screen. Tap an app icon, such as Calendar or Contacts. Do any of the following: ••4. To see more details about an item, tap the notification. To open the app associated with the notification, tap More or Open. You can return to the BlackBerry Productivity Tab screen from an app when you swipe on the tab again. To close the tab, swipe toward the edge of the screen.

Create an item using the BlackBerry Productivity Tab You can add new items, such as calendar events or email messages, right from the BlackBerry

Productivity Tab without opening your calendar or email apps. 1. 2. 3. Swipe on the tab toward the center of the screen.

Tap an app icon. Do one of the following: • To add an event, task, or contact, tap • To compose an email, tap . . Customize the BlackBerry Productivity Tab settings You can adjust the BlackBerry Productivity Tab to best suit your needs and find what works for you. 47 User Guide Settings 1.

2. Swipe in on the tab toward the center of the screen. Tap ••••, and then do any of the following: To remove the tab from your screen, tap Remove. To turn on the tab, in Display settings, turn on the Productivity Tab switch. To change the placement of the tab to another side of your device screen, tap Left edge or Right edge. To change the length of the tab, slide your finger left or right on the Height slider. To adjust the transparency of the tab, slide your finger left or right on the Transparency slider. Tip: By default, the tab is centered on the side of your screen, but you can move the tab up or down along the edge of the screen. Touch and hold the tab, and drag it to your preferred spot. Release your finger to place the tab.

Storage space and media cards Manage your files and folders Search for a file or folder 1. 2. 3. 4. 5. 6. @@Tap > Storage & USB. If necessary, tap Internal storage. Tap Explore. Tap .

. Enter a search term, and then, on the keyboard, tap Share, copy, or delete a file or folder 1. 2. 3. 4.

5. 6. 48 @@Tap > Storage & USB. If necessary, tap Internal storage. Tap Explore.

Touch and hold a file or folder. Do any of the following actions: User Guide Settings • To share a file, tap , and then select how you want to share the file.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>



> Copy to, and then select where you want to copy the file to. Tap Copy. . • To copy a file or folder, tap • To delete a file or folder, tap Tip: To select multiple files or folders, touch and hold a file or folder, and then tap each additional file or folder. To select all of the files in a folder or all of the folders on a screen, touch and hold a file or folder, and then tap > Select all. Sort your files or folders 1. 2. 3.

4. 5. @@Tap > Storage & USB. If necessary, tap Internal storage. Tap Explore. Tap , and then tap By name, By date modified, or By size. , and then tap Grid view or List view. Tip: To change how your files and folders are displayed, tap Using a media card Get more space to store your ringtones, videos, pictures, songs, and more when you insert a microSD card into your device. By using a media card, you can expand your device's storage space by up to 2 TB. Using a media card can also help increase the performance and power efficiency of your device, and can allow you to transfer your data from your current device to another device that supports media card transfers.

To use a media card with a capacity greater than 32 GB, you must download Microsoft exFAT Technology for BlackBerry to install the driver. A notification appears when you insert the media card into your device. Make sure that you are connected to the Internet, and then tap the notification to download the driver. A Class 10 card or faster is required to record videos in Ultra HD (4K). Learn how to insert a media card.

Delete the data from your media card To help protect your privacy, you can format your media card to permanently delete all of the data. Depending on the amount of data, this process might take some time. CAUTION: When you format your media card, you can't recover any of the deleted data. 1. 2.

3. Make sure that your device isn't connected to a computer. @@Tap > Storage & USB. 49 User Guide Settings 4. 5. Tap your media card. Tap > Settings > Format. Remove a media card 1. Do one of the following: • Turn off your device. > Storage & USB.

Tap your media card. Tap 2. > Settings > Eject. • @@Tap Release the tray by pushing the tip of the tool (provided in the box) into the hole on the right side of your device. If you don't have the tool that came with your device, you can also use a paper clip. 3. 4. Pull out the tray completely and remove the media card. Push the tray back into the slot. Check how much storage space is free 1.

2. 3. 4. @@Tap > Storage & USB. If necessary, tap Internal storage.

To see more details about an item in the list, tap the item. For example, to see which apps are using the most storage space, tap Apps. Free up storage space You may notice slower performance on your device if your device's internal storage space is full or almost full. You can try removing unnecessary files and clearing cached data to free up space and improve your device's performance. 50 User Guide Settings 1.

2. 3. 4. @@Tap > Storage & USB. If necessary, tap Internal Storage. Do any of the following: • To disable or uninstall an app that you don't use, tap Apps, and then tap an app. Tap Uninstall. . Tap Disable or • To delete files that you don't need, tap a category or tap Explore. Navigate to a file.

Touch and hold the file. Tap any additional files that you want to delete. Tap . • To delete temporary files from your device by clearing your cache, tap Cached data > OK. Transfer files between your computer and device using a USB connection 1. 2. 3. 4. 5. 6.

7. Using a USB cable, connect your device to your computer. On your device, swipe down from the top of the screen and tap the Connected in charging mode notification. Tap Transfer files (MTP) or Transfer photos (PTP). On your computer, if necessary, enter your device password.

Your device and media card appear as drives on your computer. Go to the files or folders that you want to copy. Drag and drop the files or folders into the desired folders. If necessary, before disconnecting your device, on your computer, right-click your device's drive. Click Eject.

Change how your device connects to your computer Each time you connect your device to your computer, by default, your device connects in charging mode, and a notification appears in the notification tray that tells you which mode is in use. To change the connection mode, your device must be connected to your computer. 1. 2. 3. Swipe down from the top of the screen. Tap the USB connection notification. Select an option. 51 User Guide Settings Connections Wireless connection icons The following icons might appear at the top of your screen to indicate the wireless coverage level that your device currently has. Icon

Description The amount of solid color indicates the strength of the mobile signal.

If the signal is weak, your device might use more power to try to maintain the connection. Your device is connected to the mobile network and can access all of the features of your mobile network plan. Your device is connected to the network type shown, but the network functionality is limited. You might be able to make a phone call, but you might not be able to access the Internet or view email messages. You have no mobile network coverage. You can only make emergency calls. Your device is roaming. Extra charges might apply. The amount of solid color indicates the strength of the Wi-Fi signal. If the signal is weak, your device might use more power to maintain the connection.

Your device is connected to a Wi-Fi network but there is no Internet connectivity. Your device uses the mobile network instead. Wi-Fi is turned off on your device. Your device is connected to a VPN. Your device is in airplane mode and all of your wireless network connections are turned off.

You can turn on Wi-Fi or Bluetooth technology, but not your connection to the mobile network. There is no SIM card in your device. The following icons appear at the top of your screen if your device is connected or trying to connect to another device using mobile hotspot mode, Internet tethering, Bluetooth technology, a USB cable, or NFC. 52 User Guide Settings Icon Description Mobile hotspot mode is turned on. Bluetooth technology is turned on.

If this icon is inside a box, your device is connected to another device using Bluetooth tethering. Your device is connected to another device using a USB cable. If this icon is inside a box, your device is connected to another device using USB tethering. NFC is turned on. Turn on airplane mode When you turn on airplane mode, all of the connections on your device turn off. 1. 2. 3. @@Tap > More. Turn on the Airplane mode switch.

After you turn on airplane mode, you can turn on certain connections, such as Wi-Fi or Bluetooth technology. This feature allows you to connect to a Wi-Fi network on an airplane, for example. Mobile network A mobile network connection allows your device to make calls and, if you have a data plan, use data services such as Internet browsing.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>

If your device is set up for roaming and you travel outside of your service provider's wireless coverage area, in most cases, your device connects to another service provider's wireless network automatically. If you're not sure whether your device is set up for roaming, or what roaming fees apply, check with your service provider before you travel. Connect to the mobile network To connect to the mobile network, airplane mode must be turned off. Your device is designed to connect automatically to your service provider's mobile network after you insert your SIM card into your device. If your device doesn't connect automatically, you can manually select the mobile network. 1. 2.

3. 4. Insert your SIM card into your device. If necessary, swipe down from the top of the screen once using two fingers, or twice using one finger. Tap > More > Cellular networks > Network operators.

Tap a network. 53 User Guide Settings To turn off your mobile network connection, turn on airplane mode. Set a preferred network type 1. 2. 3.

@@Tap > More > Cellular networks > Preferred network type. Tap the type of network you prefer. Switch mobile networks manually If you can't connect to a mobile network or if the network signal is weak, you can try switching networks manually. 1. 2. 3. @@Tap > More > Cellular networks > Network operators. Tap a network. Turn off data services over the mobile network To turn off data services, you must have a SIM card in your device. If you turn off data services, your device can't send or receive data over the mobile network and many features and apps might not work correctly.

1. 2. 3. 4. @@Tap > Data usage. If necessary, tap the Cellular tab. Turn off the Cellular data switch. To turn on data services, turn on the Cellular data switch. Turn off data services while roaming Depending on your wireless service plan, you might be able to turn off data services (email messages, PIN messages, text messages with attachments, and browser service) on your device so that only the phone and basic text messaging are available. Turning off data services while roaming might prevent you from receiving additional roaming charges.

For more information, contact your service provider. 1. 2. 3. 4.

54 @@Tap > More > Cellular networks. Tap Data services while roaming. Do one of the following: User Guide Settings •• To turn off data services, tap Off. To receive a prompt before using data services while roaming, tap Prompt. To turn on data services while roaming, tap On.

Change the APN settings for your default Internet connection Your device uses Access Point Name (APN) settings to open a data connection with your service provider's wireless network. You might need to change your APN settings if you change your wireless service plan or if the default settings don't apply to your service provider. Depending on your service provider, you might not be able to change the APN settings. 1. 2. 3. @@Tap > More > Cellular networks > Access Point Names. Do one of the following: • To create a new APN, tap • 4. 5. Tap .

To change an existing APN, tap an APN. > Save. > Reset to default. Complete the fields. If you don't have the required information, contact your service provider. To reset the default APN settings, tap Change your wireless service plan To change your wireless service plan, you must have a SIM card in your device. Depending on your service provider, you might not be able to change the details of your wireless service plan from your device. 1. 2. 3.

@@Tap > More > Mobile plan. Complete the instructions on the screen. Troubleshooting: Mobile network I can't connect to the mobile network Try the following: •• Check that airplane mode is turned off. @@Tap > More. Check that the Airplane mode switch is turned off.

Try switching to another mobile network. Learn how to switch mobile networks manually. 55 User Guide Settings • Check that the SIM card is inserted correctly in your device. Learn how to insert the SIM card. Wi-Fi network A Wi-Fi network connection allows your device to use data services, but unlike using the mobile network, using Wi-Fi doesn't add charges to your data plan.

When you connect to a Wi-Fi network, your device saves the network information. The next time your device is within range of the saved Wi-Fi network, and Wi-Fi is turned on, your device can connect to the network automatically. Your device can be connected to the mobile network and a Wi-Fi network at the same time. For basic data functions, such as using the Internet or downloading apps, your device is designed to try to use a saved Wi-Fi network before it tries to use the mobile network. Keep in mind that if you leave Wi-Fi turned on, your battery might lose power more quickly. Connect to a Wi-Fi network 1. 2. 3. 4. 5.

@@Tap > Wi-Fi. If necessary, turn on the switch. Tap a network. If necessary, do one of the following: •• Enter the password for the Wi-Fi network, and then tap Connect. To connect to a Wi-Fi network at work, enter your username and password, and then tap Connect. • To connect to a public network, tap the sign-in notification and, if necessary, accept the license agreement. If necessary, tap > Use this network as is. Add a Wi-Fi network manually If your device doesn't connect automatically to a saved Wi-Fi network, you can set up a connection to a Wi-Fi network manually. If you don't have the required information, ask your network administrator or the person who manages the Wi-Fi network. 1. 2. 3. 4. 5. 6.

7. 8. 56 @@Tap Tap > Wi-Fi. > Add network. If necessary, turn on the switch.

In the Network field, type the SSID for the network. In the Security drop-down list, tap the network's security type. If necessary, tap Advanced options and specify additional information. Tap Save. User Guide Settings Connect to a Wi-Fi network using a proxy You can connect to any Wi-Fi network using a proxy. You must be within range of the Wi-Fi network to change the proxy settings. 1. 2. 3. 4.

5. 6. 7. @@Tap > Wi-Fi. If necessary, turn on the switch. Touch and hold a network. Tap Modify network. Tap Advanced options. You might need to slide your finger up to see this option. In the Proxy drop-down list, do one of the following: ••8.

To set up a proxy, tap Manual, and then enter the proxy settings. To use a proxy already set up for the network, tap Proxy Auto-Config, and then confirm the proxy settings. Tap Save. Delete a saved Wi-Fi network If you don't want your device to connect to a Wi-Fi network automatically, you can delete the information used to connect to the network. 1.

2. 3. 4. @@Tap > Wi-Fi. If necessary, turn on the switch.

Tap a network, and then tap Forget. Set a static IP address for a Wi-Fi connection You must be within range of your Wi-Fi network to change the IP settings. By default, when you connect your device to a Wi-Fi network, your device assigns an IP address to the connection.



[You're reading an excerpt. Click here to read official BLACKBERRY DTEK50 user guide](http://yourpdfguides.com/dref/5905661)  
<http://yourpdfguides.com/dref/5905661>