



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT BAHAMAS MP46. You'll find the answers to all your questions on the BLAUPUNKT BAHAMAS MP46 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLAUPUNKT BAHAMAS MP46**  
**User guide BLAUPUNKT BAHAMAS MP46**  
**Operating instructions BLAUPUNKT BAHAMAS MP46**  
**Instructions for use BLAUPUNKT BAHAMAS MP46**  
**Instruction manual BLAUPUNKT BAHAMAS MP46**

 Radio | CD | MP3 | WMA

Bahamas MP46

7 646 490 510

Operating and installation instructions  
Notice d'emploi et de montage  
Instrucciones de manejo e instalación  
Instruções de serviço e de montagem  
操作及安装手册  
사용 및 장착 설명서



<http://www.blaupunkt.com>

 **BLAUPUNKT**



[You're reading an excerpt. Click here to read official BLAUPUNKT BAHAMAS MP46 user guide](http://yourpdfguides.com/dref/3300356)  
<http://yourpdfguides.com/dref/3300356>

**Manual abstract:**

@@@You cannot switch the device on or off with the remote control. @@The information hotline numbers are printed on the last page of these instructions. CD changers You can connect the following Blaupunkt CD changers: CDC A 03, CDC A 08 and IDC A 09. U Only operate your car sound system if the road and traffic conditions allow you to do so. U Familiarise yourself with the device before setting off on your journey. You should always be able to hear police, fire and ambulance sirens in good time from inside your vehicle. U For this reason, listen to your car sound system at a suitable volume level during your journey. If you want to install your car sound system yourself, please read the installation and connection instructions that follow these operating instructions. The device is equipped with a detachable control panel (Flip-Release Panel) as a way of protecting your equipment against theft. The device is worthless to a thief without this control panel.

Protect your device against theft by taking the control panel with you whenever you leave your vehicle. Do not leave the control panel inside your vehicle - not even in a hiding place. Never expose the control panel to direct sunlight or other heat sources. Avoid direct skin contact with the control panel's electrical contacts. If necessary, please clean the contacts with a lint-free cloth moistened with cleaning alcohol.

For instructions, please read the section "Switch-off time (OFF TIMER)" in this chapter. Any CD already inserted in the device remains there. @@@@U Carefully flip up the control panel until it clicks into place. @@@@After opening the control panel, the device is switched off after an adjustable time. You can set this time from 0 to 30 seconds.

@@Note: If you set the switch-off time to 0 seconds, the device is switched off immediately after opening the control panel. There are various ways of switching the device on/off: Switching on/off using button 1 U To switch on the device, press button 1. the device switches on. U To switch off the device, press and hold down button 1 for longer than 2 seconds. the device switches off. Switching on/off using the vehicle ignition The device will switch on/off simultaneously with the ignition if the device is correctly connected to the vehicle's ignition as shown in the installation instructions and you did not switch the device off by pressing button 1. Note: To protect the vehicle battery, the device will switch off automatically after one hour if the ignition is off. You can adjust the volume in increments from 0 (off) to 66 (maximum). For example, if you press the MENU button 9 and select a menu item, the device switches back after approx. To help you adjust the setting more easily, the device will increase or decrease the volume as you make your changes.

If you enable "LAST VOL", the volume which was set the last time you switched off the device is re-enabled. You can quickly reduce the volume to a preset level (Mute). Cancelling mute To return to your previously set volume level, u Briefly press button 1 again. Adjusting the mute level You can adjust the mute level. If the volume before switching off was higher and the "LAST VOL" setting was selected, the device switches on again with the value "38". @@When you have finished making your changes u Press the MENU button 9 three times. Note: Using the volume control 3, you can adjust the volume for telephone calls and voice output directly during the playback. If your car sound system is connected with a cell phone or navigation system, the car sound system is muted when you "pick up" the phone or during a voice output of the navigation and the call or the voice output is played back via the car sound speaker system. For this purpose, the cell phone or the navigation system must be connected to the car sound system as described in the installation instructions. Your Blaupunkt dealer can provide you with the information which navigation system can be used with your car sound system.

You can adjust the volume with which you switch on the telephone calls or the voice output of the navigation. @@The system will output a confirmation beep for some functions if you keep a button pressed down for longer than 2 seconds, for instance, when assigning a radio station to a station preset button.

@@This function automatically adjusts the volume of the car sound system to the vehicle speed. For this purpose, the car sound system must be connected as described in the installation instructions. You can adjust the automatic sound in 6 increments from (0 - 5).

U Set the automatic sound 0 - 5 with the or button :. @@@@Determine the perfect value for your vehicle using trial and error. @@@@ the tuner is factory-set to the region in which it was sold. @@U Select your tuner region with the or button :. @@ 8 seconds.

@@@Or u Press the SOURCE button 4 repeatedly until the memory bank, e. @@@@Six stations can be stored in each memory bank. @@@@There are various ways of tuning into a station. automatic station seek tuning u Press the or button :. The radio tunes into the next receivable station. @@ to change the set frequency in small increments, u Briefly press the or button :. To change the set frequency quickly, u Press and hold down the or button : for a longer period of time. U Press and hold down one of the station 16 buttons ; for longer than 2 seconds to assign the station to that button. You can use the scan function to play all the receivable stations briefly. You can set the scanning time in the menu to between 5 and 30 seconds.

Starting SCAN u Press and hold down the MENU button 9 for longer than 2 seconds. Scanning stops and the radio continues playing the station that it tuned into last. The stations are stored in the FMT or AM memory bank, depending on preset waveband. Note: Any stations that were previously stored in this memory bank are deleted in the process. After the process has completed, the radio will play the station stored in memory location 1 of the previously selected memory bank. The stored station is played if it can be received. @@You can use this device to play standard Audio-CDs, CD-Rs and CD-RWs with a diameter of 12 cm. To avoid problems when playing self-burned CDs, you should not burn CDs at speeds greater than 16speed. CD singles with a diameter of 8 cm and noncircular contoured CDs (shape CDs) must not be used. We accept no responsibility for any damage to the CD drive that may occur as a result of the use of unsuitable CDs.

To ensure proper functioning, use only CDs with the Compact-Disc logo. copy-protected CDs can cause playback problems. Blaupunkt cannot guarantee the proper functioning of copy-protected CDs! Besides being able to play audio CDs on this device, you can also play CDs containing MP3/WMA music files. For further information, please read the chapter entitled "MP3/WMA mode". U Press and hold DISPL button 8 longer than 2 seconds to switch the display mode. After 2 seconds the display automatically switches back to the previous display.



**[You're reading an excerpt. Click here to read official BLAUPUNKT BAHAMAS MP46 user guide](http://yourpdfguides.com/dref/3300356)**  
<http://yourpdfguides.com/dref/3300356>

U Gently insert the CD with its printed side uppermost into the drive until you feel some resistance. You must not hinder or assist the drive as it draws in the CD. @@ the CD starts playing and "CD" appears on the display. @@@@Playback begins from the point at which it was last interrupted. @@The next randomly selected track will then be played. @@ note: You can set the scanning time. @@@@The currently scanned track will then continue to be played normally. @@@@If you want to repeat a track, u Press the 4 RPT button ;. @@@@The track is repeated until you deactivate Repeat. @@Some CDs include so called CD text. @@ cD text is displayed in the second line of the display. CD text is displayed in running text at every track change. @@@@You can also play WMA files. @@@@The next track will then be scanned.

"SCAN TRACK" briefly appears on the display. Then the directory number and track number are displayed. @@@@The currently scanned track will then continue to be played normally. @@ "REPEAT TRACK" and REPEAT appear briefly on the display. To repeat the whole directory, u Press the 4 RPT button ; for longer than 2 seconds. "REPEAT DIRECTORY" appears briefly on the display and "REPEAT" is displayed. Cancelling repeat To stop the current track or current directory from being repeated, u Briefly press the 4 RPT button ;. Note: Information on handling CDs, inserting CDs and operating the CD changer can be found in the operating instructions supplied with your CD changer. The device starts playing the first CD that the CD changer detects. To repeat the current track, u Briefly press the 4 RPT button ;.

"REPEAT TRACK" appears briefly and REPEAT lights up on the display. To repeat the current CD, u Press and hold down the 4 RPT button ; for longer than 2 seconds. "REPEAT DISC" appears briefly and REPEAT lights up on the display. Cancelling repeat To stop the current track or current CD from being repeated, u Briefly press the 4 RPT button ;. To move up or down to another CD, u Press the or button : once or several times.

To play the tracks on the current CD in random order, u Briefly press the 5 MIX button ;. "MIX DISC" appears briefly and MIX lights up on the display. To play the tracks on all inserted CDs in random order, u Press and hold down the 5 MIX button ; for log is switched on. @@@@You can set the viewing angle to adjust the device to the mounting position within your vehicle. @@You can decide, whether display contents should be viewed in positive or negative mode. @@@@U Press the or button : to move the selection mark behind the other colours. U Adjust the other colour components to suit your preferences.

@@Audio sources can, for example, be portable CD players, MiniDisc players or MP3 players. If you want to connect an external audio source, you will need an adapter cable. You can obtain this cable (Blaupunkt no. @@To be able to adjust for differences in volume, the level adjustment of the AUX input can be adjusted in 4 increments (0 to 3). @@@@ 5 - 107. @@@@ Make sure you do not damage vehicle components when drilling any holes. The cross sections of the positive and negative cables must not be less than 1. You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer.

Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline. When installing an amplifier or changer, you must first connect the device earth connections before connecting the plugs for the line-in or line-out jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). Speaker out RR+ Speaker out RRSpeaker out RF+ Speaker out RFSpeaker out LF+ Speaker out LFSpeaker out LR+ Speaker out LR- Please keep the filled-in radio pass in a safe place! .



[You're reading an excerpt. Click here to read official BLAUPUNKT BAHAMAS MP46 user guide](http://yourpdfguides.com/dref/3300356)  
<http://yourpdfguides.com/dref/3300356>