



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT BRIGHTON MP34. You'll find the answers to all your questions on the BLAUPUNKT BRIGHTON MP34 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLAUPUNKT BRIGHTON MP34**  
**User guide BLAUPUNKT BRIGHTON MP34**  
**Operating instructions BLAUPUNKT BRIGHTON MP34**  
**Instructions for use BLAUPUNKT BRIGHTON MP34**  
**Instruction manual BLAUPUNKT BRIGHTON MP34**

OK Radio / CD / MP3

**Brighton MP34** 7 644 190 310  
**Dresden MP34** 7 644 193 310

Operating instructions

<http://www.blaupunkt.com>

**BLAUPUNKT**



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

**Manual abstract:**

For adjusting the X-BASS function and activating/deactivating it. @@: Briefly display the clock time. @@35 Detachable control panel (flip-release panel)

.....  
.....  
.... 36 Switching on/off .  
.....  
..... 37 Adjusting the volume .  
.....  
.....  
.. 38 Radio mode .....  
.....  
.....  
.....  
40 Switching to radio mode .....  
..... 40 Convenient RDS functions ....  
.....  
.... 40 Selecting the waveband / memory bank .  
.....  
.....  
.....  
.. 41 Tuning into a station .....  
.....  
.....  
41 Setting the sensitivity of station seek tuning .....  
.....  
.....  
.....  
.....  
.. 42 Storing stations .....  
.....  
.....  
.....  
42 Storing stations automatically (Travelstore) .....  
.....  
.....  
.....  
.... 42 Listening to stored stations .....  
..... 42 Scanning receivable stations (SCAN) ....  
.....  
.....  
.....  
.....  
.. 42 Setting the scanning time ...  
.....  
.....  
.. 43 Programme type (PTY) .....  
.....  
.... 43 Optimising radio reception .  
.....  
.....  
.. 44 Configuring the display .....  
.....  
.....  
.....  
44 Naming CDs .....

.....	
.....	
.....	
... 48 Ejecting a CD .....	
.....	
.....	
.....	
..... 49 MP3 mode .....	
.....	
.....	
.....	
..... 50 Preparing an MP3-CD .....	
.....	
.... 50 Switching to MP3 mode .	
.....	
.....	
51 Selecting a directory .....	
.....	
.....	
.. 51 Selecting tracks/files .....	
.....	
... 51 Fast searching ..	
.....	
.....	
.... 51 Random track play (MIX) .	
.....	
..... 52 Scanning tracks (SCAN) .	
.....	
.... 52 Repeating individual tracks or whole directories (REPEAT) .	
.....	
..... 52 Pausing playback (PAUSE) .....	
.....	
..... 52 Configuring the display ...	
.....	
.....	
..... 53 CD-changer mode .....	
.....	
.. 54 Switching to CD-changer mode ...	
.. 54 Selecting CDs ...	
.....	
.....	
.....	
... 54 Selecting tracks ..	
.....	
.....	
.....	
. 54 Fast searching (audible) ....	
.....	
.....	
.. 54 Configuring the display .....	
.....	
.....	
54 Repeating individual tracks or whole CDs (REPEAT) .....	
.....	
.....	



.....  
.....  
.....  
... 59 External audio sources ..  
..... 60 Specifications ..

.....  
.....  
.....  
.. 60 34 NOTES AND ACCESSORIES Thank you for choosing a Blaupunkt product. We hope you enjoy using this new piece of equipment. Please read these operating instructions before using the equipment for the first time. The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the device, please contact your dealer or the telephone hotline for your country. You will find the telephone number printed at the back of this booklet. We provide a manufacturer guarantee for our products bought within the European Union. You can view the guarantee conditions at [www.blaupunkt.de](http://www.blaupunkt.de)

or ask for them directly at: Blaupunkt GmbH, Hotline CM/PSS, Robert Bosch Str. 200, D-31139 Hildesheim Germany If you want to install your car sound system yourself, please read the installation and connection instructions that follow these operating instructions. DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Installation Accessories Only use accessories approved by Blaupunkt. Remote control The optional RC08 or RC10 remote control allows you to access the most important functions of your car sound system safely and conveniently from your steering wheel. Amplifiers You can use all Blaupunkt and Velocity amplifiers. CD changers You can connect the following Blaupunkt CD changers: CDC A 08, IDC A 09 and CDC A 03. Compact Drive MP3 You can connect the Compact Drive MP3 instead of a CD-changer in order to play MP3 music tracks. If you decide to connect a Compact Drive MP3, you will first need to use a computer to store the MP3 music tracks on the Microdrive™ hard disk that is inside the Compact Drive MP3. Then, when the Compact Drive MP3 is connected to the car sound system, you can play the tracks like normal CD music tracks.

You can operate the Compact Drive MP3 in the same way as a CD changer. Most of the CD-changer functions can also be used with the Compact Drive MP3. 35 Road safety Road safety has absolute priority. Only operate your car sound system if the road and traffic conditions allow you to do so. Familiarise yourself with the device before setting off on your journey.

You should always be able to hear police, fire and ambulance sirens from afar. For this reason, listen to your car sound system at a reasonable volume level during your journey. DETACHABLE CONTROL PANEL Detachable control panel (flip-release panel) Theft protection The device is equipped with a detachable control panel (flip-release panel) as a way of protecting your equipment against theft. The device is worthless to a thief without this control panel.

Protect your device against theft by taking the control panel with you whenever you leave your vehicle.

Do not leave the control panel inside your vehicle not even in a hiding place. The control panel has been designed to be easy to use. Note: Never drop the control panel. Never expose the control panel to direct sunlight or other heat sources. Avoid direct skin contact with the control panel's electrical contacts. If necessary, clean the contacts with a lint-free cloth and some alcohol. Note: The device will switch off after a particular time period configured by you. For further details, read the section entitled "OFF TIMER" in this chapter. All the current settings are saved. Any CD already inserted in the device remains there.

Attaching the control panel Hold the control panel at approximately right angles to the device. Slide the control panel into the device's guides that are positioned on the left and right at the lower edge of the housing. Push the control panel carefully into the bracket until it clicks into place. Detaching the control panel Press the button 1. The control panel opens out towards you. Flip up the control panel and carefully press it into the device until it clicks into place. Hold the control panel by its right side and then pull the control panel straight out of the bracket. 2. 1. 36 CONTROL PANEL Note: When attaching the control panel, make sure you do not press the display.

If the device was still switched on when you removed the control panel, it will automatically switch on with the last settings activated (i.e. radio, CD/MP3, CD changer or AUX) when the panel is replaced. SWITCHING ON/OFF There are various ways of switching the device on/off: Switching the device on/off using the vehicle ignition If the device is correctly connected to the vehicle's ignition and you did not switch it off by pressing button 2, the device will switch on/off simultaneously with the ignition. Switching the device on/off using the detachable control panel DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Switching on/off Off timer After you detach the control panel, the device will switch off after a preset time period.

You can set this time to between 0 and 30 seconds. Detach the control panel. The device switches off. Note: The device will switch off after a preset time period. For further details, read the section entitled "Off timer".



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

Press the MENU button 9. Press the or button 8 repeatedly until "OFF TIMER" appears in the display. Adjust the time using the buttons 8. When you have finished making your changes, Attach the control panel again. The device switches on. The last setting (radio, CD/MP3, CD changer or AUX) will be reactivated. Switching on/off using button 2 press the MENU button 9 twice. Note: If you set the off-timer to 0 seconds, the device will switch off immediately as soon as you open the control panel. To switch on the device, press button 2. To switch off the device, press and hold down button 2 for longer than two seconds.

The device switches off. Note: To protect the vehicle battery, the device will switch off automatically after one hour if the ignition is off. 37 SWITCHING ON/OFF Switching on by inserting a CD If the device is switched off and there is no CD present in the drive, press the button 1. The flip-release panel opens. @@The drive draws in the CD automatically. You must not hinder or assist the drive as it draws in the CD. @@The device switches on and starts playing the CD. ADJUSTING THE VOLUME Adjusting the volume You can adjust the volume in steps from 0 (off) to 66 (maximum). To increase the volume, turn the volume control 4 clockwise. To decrease the volume, turn the volume control 4 anticlockwise.

Setting the power-on volume You can set the device's default poweron volume. Press the MENU button 9. Press the or button 8 repeatedly until "ON VOLUME" appears in the display. Note: If the ignition was switched off before you inserted the CD, you will first have to switch on the device by pressing button 2 in order to start playing the CD. Adjust the power-on volume using the buttons 8.

To help you adjust the setting more easily, the device will increase or decrease the volume as you make your changes. If you change the setting to "LAST VOL", the volume when the device switches on will be the same as the volume level that was set the last time you switched the device off. Note: To protect your hearing, the poweron volume is limited to a value of "38". If the volume level was higher than this when the device was last switched off and the "LAST VOL" setting is activated, the system will reset the volume to "38" when you switch the device on again. 38 ADJUSTING THE VOLUME DEUTSCH DANSK

PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH When you have finished making your changes, Switching the confirmation beep on/off The system will output a confirmation beep for some functions if you keep a button pressed down for longer than two seconds, for instance, when assigning a radio station to a station preset button.

You can switch the beep on/off. press the MENU button 9 twice. Instantaneously decreasing the volume (mute) You can instantaneously decrease the volume (mute) to a level preset by you. Briefly press button 2. "MUTE" appears in the display. Cancelling mute To return to your previously set volume level, Press the MENU button 9. Press the or button 8 repeatedly until "BEEP" appears in the display. Configure the bds. There are three memory banks available for the FM waveband (FM1, FM2 and FMT) and one for each of the MW and LW wavebands. Six stations can be stored in each memory bank.

To switch between the FM memory banks (FM1, FM2 and FMT) and the MW and LW wavebands, briefly press the BND-TS button 3. Browsing through broadcasting networks (only FM) If a radio station provides several programmes, you have the option of browsing through its so-called "broadcasting network". Note: The RDS function must be activated before you can use this feature. Press the or button 8 to switch to the next station on the broadcasting network. Note: When using this feature, you will only be able to switch to stations that you have received once before already. To receive the stations, use the Scan or Travelstore function. 41 RADIO MODE Setting the sensitivity of station seek tuning You can choose whether the radio should only tune into stations providing good reception or whether it can also tune into those with a weak reception. Storing stations automatically (Travelstore) You can automatically store the six stations providing the best reception in the region (only FM). The stations are stored in the FMT memory bank. Note: Any stations that were previously stored in this memory bank are deleted in the process.

Press the MENU button 9. Press the or button 8 repeatedly until "SENS" appears in the display. Press the button 8. Press and hold down the BND-TS button 3 for longer than two seconds. The storing procedure begins.

"FM TSTORE" appears in the display. After the process has completed, the radio will play the station that is stored in memory location 1 of the FMT memory bank. The display shows the currently set sensitivity level. "SENS HI6" means that the tuner is set to the highest sensitivity setting. "SENS LO1" means it is set to the lowest sensitivity setting.

Set the sensitivity level that you buttons 8. want using the When you have finished making your changes, press the MENU button 9. Note: You can set different sensitivity levels for FM and MW or LW (AM). Listening to stored stations Select the memory bank or waveband. Press the station button 1 - 6 : that corresponds to the station that you want to listen to. Storing stations Storing stations manually Scanning receivable stations (SCAN) You can use the scan function to briefly play all the receivable stations. You can set the scanning time in the menu to between 5 and 30 seconds. Starting SCAN Select the memory bank (i.e. FM1, FM2, FMT) that you want or one of the wavebands (MW or LW).

Tune into the station that you want. Press and hold down one of the station buttons 1 - 6 : for longer than two seconds to assign the station to that button. 42 Press and hold down the MENU button 9 for longer than two seconds. RADIO MODE Scanning begins. "SCAN" appears briefly in the display followed by a flashing display of the current station name or frequency. Cancelling SCAN and continuing listening to a station DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH You can use the PTY function to select stations of a particular programme type. PTY-EON If you specify the programme type and start seek tuning, the radio will switch from the current station to a station of the selected programme type. Note: If the tuner does not find a station that corresponds to the selected programme type, you will hear a beep and "NO PTY" appears briefly in the display. The radio will then retune to the station that it received last. If the tuned radio station or another station on the broadcasting network broadcasts your selected programme type at a later point in time, the radio will automatically switch from the currently tuned station or from CD/MP3 mode or CDchanger mode to the station whose programme type matches the one you selected.



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

Press the MENU button 9. Scanning stops and the radio continues playing the station that it tuned into last. Setting the scanning time Press the MENU button 9. Press the or button 8 repeatedly until "SCAN TIME" appears in the display. Set the scanning time that you buttons 8. want using the When you have finished making your changes, press the MENU button 9 twice. Note: The scanning time that you set is also applied by the system to scanning carried out in CD/MP3 and CD-changer mode. Switching PTY on/off Programme type (PTY) Besides transmitting the station name, some FM stations also provide information on the type of programme that they are broadcasting. Your car radio can receive and display this information. For example, the programme types can be: CULTURE TRAVEL JAZZ SPORT NEWS POP ROCK CLASSICS Press the MENU button 9. Press the or button 8 repeatedly until "PTY ON" or "PTY OFF" appears in the display. Press the or button 8 to switch PTY ON or OFF. Press the MENU button 9. 43 RADIO MODE Selecting the PTY language You can select the language in which the programme types are displayed. The following are available: "DEUTSCH", "ENGLISH" and "FRANÇAIS". Optimising radio reception Treble reduction feature during interference (HICUT) The HICUT function improves reception during poor radio reception (only FM). If interference occurs, the system automatically reduces the treble thus reducing the interference level. Switching HICUT on/off Press the MENU button 9. Press the or button 8 repeatedly until "HICUT" appears in the display. Press the or button 8 to adjust the HICUT setting.

"HICUT 0" means that no automatic reduction of the treble and interference level will be made; "HICUT 1" means that a maximum reduction will be made. Press the MENU button 9. Press the or button 8 repeatedly until "PTY LANG" appears in the display. Set your preferred language using buttons 8. the When you have finished making your changes, press the MENU button 9 twice. Selecting a programme type and starting seek tuning Press the or button 8. The current programme type appears in the display. Press the MENU button 9. Configuring the display In radio mode you have the option of displaying the waveband together with the memory location and the time or the station name. Press the MENU button 9.

Press the or button 8 repeatedly until "TUN DISP" appears in the display. Press the or button 8 to switch between "CLOCK" and "FREQUENCY". Select "FREQUENCY" if you want to display the station name / frequency. If you want to select another programme type, you can do so by pressing the or button 8 whilst this display is visible. The selected programme type appears briefly in the display.

Press the or button 8 to start seek tuning. The radio will then tune into the next station that it finds that corresponds to your selected programme type. Press the MENU button 9 twice. 44 TRAFFIC INFORMATION Your device is equipped with an RDSEON receiver. EON stands for Enhanced Other Network.

Whenever a traffic announcement (TA) is broadcast, the system switches automatically from a station that does not provide traffic reports to the appropriate traffic information station within the broadcasting network that does. Once the traffic report has been played, the system will switch back to the programme that you were listening to before. DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Traffic information If you hear the warning sound, you can either switch off traffic information priority or tune into a station that broadcasts traffic information.

Setting the volume for traffic announcements Press the MENU button 9. Press the or button 8 repeatedly until "TA VOLUME" appears in the display. Adjust the volume using the buttons 8. When you have finished making your changes, Switching traffic information priority on/off Briefly press the TRAF button 5.

Traffic announcement priority is active when a traffic-jam symbol lights up in the display. Note: You will hear a warning sound: if you leave the reception area of a traffic information station that you are currently listening to, if, while listening to a CD/MP3 or CD in the changer, you leave the reception area of a traffic information station that the system is tuned into, and the subsequent automatic search cannot find a new traffic information station.

if you retune the radio from a traffic information station to a station that does not broadcast traffic information. press the MENU button 9 twice. Note: Using the volume control 4, you can also adjust the volume during a traffic announcement for the duration of that announcement. Note: You can adjust the sound settings and volume distribution settings for traffic announcements. For further details, refer to the chapter entitled "Sound". 45 CD MODE CD mode You can use this device to play standard audio CDs, CD-Rs and CD-RWs with a diameter of 12 or 8 cm. Besides being able to play audio CDs on this device, you can also play CDs containing MP3 music files. For further details, read the chapter entitled "MP3 mode". Risk of severe damage to the CD drive! Contoured CDs (shape CDs) are not suitable for playback in this unit. @@@@The flip-release panel opens.

@@The drive draws in the CD automatically. You must not hinder or assist the drive as it draws in the CD. @@@The next randomly selected track will then be played. Cancelling MIX Press the 5 MIX button : again. @@The track is repeated continuously until you deactivate RPT.

@@@@The next track will then be played briefly. Note: You can set the scanning time. @@@@Cancelling pause button : while in pause mode.

@@@@@@@Displaying CD text Some CDs include CD text. The CD text might contain the names of the artist, album and tracks. @@@@@@@@The names can be up to eight characters long. @@Entering/editing CD names Press the MENU button 9. Press the or button 8 repeatedly until "CD TEXT" appears in the display. Switch the CD text function on ("TEXT ON") or off ("TEXT OFF") using the or button 8. When you have finished making your changes, Listen to the CD that you want. Press the MENU button 9. Use the / buttons 8 to select "CD NAME". Press the or button 8 twice. press the MENU button 9 twice. You will now enter editing mode.

If your CD has not been named yet, eight underscores will appear in the display. The currently active input position flashes. Use the / buttons 8 to select the character that you want. If you want an empty space, simply select the underscore. 48 CD MODE DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Use the or button 8 to move from one input position to another.



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

MENU button 9 twice. To save the name, press the Deleting a CD name Continue holding the button pressed down until you hear a second beep and "DEL ALL" appears in the display. Let go of the MENU button 9. The CD names will be deleted. Listen to the CD whose name you want to delete. Press the MENU button 9 to return to the menu. Press the MENU button 9. Use the / buttons 8 to select "CD NAME". Ejecting a CD Press the button 1. The flip-release panel opens out towards you.

Press the or button 8. Press and hold down the MENU button 9. You will hear a beep after four seconds and "DEL NAME" appears in the display. Press the eject button ; next to the CD compartment. The CD is ejected.

Let go of the MENU button 9. The CD name will be deleted. Remove the CD and close the control panel. Note: If a CD is ejected, the drive will automatically draw it back in again after 10 seconds. You can also eject CDs whilst the device is switched off or whilst another audio source is activated. Press the MENU button 9 to return to the menu. Deleting all CD names You can delete all the CD names stored in the car sound system. Listen to a CD. Press the MENU button 9. Use the / buttons 8 to select "CD NAME".

Press the or button 8. Press and hold down the MENU button 9. You will hear a beep after four seconds and "DEL NAME" appears in the display. 49 MP3 MODE MP3 mode You can also use this car sound system to play CD-Rs and CD-RWs that contain MP3 music files. MP3 is a process developed by the Fraunhofer Institute for compressing CD audio data. Compression allows data to be reduced to around 10% of their original size without a noticeable loss in quality (at a bit rate of 128 kbit/s). If a lower bit rate is used to convert CD audio data to MP3, you will be able to create smaller files but this will be accompanied by a loss in audio quality. This device supports as many subdirectories as your burner software can create despite the fact that the maximum directory depth defined by the ISO 9660 standard is only 8. D01 D02 D03 T001 T002 T003 T004 T005 T001 T002 T003 T004 T005 T006 D04 T001 T002 T003 T004 T005 T006 T007 T008 T009 T010 T011 D i r e c t o r i e s Preparing an MP3-CD The various combinations of CD burners, CD burning software and CD blanks may lead to problems arising with the device's ability to play certain CDs. If problems occur with your own burned CDs, you should try another brand of CD blank or choose another colour of CD blank.

The format of the CD must be ISO 9660 Level 1 / Level 2 or Joliet. Other formats cannot be played reliably. You can create a maximum of 253 directories on a CD. You can use this device to access each of these directories. Regardless of the number of directories on the CD, the device can handle up to 65,535 MP3 files on a single CD - even if they are all stored in one directory.

T r a c k s · F i l e s You can name each directory using a PC. The device is capable of displaying the directory name. Name the directories and tracks/files using your CD burner software. The software's instruction manual will provide details on how to do this. Note: When naming directories and tracks/files you should avoid using accents and special characters.

You can use a maximum of 32 50 MP3 MODE characters (including the ".MP3" file extension) for track names and directory names. If you like your files to be in the correct order, you should use burner software that places files in alphabetical order. If your software does not provide this feature you also have the option of sorting the files manually. To do so, you should place a number (e.g. "001", "002", etc.) at the beginning of each file name - you must include the leading zeros. MP3 tracks can contain additional information such as the artist, album and track names (ID3 tags). This device can display ID3 tags if they are version type 1.

When creating (encoding) MP3 files from audio files, you should use bit rates up to a maximum of 256 kbits/sec. This device can only play MP3 files that have the ".MP3" file extension. Note: To ensure uninterrupted playback, do not try changing the file extension to ".MP3" of any files other than MP3 files and then attempt to play them! (The device will ignore these invalid files during playback.) Do not use "mixed" CDs containing both non-MP3 data and MP3 tracks (the device will only read MP3 files during MP3 playback). Do not use mix-mode CDs containing both CD-audio tracks and MP3 tracks. If you try playing a mixmode CD, the device will only play the CD-audio tracks. MP3 mode is activated in the same way as normal CD mode. For further details, please read the section entitled "Switching to CD mode" in the "CD mode" chapter.

DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Switching to MP3 mode Selecting a directory To move up or down to another directory, press the or button 8 once or several times. Note: The device will automatically skip any directories that do not contain MP3 files. The device will automatically correct the number of directories for the display. This new number will therefore no longer be identical to the number of directories that you actually created. Selecting tracks/files To move up or down to another track/ file in the current directory, or button 8 once or several times.

If you press the button 8 once, the current track will be played again from the beginning. press the Fast searching To fast search backwards or forwards, press and hold down the or button 8 until fast searching backwards / forwards begins. 51 MP3 MODE Random track play (MIX) To play the tracks in the current directory in random order, Stopping SCAN and continuing listening to a track Briefly press the MENU button 9. The currently scanned track will then continue to be played normally. briefly press the 5 MIX button :.

"MIX DIR" appears in the display and the MIX symbol lights up. To play all the tracks on the inserted MP3-CD in random order, Repeating individual tracks or whole directories (REPEAT) To play the current track repeatedly, press and hold down the 5 MIX button : for longer than two seconds. "MIX CD" appears in the display and the MIX symbol lights up. Cancelling MIX To cancel MIX, briefly press the 4 RPT button :. "RPT TRCK" appears briefly in the display and RPT lights up. To repeat the whole directory, press and hold down the 4 RPT button : for longer than two seconds. "RPT DIR" appears briefly in the display. Cancelling REPEAT To stop the current track or current directory from being repeated, briefly press the 5 MIX button :. "MIX OFF" appears in the display and the MIX symbol disappears. Scanning tracks (SCAN) You can briefly play all the tracks on the CD.



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

briefly press the 4 RPT button : "RPT OFF" appears briefly and RPT disappears from the display. Press and hold down the MENU button 9 for longer than two seconds. The next track will then be played briefly. "TRK SCAN" appears in the display alongside the flashing track numbers. The tracks on the CD are briefly played in ascending order. Note: You can set the scanning time. For further details on setting the scanning time, please read the section entitled "Setting the scanning time" in the "Radio mode" chapter. 52 Pausing playback (PAUSE) Press the 3 button : "PAUSE" appears in the display. Cancelling pause button : while in pause mode. Playback is resumed. Press the 3 MP3 MODE Configuring the default display You can display various types of information on the current track: Track number and playing time ("TRCK-TIME") Track number and clock time ("TRCK-CLK") Directory number and track number ("DIR-TRCK") Directory number and clock time ("DIR-CLK") Directory number and playing time ("DIR-TIME") After you switch tracks, the device first displays the MP3 scrolling text once and then it displays the above information continuously. To switch between the different display options, DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Configuring the display After the device has displayed the scrolling text it returns to the default display (see above). The available display options are: Directory name File name Artist name Track name Album name Note: The artist, track and album names are part of the MP3-ID tag (version 1) and can only be displayed if they have been saved with the MP3 files (for further information, read the instructions that came with your PC's MP3 software or burner software).

To switch between the different display options, press the MENU button 9. Press the or button 8 repeatedly until "CD DISP" appears in the display. press the MENU button 9. Press the or button 8 repeatedly until "MP3 DISP" appears in the display. or button 8 to select the type of MP3 scrolling text that you want. When you have finished making your changes, Select the option that you want using the or button 8. When you have finished making your changes, Using the press the MENU button 9 twice. Configuring the MP3 scrolling text You can configure the device to display one of the following scrolling texts every time you change the track. The device displays the scrolling text once. press the MENU button 9 twice. 53 CD-CHANGER MODE CD-changer mode Note: Information on handling CDs, inserting CDs and operating the CD changer can be found in the operating instructions supplied with your CD changer. Configuring the display There are five display options available for CD-changer mode: · Track number and playing time · Track number and clock time · CD number and track number · CD number and playing time · CD number and clock time Switching to CD-changer mode Press the SRC ( ) button 7 repeatedly until "CHANGER" appears in the display. The device starts playing the first CD that the CD changer detects. Press the MENU button 9. Press the or button 8 repeatedly until "CDC DISP" appears in the display.

or button 8 repeatedly until the option that you want appears in the display. Selecting CDs To move up or down to another CD, Press the press the or button 8 once or several times. Press the MENU button 9 twice. Repeating individual tracks or whole CDs (REPEAT) To repeat the current track, Note: The device will ignore empty CD slots in the changer and slots containing invalid CDs. briefly press the 4 RPT button : "RPT TRCK" appears briefly and RPT lights up in the display. To repeat the current CD, Selecting tracks To move up or down to another track on the current CD, press the or button 8 once or several times. press and hold down the 4 RPT button : for longer than two seconds. "RPT DISC" appears briefly and RPT lights up in the display. Fast searching (audible) To fast search backwards or forwards, press and hold down one of the buttons 8 until fast searching backwards / forwards begins.

54 CD-CHANGER MODE DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Cancelling REPEAT To stop the current track or current CD from being repeated, briefly press the 4 RPT button : "RPT OFF" appears and RPT disappears from the display. Stopping SCAN To stop scanning, briefly press the MENU button 9. The currently scanned track will then continue to be played normally. Note: You can set the scanning time.

Random track play (MIX) To play the tracks on the current CD in random order, briefly press the 5 MIX button : "MIX CD" appears briefly and MIX lights up in the display. To play the tracks on all inserted CDs in random order, press and hold down the 5 MIX button : for longer than two seconds. "MIX ALL" appears briefly and MIX lights up in the display. Cancelling MIX Briefly press the 5 MIX button : "MIX OFF" appears and MIX disappears from the display. Pausing playback (PAUSE) Press the 3 button : "PAUSE" appears in the display. Cancelling pause button : while in pause mode. Playback is resumed. Press the 3 Scanning all tracks on all CDs (SCAN) To briefly play all the tracks on all the inserted CDs in ascending order, press and hold down the MENU button 9 for longer than two seconds. "TRK SCAN" appears in the display and the number of the current track flashes. 55 CLOCK - TIME CLOCK - Time Displaying the clock time To briefly display the clock time, Press the or button 8 to switch between the modes. When you have finished making your changes, Press and hold down the SRC ( ) button 7 until the clock time appears in the display. press the MENU button 9.

Displaying the time continuously when the device is off and the ignition is on To display the time when the device is off and the vehicle ignition is on, Setting the clock time To set the clock time, press the MENU button 9. Press the or button 8 repeatedly until "CLOCK SET" appears in the display. button 8. press the MENU button 9. "MENU" appears in the display. Press the Press the The time appears in the display. The hours flash and can be adjusted. or button 8 repeatedly until "CLOCK OFF" or "CLOCK ON" appears in the display. Adjust the hours using the buttons 8. Once the hours are set, / Press the press the button 8. / The minutes flash. or button 8 to switch between the ON/OFF settings. When you have finished making your changes, Adjust the minutes using the buttons 8. press the MENU button 9.



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>

Briefly displaying the time when the device is switched off To briefly display the time when the device is off, Press the MENU button 9 twice. Selecting 12/24-hour clock mode Press the MENU button 9. "MENU" appears in the display. press the SRC ( ) button 7. The time is displayed for eight seconds. Press the or button 8 repeatedly until "24 H MODE" or "12 H MODE" appears in the display.

56 SOUND You can adjust the sound settings (bass and treble) separately for each audio source (radio, CD/MP3, CD changer, AUX and traffic announcements). The volume distribution settings (balance and fader) apply to all the audio sources. Note: You can only adjust the sound settings for traffic announcements whilst a traffic announcement is actually being played. DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Sound Setting the left/right volume distribution (balance) To adjust the left/right volume distribution (balance), press the AUDIO button 6. "BASS" appears in the display. Press the Press the button 8 repeatedly until "BAL" appears in the display. or button 8 to adjust the balance (right/left). When you have finished making your changes, Adjusting the bass Press the AUDIO button 6. "BASS" appears in the display. or button 8 to adjust the bass.

When you have finished making your changes, press the AUDIO button 6. @@@@To select an equalizer preset, X-BASS X-BASS The X-BASS feature can be used to boost the bass at low volume levels. Note: You can adjust the X-Bass settings separately for each audio source (radio, CD/MP3, CD changer and AUX). Adjusting the X-BASS boost settings You can set the X-BASS boost in steps ranging from 1 to 3. "XBASS OFF" means that the X-BASS feature is switched off. press the AUDIO button 6. "BASS" appears in the display. Press the button 8 repeatedly until "POP", "ROCK", "CLASSIC" or "OFF" appears in the display. or button 8 to select one of the presets or select "OFF" to switch off the equalizer. If you select one of the presets, SOUND lights up in the display together with the selected setting.

When you have finished making your changes, Press the Press the AUDIO button 6. "BASS" appears in the display. Press the press the AUDIO button 6. button 8 repeatedly until "XBASS" appears in the display together with the current setting. or button 8 repeatedly until the setting that you want appears in the display.

When you have finished making your changes, Press the press the AUDIO button 6. 58 LEVEL DISPLAY Configuring the level display The level display temporarily provides you with a symbolic representation of the volume and audio settings whilst you are adjusting them. When you are not changing any settings, the level display depicts the sound system's output level. You can switch the level display on/off. BRIGHTNESS (DIMMER) DEUTSCH DANSK PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH Adjusting the brightness (dimmer) The display brightness will change when the headlights are turned on/off if your car sound system is connected as described in the installation instructions and your vehicle is equipped with the appropriate connections.

You can adjust the display brightness separately for night and day in steps ranging from 1 to 9. We recommend a setting of "6". Press the MENU button 9. "MENU" appears in the display. Press the MENU button 9. "MENU" appears in the display. Press the or button 8 repeatedly until "PEAK LVL" appears in the display. Press the Press the or button 8 to switch between "PEAK ON" and "PEAK OFF". When you have finished making your changes, or button 8 repeatedly until "DIM DAY" or "DIM NIGHT" appears in the display. Press the press the MENU button 9 twice.

or button 8 to switch between the brightness levels. When you have finished making your changes, press the MENU button 9 twice. 59 EXTERNAL AUDIO SOURCES External audio sources Instead of connecting a CD changer, you can connect another audio source equipped with a line output. Audio sources can, for example, be portable CD players, MiniDisc players or MP3 players. The AUX input must be activated in the menu. If you want to connect an external audio source, you will need an adapter cable. You can obtain this cable (Blaupunkt no.: 7 607 897 093) from your authorised Blaupunkt dealer.

SPECIFICATIONS Specifications Amplifier Output power: 4 x 25 watts sine in accordance with DIN 45 324 at 14.4 V 4 x 45 watts max. power Tuner Wavebands in Europe: FM : 87.5 - 108 MHz MW : 531 - 1602 kHz LW : 153 - 279 kHz FM frequency response: 35 - 16,000 Hz Switching the AUX input on/off Press the MENU button 9. "MENU" appears in the display. Press the or button 8 repeatedly until "AUX OFF" or "AUX ON" appears in the display. CD Frequency response: 20 - 20,000 Hz Press the or button 8 to switch AUX on/off.

When you have finished making your changes, Pre-amp Out 4 channels: 3V press the MENU button 9. Note: If the AUX input is switched on, you can select it by pressing the SRC button 7. Input sensitivity AUX input : 2 V / 6 k Subject to changes! 60 Service-Nummern / Service numbers / Numéros du service après-vente / Numeri del servizio di assistenza / Servicenumbers / Telefonnummer für service / Números de servicio / Número de serviço / Servicenunre Country: Germany Austria Belgium Denmark Finland France Great Britain Greece Ireland Italy Luxembourg Netherlands Norway Portugal Spain Sweden Switzerland (D) (A) (B) (DK) (FIN) (F) (GB) (GR) (IRL) (I) (L) (NL) (N) (P) (E) (S) (CH) Phone: 0180-5000225 01-610 39 0 02-525 5444 44 898 360 09-435 991 01-4010 7007 01-89583 8880 0030-210 94 27 337 01-4149400 02-369 62331 40 4078 023-565 6348 66-817 000 01-2185 00144 902-120234 08-7501500 01-8471644 02-6130 0441 01-333 9575 0800-118922 0212-3350677 Fax: 05121-49 4002 01-610 39 391 02-525 5263 44-898 644 09-435 99236 01-4010 7320 01-89583 8394 0030-210 94 12 711 01-4598830 02-369 62464 40 2085 023-565 6331 66-817 157 01-2185 11111 916-467952 08-7501810 01-8471650 02-6130 0514 01-324 8756 022-8771260 0212-3460040 708-6817188 +55-19 3745 2773 +604-6413 640 WWW: <http://www.blaupunkt.com> Czech. Rep. (CZ) Hungary (H) Poland (PL) Turkey USA Brasil (Mercosur) (TR) (USA) 800-2662528 (BR) +55-19 3745 2769 Malaysia (Asia Pacific) (MAL) +604-6382 474 Blaupunkt GmbH 12/03 CM/PSS 8 622 403 878 .



[You're reading an excerpt. Click here to read official BLAUPUNKT BRIGHTON MP34 user guide](http://yourpdfguides.com/dref/3330824)  
<http://yourpdfguides.com/dref/3330824>