



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT CUPERTINO 220. You'll find the answers to all your questions on the BLAUPUNKT CUPERTINO 220 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLAUPUNKT CUPERTINO 220**  
**User guide BLAUPUNKT CUPERTINO 220**  
**Operating instructions BLAUPUNKT CUPERTINO 220**  
**Instructions for use BLAUPUNKT CUPERTINO 220**  
**Instruction manual BLAUPUNKT CUPERTINO 220**



[You're reading an excerpt. Click here to read official BLAUPUNKT CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)  
<http://yourpdfguides.com/dref/4260109>

**Manual abstract:**

.....  
.....  
.....  
.....

..... 5 Cleaning notes ...

.....  
.....  
.....

.....  
.....  
.....

..... 5 Disposal notes...

.....  
.....  
.....  
.....

.....  
.....

... 5 Scope of delivery ..

.....  
.....  
.....  
.....  
.....

.... 5 Optional equipment (not part of the scope of delivery) .....

.....  
.....

..... 5 Placing the device in operation ...

.....  
.....  
.....

5 Attaching/detaching the control panel .....

.. 5 Setting the reception area .....

.....  
.....  
.....

..... 6 Switching on/off .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.... 6 Volume .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.....  
.....  
.... 6 Display brightness.

.....  
.....  
.....

.....  
.. 6 Switching demo mode on/off...

.....  
... 7 Traffic information ..

.....  
.....  
.....

..... 7 Radio mode ...

.....  
.....  
.....

.....  
.....  
.....

.. 7 RDS.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.... 7 Changing to radio mode or selecting a memory bank.

.....  
.....

.....  
.....  
.....

.....  
.....

. 7 Tuning into a station ....

.....  
.....  
.....  
.....

.... 8 Storing stations or calling stored stations .....

.. 8 Scanning stations ...



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
.....12 Interrupting playback .....

.....  
.....  
.....  
.....

.....12 Scanning all tracks .

.....  
.....  
.....

.....  
.....  
.....

.....12 Playing tracks in random order .

.....  
.....  
.....

.....12 Repeatedly playing individual tracks or directories .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.12 Configuring the display.....

.....  
.....  
.....

..12 Browse mode ...

.....  
.....

.....  
.....  
.....  
.....

..13 External audio sources ...

.....  
.....

.....  
.....  
.....

.. 14 Front AUX-IN socket...

.....  
.....

.....  
.....  
.....

.....14 Sound settings .....

.....  
.....  
.....

.....  
.....  
.....

... 14 Calling and exiting the "AUDIO" menu .....

.....14 Making settings in the "AUDIO" menu.....

...15 User settings ..

.....  
.....  
.....  
.....  
.....

..... 15 Calling the user menu and selecting a menu.

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..15 Making settings in the "TUNER" menu .....

...15 Making settings in the "DISPLAY" menu .....

...17 Making settings in the "VOLUME" menu ..

.....  
.....  
.....

.17 Making settings in the "CLOCK" menu .....

...17 Making settings in the "VARIOUS" menu .....

.18 Factory settings ....

.....  
.....  
.....

.....  
.....  
.....

..... 18 Useful information ...

.....  
.....  
.....  
.....

..... 19 Warranty ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
..19 Service ...  
.....

19 Technical data .....

.... 19 Installation instructions .

20 3 Safety notes Safety notes The car sound system was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions. These instructions contain important information to easily and safely install and operate the car sound system. · Read these instructions carefully and completely before using the car sound system. · Keep the instructions at a location so that they are always accessible to all users. · Always pass on the car sound system to third parties together with these instructions. In addition, observe the instructions of the devices used in conjunction with this car sound system. Road safety Observe the following notes about road safety: · Use your device in such a way that you can always safely control your vehicle. In case of doubt, stop at a suitable location and operate your device while the vehicle is standing.

· Remove or attach the control panel only while the vehicle is standing. · Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e. g. police sirens). During mute phases (e. g. when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase. General safety notes Observe the following notes to protect yourself against injuries: · Do not modify or open the device. The device contains a Class 1 laser that can cause injuries to your eyes.

· Do not increase the volume during mute phases, e. g. when changing the audio source. Changing the volume is not audible during a mute phase. Do not increase the volume during mute phases, e. g. when changing the audio source. Use as directed This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist.

Installation instructions You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the installation instructions at the end of these instructions. Symbols used These instructions employ the following symbols: DANGER! Warns about injuries CAUTION! Warns about damaging the CD drive DANGER! Warns about high volume The CE mark confirms the compliance with EU directives. u Identifies a sequencing step · Identifies a listing 4 Safety notes \ Cleaning notes \ Disposal notes \ Scope of delivery \ Placing the device in operation Declaration of conformity Blaupunkt AudioVision GmbH & Co. KG certifies that the car sound system Cupertino 220 meets the basic requirements and other relevant regulations of the Directive 2004/108/EEC. The declaration of conformity can be found on the Internet under [www.blaupunkt.com](http://www.blaupunkt.com). Optional equipment (not part of the scope of delivery) Use only accessories approved by Blaupunkt. Information is available from your Blaupunkt specialised dealer or on the Internet under [www](http://www.blaupunkt.com).

blaupunkt.com. Cleaning notes Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system. · Use only a dry or slightly moistened cloth for cleaning the car sound system. · If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol. Placing the device in operation Attention Transport securing screws Before the startup of the car sound system, ensure that the transport securing screws are removed (see the chapter "Installation instructions"). Attaching/detaching the control panel The car sound system is equipped with a detachable control panel (release panel) to protect your equipment against theft. In the delivery state, the control panel is in the supplied case. To start operating the radio after installation, you must first attach the control panel (see the section "Attaching the control panel" in this chapter). Always take the control panel with you when leaving the vehicle.

The car sound system is worthless to a thief without this control panel. Caution Damage to the control panel Never drop the control panel. Transport the control panel so that it is protected against impacts and the contacts cannot become dirty. Do not expose the control panel to direct sunlight or another heat source. Avoid direct skin contact with the control panel's electrical contacts.

Disposal notes Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device. Scope of delivery The scope of delivery includes: 1 Car sound system 1 Operating/installation instructions 1 Case for the control panel 1 Support frame 1 Antenna

connection adapter 2 Disassembly tools Extended scope of delivery (only for 1 011 202 221): 1 Handheld remote control (incl. battery) 1 Connecting cable chamber A 1 Connecting cable chamber B 5 Placing the device in operation Attaching the control panel u Push the control panel into the bracket at the right edge of the device. u Push the control panel carefully into the left bracket until it clicks into place.



[You're reading an excerpt. Click here to read official BLAUPUNKT CUPERTINO 220 user guide](#)

<http://yourpdfguides.com/dref/4260109>



Removing the control panel u Press the button 1 to unlock the control panel.

The left side of the control panel detaches from the device and is secured by the bracket against falling out. u Move the control panel slightly to the left until it disengages from the right bracket. u Carefully remove the control panel from the left bracket. Note: The car sound system automatically switches off as soon as the control panel is removed. Note: If you switch on the car sound system while the vehicle ignition is switched off, it automatically switches off after 1 hour to preserve the vehicle battery. Switching on/off via vehicle ignition The car sound system will switch off/on simultaneously with the ignition if the device is correctly connected to the vehicle's ignition as shown in the installation instructions and you did not switch the device off by pressing the On/Off button 3. Volume Adjusting the volume You can adjust the volume in steps from 0 (off) to 50 (maximum). u Turn the volume control 4 to change the volume. Note: If a telephone is connected with the car sound system as described in the installation instructions, the car sound system is muted in case of a phone call. During muting, the display shows "TELEPHONE".

Muting the car sound system (Mute) u Briefly press the On/Off button 3 to mute the car sound system or to reactivate the previous volume. During muting, the display shows "MUTE". Setting the reception area This car sound system is designed for operation in different regions with different frequency ranges and station technologies. The factory default of the reception area is "EUROPE". In addition, the reception areas "USA", "S-AMERICA" and "THAILAND" are available. Note: If you operate the car sound system outside of Europe, you may first have to set a suitable reception area in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "AREA"). Display brightness You can manually switch the display brightness between daytime mode and night-time mode or switch automatically with the driving lights of the vehicle. Note: The manual or automatic mode in the "TUNER" menu", menu item "BAND" (band selection)). Deactivated memory banks are skipped during the source selection with the SRC button = Scanning stations With the scan function, you can scan either every receivable station or the stored stations of the current waveband. Note: You can adjust the scan time for each station (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "SCAN").

Scanning receivable stations u Press the MENU button 2 for approx. 2 seconds to start scanning. During the scan, the display alternately displays "SCAN" and the current frequency as well as memory bank or station name. u Briefly press the MENU button 2 to continue listening to the station that is currently being received. Scanning stored stations u Press the / button 7 for approx.

2 seconds to start scanning. During the scan, the display shows the memory location and the current frequency or station name. u Briefly press the / button 7 to continue listening to the station that is currently being scanned. Tuning into a station There are various ways of tuning into a station: Tuning into stations manually u Briefly press the / button 7 once or several times to incrementally change the frequency. Starting station seek tuning u Press the / button 7 for approx.

2 seconds to start station seek tuning. The radio tunes into the next receivable station. Notes: · For the reception area "EUROPE": In the FM waveband, only traffic information stations are tuned into if the priority for traffic information is switched on. mation ( · The sensitivity of seek tuning can be adjusted (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "SENS"). · If PTY is switched off, you can also start station seek tuning by pressing the / button 7. Storing stations or calling stored stations u Select the desired memory bank. u If necessary, set the desired station. u Press the station button 1 - 5 ; for approx. 2 seconds to store the current station under the button. - or u Briefly press the station button 1 - 5 ; to call up the stored station.

Storing stations automatically (Travelstore) With Travelstore, you can automatically search for and store the 5 FM stations offering the strongest reception in the region in one memory bank. Any previously stored stations in this memory bank are deleted in the process. With Travelstore, you can store 5 FM stations in the FMT memory bank in all reception areas. In the reception areas "USA", "S-AMERICA" and "THAILAND", you can also store 5 AM stations in the AMT memory bank. u Select a memory bank of the desired waveband, e. g. FM1 or AM. 8 Radio mode u Press the SRC button = for approx. 2 seconds. The tuner starts the automatic station seek tuning; the display shows "FM TSTORE" or "AM TSTORE". After the storing is completed, the radio plays the station at memory location 1 of the FMT or AMT level.

Notes: · For the reception area "EUROPE": If the priority for traffic information is switched on ( ), only traffic information stations are stored. · If the FMT or AMT memory bank is deactivated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "BAND"), it is automatically reactivated if you initiate the Travelstore function. Searching for stations u Press the / button 7. During the seek tuning, the currently selected programme type is shown on the display. As soon as a station with the desired programme type is found, it remains being tuned into.

Notes: · If no station with the selected programme type is found, "PTY NONE" is briefly displayed and 2 beeps can be heard. The radio will then retune to the station that it played last. · If the tuned radio station or another station on the broadcasting network broadcasts your selected programme type at a later point in time, the car sound system will automatically switch from the currently tuned station or from the current audio source (e. g. CD) to the station whose programme type matches the one you selected.

Note that this function is not supported by all stations. PTY In the reception areas "EUROPE" and "USA", an FM station can transmit its current programme type, e. g. CULTURE, POP, JAZZ, ROCK, SPORT or SCIENCE. Hence, the PTY function allows a targeted search for broadcasts of a certain programme type, e. g. for rock or sports broadcasts. Note that PTY is not supported by all stations. Note: The PTY function is only available if it has been activated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY").



[You're reading an excerpt. Click here to read official BLAUPUNKT CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)  
<http://yourpdfguides.com/dref/4260109>

Selecting a programme type To select a programme type.

read the section "Making settings in the "TUNER" menu", menu item "PTY TYPES" in the chapter "User settings". Note: In the reception area "EUROPE", you can adjust the language in which the programme types are displayed (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY LANG"). Configuring the display u Press the DIS button > to toggle between these displays: Display ABCDEF FM1 102.90 or P1 102.90

FM1 18:30 or P1 18:30 Meaning Station name Memory bank/frequency or Memory location/frequency Memory bank/time or Memory location/time 9 CD/MP3/WMA/iPod mode CD/MP3/WMA/iPod mode Basic information CD/MP3/WMA mode This car sound system can be used to play audio CDs (CDDA) and CD-R/RWs with audio, MP3 or WMA files as well as MP3 or WMA files on USB data carriers. Notes: · To ensure proper functioning, use only CDs with the Compact-Disc logo. · Blaupunkt cannot guarantee the flawless function of copy-protected CDs and all CD blanks and USB data carriers available on the market. Note the following information when preparing an MP3/WMA data carrier: · Naming of tracks and directories: Max. 32 characters without the file extension ".mp3" or ".wma" (the use of more characters reduces the number of tracks and folders that the car sound system can recognise) No umlauts or special characters · CD formats: audio CD (CDDA), CD-R/RW, Ø: 12 cm · CD data formats: ISO 9669 Level 1 and 2, Joliet · CD burn speed: Max. 16x (recommended) · USB format/file system: Mass storage device / FAT16/32 · File extension of audio files: .MP3 for MP3 files .WMA for WMA files · WMA files only without Digital Rights Management (DRM) and created with Windows Media Player version 8 or later · MP3 ID3 tags: Version 1 and 2 · Bitrate for creating audio files: MP3: 32 to 320 kbps WMA: 32 to 192 kbps · Depending on the data structure on the USB medium, up to 20,000 entries can be managed. iPod mode You can connect numerous iPod and iPhone models to the car sound system via the USB port and control the audio playback from the car sound system. Note: Blaupunkt cannot guarantee the flawless function of all iPod and iPhone models. Use a suitable adapter cable to connect your iPod or iPhone with the USB port of the car sound system. Changing to CD/MP3/WMA/iPod mode u Press the SRC button = repeatedly until the desired audio source is displayed: · "CD": Inserted CD · "USB": Connected USB data carrier · "IPOD" / "IPHONE": Connected iPod / iPhone · "AUX": Connected external audio source Notes: · The respective audio source can be selected only if a corresponding CD is inserted or a corresponding device is connected. · A connected iPod is initially selected under "USB" and as soon as the iPod has been recognised under "IPOD". · If the car sound system first has to read the data of a connected device or data carrier before the playback, the display shows "READING".

The duration of the reading depends on the data volume and design of the device or data carrier. If the device or data carrier is defective or the transferred data cannot be played back, a corresponding message appears on the display (e. g. "CD ERROR"). 10 CD/MP3/WMA/iPod mode Inserting/ejecting a CD Inserting a CD Risk of severe damage to the CD drive! Noncircular contoured CDs (shape CDs) and CDs with a diameter of 8 cm (mini CDs) must not be used. @@@@The drive automatically draws in the CD and checks its data. Afterwards, the playback starts in CD or MP3 mode. @@2 seconds. @@u Press the button 8 to eject an inserted CD. @@10 seconds.

@@@u Connect the USB data carrier. u Turn on the car sound system. @@@@u Disconnect the USB data carrier. @@@@.g. @@@@u Press the MENU button 2 for approx. @@@@.2 The file name is displayed only in MP3/WMA mode. @@Browse mode in MP3/WMA mode In MP3/WMA mode, you can select and play a track from a directory of the data carrier. u Press the 1 LIST button ; to call up the browse mode in the MP3/WMA mode. icon flashes on the display. In addition, the icon (folder) or icon (track) appears.

The first or current folder on the data carrier is being displayed. Notes: · The first folder is displayed only if the browse mode has been called for the first time after inserting or connecting the data carrier. Afterwards, the current folder is displayed whenever the browse mode is called. · You can exit the browse mode at any time by pressing the 1 LIST button ;. u Press the / button 7 once or several times or hold the button pressed to select a different folder. u Press the button 7 to display the tracks of the selected folder. The first track of the folder is shown on the display. Note: Pressing the button 7 returns you to the folder list. u Press the / button 7 once or several times or hold the button pressed to select a different track. u Press the button 7 to play the track. The playback starts. You are exiting the browse mode. Browse mode in iPod mode In iPod mode, you can select and play back the tracks via the categories "ARTISTS", "ALBUMS", "GENRES" or "PLAYLISTS". u Press the 2 ID3 button ; to call up the Browse mode in the iPod mode. icon flashes on the display. In addition, the icon (categories) or the icon (track) appears. The first category, "ARTISTS", is displayed. Notes: · Press the 2 ID3 button ; for approx. 2 seconds to directly call up the "PLAYLISTS" category. · You can exit the browse mode at any time by pressing the 2 ID3 button ;.

u Press the / button 7 once or several times to select a different category. u Press the button 7 to display the available folders of the category. The first folder of the selected category is shown on the display (e.g. "JAZZ" in the "GENRES" category). Note: Pressing the button 7 returns you to the list of categories. u Press the / button 7 once or several times or hold the button pressed to select a different folder. u Press the button 7 to display the available tracks of the folder. The first track of the folder is shown on the display. Note: Pressing the button 7 returns you to the list of folders. u Press the / button 7 once or several times or hold the button pressed to select a different track. u Press the button 7 to play back the track. The playback starts. You are exiting the browse mode. 13 CD/MP3/WMA/iPod mode \ External audio sources \ Sound settings Fast browsing Fast browsing enables faster access to tracks.

Instead of the arrow keys 7, you use the volume control 4 and the On/Off button 3 to select and confirm list entries: Function Selecting entries in lists Confirming entries Return to the higher level Browse mode / 7 7 7 As soon as an external audio source, such as a portable MP3 player is connected to the front AUX-IN socket ;, it can be selected with the SRC button =.

u Press the / button 7 once or several times to select a different category. u Press the button 7 to display the available folders of the category. The first folder of the selected category is shown on the display (e.g. "JAZZ" in the "GENRES" category). Note: Pressing the button 7 returns you to the list of categories. u Press the / button 7 once or several times or hold the button pressed to select a different folder. u Press the button 7 to display the available tracks of the folder. The first track of the folder is shown on the display. Note: Pressing the button 7 returns you to the list of folders. u Press the / button 7 once or several times or hold the button pressed to select a different track. u Press the button 7 to play back the track. The playback starts. You are exiting the browse mode. 13 CD/MP3/WMA/iPod mode \ External audio sources \ Sound settings Fast browsing Fast browsing enables faster access to tracks.

Instead of the arrow keys 7, you use the volume control 4 and the On/Off button 3 to select and confirm list entries: Function Selecting entries in lists Confirming entries Return to the higher level Browse mode / 7 7 7 As soon as an external audio source, such as a portable MP3 player is connected to the front AUX-IN socket ;, it can be selected with the SRC button =.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/4260109)

[CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)

<http://yourpdfguides.com/dref/4260109>

"AUX" then appears on the display. Fast browse mode Volume control 4 On/off button 3 7 Sound settings The following sound settings can be changed in the "AUDIO" menu: · Adjusting bass and treble · Setting the left/right volume distribution (Balance) or front/rear (Fader) · Selecting a sound profile (Presets) · Adjusting the switch-on delay for connected amplifiers Fast browsing is switched on or off in the user menu (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "BROWSE"). Note: With activated fast browsing, you cannot change the volume in browse mode or mute the car sound system. To do so, first exit the browse mode by pressing the button 1 LIST ; or 2 ID3 ; or starting the track playback. Calling and exiting the "AUDIO" menu u Briefly press the MENU 2 button to open the user menu. u Press the / button 7 repeatedly until the "AUDIO" menu item is selected. u Press the button 7 to open the "AUDIO" menu. u Press the / button 7 repeatedly until the desired menu item is selected. u Perform the setting (see the next section). u Briefly press the MENU button 2 to exit the menu. Notes: · The menu is automatically exited approx. 16 seconds after the last button activation and you are returned to the display of the current audio source. · In the menu, you can press the button 7 in each case to return to the higher menu level. External audio sources Front AUX-IN socket Danger! Increased risk of injury from connector.

In case of an accident, the protruding connector in the front AUX-IN socket may cause injuries. The use of straight plugs or adapters leads to an increased risk of injury. For this reason, we recommend using angled jack plugs, e. g. the Blaupunkt accessories cable (7 607 001 535). 14 Sound settings \ User settings Making settings in the "AUDIO" menu BASS Bass level. Settings: 7 to +7. u Turn the volume control 4 to perform the setting. TREBLE Treble. Settings: 7 to +7.

u Turn the volume control 4 to perform the setting. BALANCE Left/right volume distribution. Settings: L9 (left) to R9 (right). u Turn the volume control 4 to perform the setting. FADER Front/rear volume distribution.

Settings: R9 (rear) to F9 (front). u Turn the volume control 4 to perform the setting. PRESETS Selecting equalizer presettings. Settings: POP, ROCK, CLASSIC, PRESET OFF. u Press the button 7 to open the menu.

u Turn the volume control 4 to perform the setting. AMP (switch-on delay) To prevent a switch-on crackling of a connected amplifier, you can specify a switch-on delay. Settings: 0.5/1.0/1.5/2.0/2.5 seconds and OFF. u Turn the volume control 4 to perform the setting. User settings Calling the user menu and selecting a menu u Briefly press the MENU 2 button to open the user menu.

In the user menu, the user settings can be found in the following menus: · TUNER · AUDIO (see chapter "Sound settings") · DISPLAY · VOLUME · CLOCK · VARIOUS u Press the / button 7 repeatedly until the desired menu is selected. u Press the button 7 to open the selected menu. u Press the / button 7 repeatedly until the desired menu item is selected. u Perform the setting (see the following sections). u Briefly press the MENU button 2 to exit the menu. Notes: · The menu is automatically exited approx. 16 seconds after the last button activation and you are returned to the display of the current audio source. · In the menu, you can press the button 7 in each case to return to the higher menu level. Making settings in the "TUNER" menu TRAF (traffic information) (only for reception area EUROPE) Only possible in FM radio mode: Switching priority for traffic announcements on or off. Settings: ON, OFF.

15 User settings u Turn the volume control 4 to change among the settings. If priority is switched on for traffic information, the display shows the icon . BAND (band selection) Activating or deactivating memory banks. Memory banks that can be deactivated: Region EUROPE USA S-AMERICA THAILAND Memory banks FM2, FMT, MW, LW FM2, FMT, AM, AMT FM2, FMT, AM, AMT FM2, FMT, AM, AMT SENS Setting the sensitivity of station seek tuning. Settings: LO (low), HI (high).

u Turn the volume control 4 to change between the settings. RDS Switching the RDS function on or off. Settings: ON, OFF. u Turn the volume control 4 to change between the settings. PTY Switching the PTY function on or off.

Settings: ON, OFF. u Turn the volume control 4 to change between the settings. PTY TYPES Only possible with activated PTY function: Select a programme type. u Turn the volume control 4 to select a programme type. PTY LANG (only for reception area EUROPE) Select the language for the display of the programme types. Settings: ENGLISH, DEUTSCH (German), FRANCAIS (French). u Press the button 7 to open the menu. u Turn the volume control 4 to select a language. AREA (reception area) Select the reception area for the radio reception. Settings: EUROPE, USA, S-AMERICA, THAILAND.

u Press the button 7 to open the menu. u Press the / button 7 to select a reception area. u Press the button 7 to set the reception area. u Press the button 7 to confirm the selected reception area. Settings in each case: ON, OFF. u Press the button 7 to open the menu. u Press the / button 7 repeatedly until the desired memory bank is displayed. u Turn the volume control 4 to toggle between the settings ON (activate memory bank) and OFF (deactivate memory bank).

Deactivated memory banks are skipped during the source selection with the SRC button =. Notes: · In the factory default, all AM memory banks are deactivated.

· If a memory bank is deactivated, the stations stored in this memory bank are retained. REG (only for reception area EUROPE) Only possible in FM radio mode: Switching REGIONAL function on or off. Settings: ON, OFF. u Turn the volume control 4 to change between the settings. 16 User settings Making settings in the "DISPLAY" menu DIM Select automatic or manual switching of the display brightness for day or night.

Settings: AUTO (display brightness is automatically switched by switching the driving lights on or off), MAN (display brightness can be switched manually).

u Turn the volume control 4 to perform the setting. Automatic switching of the display brightness is possible only If your car sound system is installed as described in the installation instructions and your vehicle features the corresponding connection. SCROLL Select the display of scrolling text (e. g. when displaying MP3 file names) either as single display or continued display. Settings: 1X (single display), ON (continued display). u Turn the volume control 4 to change between the settings. u If necessary, turn the volume control 4 to adjust the desired volume for the ON VOL setting. TA VOL (traffic announcement volume) (only for reception area EUROPE) Setting the minimum volume for traffic announcements.



[You're reading an excerpt. Click here to read official BLAUPUNKT CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)

<http://yourpdfguides.com/dref/4260109>

Settings: 1 50. u Turn the volume control 4 to perform the setting. BEEP Switching the confirmation beep on or off. Settings: ON, OFF. u Turn the volume control 4 to perform the setting.

Making settings in the "CLOCK" menu PERCLK Switch the permanent display of the time on or off. Settings: ON, OFF. u Turn the volume control 4 to perform the setting. If the permanent display of the time is switched on, the time is shown on the display. The display of the respective audio source is shown only after pressing a button. Approximately 16 seconds after the button is pressed last, the time is displayed again. H-MODE Selecting the 12 or 24-hour time.

Settings: 12, 24. u Turn the volume control 4 to perform the setting. SET Setting the time.

u Turn the volume control 4 counterclockwise to set the hours. u Turn the volume control 4 clockwise to set the minutes. Making settings in the "VOLUME" menu ON VOLUME Setting the power-on volume. Settings: ON VOL (power-on volume; 1 50) or LAST VOL (volume set last before switching off the car sound system). Danger! High volume The power-on volume can be unexpectedly high if the LAST VOL setting is selected and a high volume was set the last time the radio was switched off.

Always set the device to a moderate volume. u Press the button 7 to open the menu. u Press the / button 7 to toggle between the settings LAST VOL and ON VOL. 17 User settings \ Factory settings Note: When you set the time in 12-hour mode (H-MODE 12), an "A" is displayed before the time for the time before noon or a "P" for the time after noon. The car sound system switches off and is reset to the factory settings.

If a CD has been inserted in the CD drive, the car sound system automatically switches on again. Making settings in the "VARIOUS" menu DEMO Switching the demo mode on or off. Settings: ON, OFF. u Turn the volume control 4 to perform the setting. In demo mode, the features of the radio are shown as scrolling text on the display. BROWSE Switching fast track selection in browse mode on or off using the volume control 4 and the On/Off button 3. Settings: ON, OFF. u Turn the volume control 4 to perform the setting. SCAN Setting the scan time in seconds. Settings: 4/8/12/16/60 SEC.

u Turn the volume control 4 to perform the setting. VERSION Displaying the version of the CPU and software of the radio. u Press the button 7 to open the menu. u Press the / button 7 to toggle between the display of the version number of CPU (P) and software (E). NORMSET Restoring the original factory settings of the car sound system. u Press the button 7 to open the menu. u Press the button 7 to confirm restoring the factory settings. Factory settings Important factory settings in the user menu: Menu item AREA FM1 / FM2 / FMT MW\* / LW\* AM\*\* / AMT\*\* RDS REG\* TRAF\* SENS PTY ON VOLUME TA VOL\* BEEP BROWSE SCAN DIM H-MODE SET Factory setting EUROPE ON OFF OFF ON OFF OFF HI OFF LAST VOL 20 ON ON 8 SEC MAN 24 00:00 \* Only in reception area "EUROPE" \*\* Only in reception areas "USA", "S-AMERICA" and "THAILAND" In the user menu, you can restore the original factory settings of the car sound system (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "NORMSET"). 18 Useful information \ Technical data Useful information Warranty We provide a manufacturer's warranty for products bought within the European Union. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid.

The warranty terms can be called up from [www.blaupunkt.com](http://www.blaupunkt.com). Wavebands in South America: FM: 87.5 107.

9 MHz AM (MW): 530 1,710 kHz FM frequency response: 30 15,000 Hz CD Frequency range: Pre-amp out 2 channels: Input sensitivity Front AUX-IN: 20 20,000 Hz 2V 300 mV / 10 k Service In some countries, Blaupunkt offers a repair and pick-up service. Information about the availability of this service in your country can be found at [www.blaupunkt.com](http://www.blaupunkt.com). If you want to take advantage of this service, you may request a pick-up service for your car sound system via the Internet.

Dimensions and weight W x H x D: 178 x 52 x 170 mm Weight: approx. 1.70 kg Technical data Voltage supply Operating voltage: 10.5 14.4 V Current consumption In operation: 10 A 10 sec. @ @4 x 50 watts max. @ @ @ @ @ . The cross sections of the positive and negative cables must not be less than 1.5 mm<sup>2</sup>. · Do not connect the vehicle's plug connectors to the radio! You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer. · Depending on the model, your vehicle may differ from the description provided here.

We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline. When installing an amplifier, you must first connect the device earth connections before connecting the plugs for the line-out jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). 20 Installation instructions Supplied mounting hardware 1 011 202 220: Supplied mounting hardware 1 011 202 221: 21 Installation instructions Available as an optional accessory 1. 12V 7 607 621 ... 2. Installation kits 7 608 .

3. 0° - 30° +/- 10° +/- 10° 22 Installation instructions 4. Antenna Antenna connection 6. Removal 1. 2.

1. 2. Preamp Out 3. 5. 182 53 165 1-20 7. 12V 23 Installation instructions A 1 2 3 4 5 6 7 8 Remote Control IN Telephone Mute NC Permanent +12V Auto antenna / Remote Control \* Illumination Kl.15/Ignition Ground 1 2 3 4 5 6 7 8 B Speaker out RR+ Speaker out RR Speaker out RF+ Speaker out RF Speaker out LF+ Speaker out LF Speaker out LR+ Speaker out LR \* Auto antenna / Amplifier / Remote Control +12 V / max. 150 mA 24 Installation instructions Relais +12V Remote Control IN 7 1 35 Kl. 15 +12V 68 24 Telephone Mute 4 Ohm 4 Ohm 4 Ohm 4 Ohm +12V 12V Subject to changes! 25 Supported iPod/iPhone devices . . . . . Our product can support below listed iPod/iPhone generations: iPod touch (4th generation) iPod touch (3rd generation) iPod touch (2nd generation) iPod touch (1st generation) iPod classic iPod with video iPod nano (6th generation) iPod nano (5th generation) iPod nano (4th generation) iPod nano (3rd generation) iPod nano (2nd generation) iPod nano (1st generation) iPod iPhone 4S iPhone 4 iPhone 3GS iPhone 3G iPhone "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone respectively, and has been certified by the developer to meet Apple performance standards.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/4260109)

[CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)

<http://yourpdfguides.com/dref/4260109>

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with iPod, iPhone may affect wireless performance. iPhone, iPod are trademarks of Apple Inc., registered in the U.S. and other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. © 2012 All rights reserved by Blaupunkt. This material may be reproduced, copied or distributed for personal use only. 26 Please keep the filled-in radio pass in a safe place! 27 Passport Name: Type: Serial no.

: .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... *BP* .....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... Cupertino 220 1 011 202 22 \_ Blaupunkt AudioVision GmbH & Co. KG Robert-Bosch-Straße 200 D-31139 Hildesheim <http://www.blaupunkt.com>

com 01/12 .



[You're reading an excerpt. Click here to read official BLAUPUNKT CUPERTINO 220 user guide](http://yourpdfguides.com/dref/4260109)  
<http://yourpdfguides.com/dref/4260109>