



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT DAYTONA MP26. You'll find the answers to all your questions on the BLAUPUNKT DAYTONA MP26 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT DAYTONA MP26
User guide BLAUPUNKT DAYTONA MP26
Operating instructions BLAUPUNKT DAYTONA MP26
Instructions for use BLAUPUNKT DAYTONA MP26
Instruction manual BLAUPUNKT DAYTONA MP26

 Radio | CD | MP3 | WMA

Daytona MP26

7 646 190 510

Operating and installation instructions
Notice d'emploi et de montage
Instrucciones de manejo e instalación
Instruções de serviço e de montagem
操作及安装手册
사용 및 장착 설명서



<http://www.blaupunkt.com>

 **BLAUPUNKT**



[You're reading an excerpt. Click here to read official BLAUPUNKT DAYTONA MP26 user guide](http://yourpdfguides.com/dref/3331400)
<http://yourpdfguides.com/dref/3331400>

Manual abstract:

@@@However, if you still have any questions on how to operate the unit please contact your dealer or the telephone hotline for your country. You will find the hotline telephone numbers printed at the back of this booklet. You can conveniently access the most important functions of your car radio from the steering wheel via the optional RC08 or RC10. You cannot switch the device on/off using the remote control. amplifier All Blaupunkt and Velocity amplifiers can be used. CD changer You can connect the following Blaupunkt CD changers: CDC A 08, IDC A 09 and CDC A03. Only operate your car radio if the road and traffic conditions allow you to do so. Familiarise yourself with the unit before setting off on your journey. You should always be able to hear police, fire and ambulance sirens in good time from inside your vehicle. For this reason, listen to your car sound system at a moderate volume level.

If you have any questions regarding the operation of your car radio or if you require further information, please do not hesitate to call us! The information hotline numbers are printed on the last page of these instructions. If you want to install your car radio yourself, please read the installation and connection instructions that follow these operating instructions. As a way of protecting your equipment against theft, the unit is equipped with a detachable control panel (release panel). without this control panel, the car radio is worthless to a thief. Protect your equipment against theft by taking the control panel with you every time you leave your vehicle.

Do not leave the control panel in your vehicle not even in a hidden place. Never expose the control panel to direct sunlight or other heat sources. Avoid making direct skin contact with the control panel's contacts. If necessary, clean the contacts with a lint-free cloth and some alcohol. First, pull the control panel straight off the unit and then out towards the left.

The unit switches off after the control panel is detached. all the current settings are saved. Any CD already inserted in the unit remains there. Slide the control panel from left to right into the unit's guide. Press the left-hand edge of the control panel into the unit until it clicks into place. Note: When attaching the control panel, make sure you do not press the display. If the device was still switched on when you detached the control panel, it will automatically switch on again with the last settings activated (i. There are various ways of switching the unit on/off: Switching on/off using the vehicle ignition If the unit is correctly connected to the vehicle's ignition and it was not switched off using ON/OFF button 1, it will switch on/off simultaneously with the ignition. Switching on/off using button 1 To switch the unit on, press button 1. To switch the unit off, press button 1 for longer than two seconds.

the unit switches off. Note: If you switch on the unit when the ignition is off, the unit will switch off automatically after one hour to prevent draining of the vehicle battery. Switching on by inserting a CD If the unit is switched off and there is no CD inserted in the drive, gently insert the CD with the printed side uppermost into the drive until you feel some resistance. the CD will be drawn automatically into the drive. You must not hinder or assist the drive as it draws in the CD. Note: The unit will remain off if the ignition is off. The volume can be adjusted in steps from 0 (mute) to 66 (maximum). This feature allows you to instantaneously reduce (mute) the volume to a level preset by you. Setting the mute level You can set the unit's mute volume level. @@To help you adjusting the volume more easily, the audible volume level will increase or decrease accordingly as you make your changes.

If you select "LAST VOL", the volume played before the unit was last switched off will be reactivated. If your unit is connected to a mobile telephone, the car radio's volume will be muted as soon as you "pick up" the telephone. "PHONE" shows in the display. This requires the mobile telephone be connected to the car radio as described in the installation instructions. If the volume was higher before the unit was switched off and "LAST VOL" has been selected, the volume will be set at "38" the next time the radio is switched on.

@@For some functions you will hear a confirmation beep if you keep a button pressed for longer than two seconds. For instance, after storing a radio station to a station button you will hear a confirmation beep. Use the or buttons 9 to switch between the options. "OFF" means beep off, "ON" means the beep is switched on. If you are listening to CD/MP3, CD changer or AUX mode, press the BND. In order to guarantee the perfect functioning of the radio element, the unit must be set for the region in which you are located.

You can choose between Europe (EUROPE), America (USA), Thailand (THAI) and South America (S-AMERICA). The tuner comes from the factory set for the region in which the unit was sold. Should you encounter problems with radio reception, please check this setting. Press and hold down the 1 and 5 buttons ; at the same time and switch on the device again with button 1. "TUNER" is displayed. Press the buttons 9 within the next 8 seconds and select your tuner region. To save the setting, switch the device off and on again or wait approx. "SENS LO" means it is set to the lower sensitivity setting. set the required sensitivity using the or buttons 9. When you have finished making your changes, press the MENU button 4.

Tuning into stations manually You can also tune into stations manually. This unit can receive programmes broadcast over the FM and AM frequency ranges. There are three memory banks for the FM range and one for the AM range. Six stations can be stored in each memory bank. selecting the FM memory bank or the AM frequency range respectively Press the BND. TS button < to switch between the FM memory banks (FM1, FM2 and FMT) and the AM frequency range respectively. There are various ways of tuning into a station. automatic seek tuning Press the or button 9. The unit tunes into the next receivable station. Setting the sensitivity for station seek tuning You can configure the radio to only tune into stations with a strong reception or to also tune into those with a weak reception. Press one of the station buttons 1 - 6 ; for longer than 2 seconds to store the station to that button.

You can automatically store six stations with the strongest reception in the region. The stations are stored in the FMT or AM memory depending on the selected frequency range. @@@@Select the memory bank in which the station was stored. @@@@Problems might be experienced when trying to play copy-protected CDs. @@ risk of damage to the CD drive! Contoured CDs (shape CDs) are not suitable for playback in this unit.

@@Note: The unit will remain off if the ignition is off.



[You're reading an excerpt. Click here to read official BLAUPUNKT DAYTONA MP26 user guide](http://yourpdfguides.com/dref/3331400)
<http://yourpdfguides.com/dref/3331400>

To turn it on and play the inserted CD, press button 1 once. Playback begins from the point at which it was last interrupted. The CD is drawn into the drive automatically. You must not hinder or assist the drive as it draws in the CD.

The next randomly selected track will then be played. You can briefly play all the tracks on a CD. Press the MENU button 4 for longer than two seconds. Note: You can set the scantime. The current track will then continue to be played. The CD text may include the name of the performer, the album and the track name. You can have the CD text displayed as running text at every change of track. After the CD text has been displayed once, the standard display (as described in the "Changing the display" section) will be shown. If you want to repeat a track, press button 4 RPT ;. "RPT TRCK" appears briefly in the display and the RPT symbol lights up.

The track is repeated until you deactivate RPT. Cancelling repeat If you want to stop the repeat function, press button 4 RPT ; again. Two options are available: Track number and clock. Track number and playing time. Press the button 5 for longer than two seconds until the required display appears.

You can also use this car radio for playing CD-Rs and CD-RWs containing MP3/WMA music files. Remove the CD Notes: An ejected CD will be reloaded into the unit if not removed within 10 seconds to protect it from accidental damage. You may also eject a CD when the unit is off, or when CD is not playing. The various combinations of CD burners, CD burning software and CD blanks may lead to problems arising with the ability to play certain CDs. If problems occur with your own burned CDs, you should try another brand of CD blank or choose another blank colour.

the format of the CD must be ISO 9660 Level 1 / Level 2 or Joliet. Other formats cannot be played reliably. You can create a maximum of 252 directories on a CD. Each of these directories can be accessed using this device. Regardless of the number of directories on a CD, a total of 999 files can be supported, with up to 255 files in one single directory.

MP3 tracks can contain addition information such as the artist, song and album names (ID3 tags). This device can display ID3 tags if they are version 1. When creating (encoding) MP3 files from audio files, you should use bit rates up to a maximum of 256 kbit/sec. Only MP3 files with the ". MP3" file extension can be played on this device.

note: To ensure uninterrupted playback, Do not attempt to change the file extension to ". MP3" of any files other than MP3 files and then attempt to play them! These invalid MP3 files will not be selected during MP3 playback. Do not use "mixed" CDs containing both non-MP3 data and MP3 files. The unit will only select MP3 files during playback. Do not use mix-mode CDs containing both audio tracks and MP3 files. While attempting to playback such CDs, only audio tracks will be selected. Each directory can be named using a PC. Note: When namown from one track to another on the current CD, press the or button 9 once or several times. To fast search backwards or forwards, keep one of the or buttons 9 pressed until fast reversing/fast forwarding begins. To play all the tracks on the current CD in random order, briefly press button 5 MIX ;.

To play the tracks on all the inserted CDs in random order, press button 5 MIX ; longer than two seconds. To briefly play all the tracks on all inserted CDs in ascending order, press the MENU button 4 for longer than two seconds. "TRK SCAN" appears briefly follows by blinking the track number of the CD track being scanned. stopping SCAN To stop scanning, briefly press the MENU button 4. The current track will then continue to be played. The minutes flash on and off and can be adjusted. Displaying the time continuously when the unit is off and the ignition is on "CLOCK ON" setting in the menu allows you to display the time when the unit is off and the vehicle ignition is on, press the MENU button 4. When you have finished making your changes, press the MENU button 4. When you have finished making your changes, press the MENU button 4. You can adjust the tone settings (bass and treble) separately for each source (radio, CD/MP3, CD changer and AUX).

X-Bass means increased bass at low volumes. You can set the X-Bass in steps ranging from OFF to three. press the or button 9 to choose between the presets. If you want to deactivate the sound preset, choose "EQ OFF" from the available options. You can select a preset sound effect for the following styles of music: ROCK POP CLASSIC The settings for these music styles have already been programmed.

The level display briefly provides a symbolic display of the volume and the audio control settings whilst you are adjusting them. When settings are not being made, the level display indicates the music level of the car radio. You can switch the music level display on/off in the menu. Instead of connecting a CD changer, you can connect another audio source equipped with a line output. The audio source, for example, can be a portable CD player, MiniDisc player or MP3 player.

the AUX input must be activated in the menu. If you want to connect an external audio source, you will need an adapter cable. You can obtain this adapter cable (BP no. When you have finished making your changes, press the MENU button 4. 5 - 108 MHz (50 kHz step auto/25 kHz step manual) AM: 531 - 1602 kHz (9 kHz step) Frequency ranges South America: FM: 87. 5 - 107. 9 MHz (100 kHz step auto/50 kHz step manual) AM: 530 - 1710 kHz (10 kHz step) FM mono sensitivity: 17 dbf FM frequency response: 35 - 16,000 Hz When carrying out installation work and making connections please observe the following safety instructions: - Disconnect the negative terminal of the battery! When doing so, please observe the vehicle manufacturer's safety instructions. - Make sure you do not damage vehicle components when drilling any holes. - The cross sections of the positive and negative cables must not be less than 1. - You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer.

- Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline. When installing an amplifier or changer, you must first connect the device earth connections before connecting the plugs for the line-in or line-out jacks. Device earth connections may not be connected to the earth connection (casing) of the car radio. Car-specific adapter cable which is available at your dealer. 1 2 3 4 5 6 7 8 Speaker out RR+ Speaker out RRSpeaker out RF+ Speaker out RFSpeaker out LF+ Speaker out LFSpeaker out LR+ Speaker out LR- This information is subject to change without notice! Please keep the filled-in radio pass in a safe place!.



[You're reading an excerpt. Click here to read official BLAUPUNKT DAYTONA MP26 user guide](http://yourpdfguides.com/dref/3331400)
<http://yourpdfguides.com/dref/3331400>