

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT GTA 470. You'll find the answers to all your questions on the BLAUPUNKT GTA 470 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT GTA 470
User guide BLAUPUNKT GTA 470
Operating instructions BLAUPUNKT GTA 470
Instructions for use BLAUPUNKT GTA 470
Instruction manual BLAUPUNKT GTA 470





You're reading an excerpt. Click here to read official BLAUPUNKT GTA 470 user guide

http://yourpdfguides.com/dref/3311774

## Manual abstract:

The cross-section of the positive and negative cable must be at least 6 mm2. A power amplifier's performance is only as good as its installation. @@We recommend that you have our product installed professionally. @@@@Modern highperformance systems and high-quality loudspeaker configurations are quite capable of generating noise levels above 130 dB Use the Blaupunkt ISO Cinch adapter to connect the amplifier to car radios with ISO connector (7 607 893 093/7 607 855 094). Fit a fuse in the amplifier power line no more than 30 cm from the vehicle battery, in order to protect the battery in the event of a short-circuit between it and the power amplifier. The amplifier's own fuse protects the amplifier itself, but not the car battery. Disconnect the negative terminal of the battery before carrying out installation and connection work. Observe the vehicle manufacturer's safety instructions (regarding airbags, alarm systems, trip computers, vehicle immobilisers). The final stage must be installed professionally for reasons of safety. The mounting surface must be suitable for the screws provided, and must provide firm support.

For safety reasons the GTA 470 should be fixed in a reliable way. You must not install the GTA 470 on the rear shelf, on the rear seats or on any other surface open to the front. When drilling holes, take care to avoid damage to vehicle components (battery, cables, fuse boxes). The mounting location must also be dry, and provide sufficient ventilation for cooling of the amplifier. @@@@@@@@@@@@@@@@@@@@@o@@You can view the guarantee conditions at www. blaupunkt. @@@@@@@@@@@@@@@@a lower load will cause the amplifier to overheat or switch off. This can lead to permanent damage of the unit. This enables the amplifier to be switched on and off with the radio's On/Off switch. Level control The Level control enables the input sensitivity of the final Îtage to be matched to the output voltage of your car radio preamp output. Adjust the input sensitivity in accordance with the manufacturer's specifications when connecting the amplifier to other radios. important: Turning the Level control clockwise increases the input sensitivity of the amplifier, and thereby also the volume. The Level control is however not a volume control; an increase in volume is not achieved in the maximum position, even if this subjectively appears to be the case. The system merely increases the volume more quickly when the volume is turned up on the radio. If, for example, you wish to drive a pair of subwoofers, connect in accordance with the low-pass diagram (fig. Bass boost You can adjust the bass output of the amplifier using the bass boost control. the settings range covers 0 dB to +12 dB. Operating indicator (POWER / PROTECTION) Green lamp: Power amp on, regular operating condition Red lamp: Power amp has been switched off electronically, due to a fault or failure. This information is subject to change without notice! @@@@@@Därför är det viktigt att vid anslutningarna se till att förstärkarens plusledning (+) kopplas till högtalarens plusledning (+); samma sak gäller för minusledningarna (-).

Dessutom måste vänster förstärkarkanal kopplas till vänster högtalare och höger förstärkarkanal till höger högtalare. This information is subject to change without notice! .



You're reading an excerpt. Click here to read official BLAUPUNKT GTA 470 user guide

http://yourpdfguides.com/dref/3311774