



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT KEY WEST MP36. You'll find the answers to all your questions on the BLAUPUNKT KEY WEST MP36 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT KEY WEST MP36
User guide BLAUPUNKT KEY WEST MP36
Operating instructions BLAUPUNKT KEY WEST MP36
Instructions for use BLAUPUNKT KEY WEST MP36
Instruction manual BLAUPUNKT KEY WEST MP36

 Radio | CD | MP3 | WMA

Key West MP36	7 646 470 510
Maui MP36	7 646 090 510

Operating and installation instructions
Notice d'emploi et de montage
Instrucciones de manejo e instalación
Instruções de serviço e de montagem
操作及安裝手冊
사용 및 장착 설명서



<http://www.blaupunkt.com>

 **BLAUPUNKT**



[You're reading an excerpt. Click here to read official BLAUPUNKT KEY WEST MP36 user guide](http://yourpdfguides.com/dref/3308804)
<http://yourpdfguides.com/dref/3308804>

Manual abstract:

We hope you enjoy using this new piece of equipment. @@The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the unit please contact your dealer or the telephone hotline for your country.

You will find the hotline telephone numbers printed at the back of this booklet. You can conveniently access the most important functions of your car radio from the steering wheel via the optional RC08 or RC10. You cannot switch the device on/off using the remote control. We recommend you use well-matched products from the Blaupunkt or Velocity product ranges. CD changer You can connect the following Blaupunkt CD changers: CDC A 08, IDC A 09 and CDC A03. Only operate your car radio if the road and traffic conditions allow you to do so. Familiarise yourself with the unit before setting off on your journey. You should always be able to hear police, fire and ambulance sirens in good time from inside your vehicle. For this reason, listen to your car sound system at a moderate volume level. If you want to install your car radio yourself, please read the installation and connection instructions that follow these operating instructions. If you have any questions regarding the operation of your car radio or if you require further information, please do not hesitate to call us! The information hotline numbers are printed on the last page of these instructions. As a way of protecting your equipment against theft, the unit is equipped with a detachable control panel (release panel).

without this control panel, the car radio is worthless to a thief. @@@@If necessary, clean the contacts with a lint-free cloth and some alcohol. Notes: The unit may only switch off after a few seconds, depending upon the "OFF TIMER" setting in the MENU as described later. all current settings of the radio are saved. CD already inserted in the unit remains there.

There are various ways of attaching the control panel but the following method is recommended: Hold the control panel at approximately right angles to the device. Slide the control panel into the unit's guides, located at the lower left and right sides, until it clicks into place. Push the control panel gently in upward direction until it clicks into its place. Pull the control panel straight off the unit, by holding the right hand side of the control panel. Note: When attaching the control panel, make sure you do not press on the display. If the unit was still switched on when you removed the control panel, the unit will automatically switch back on with the last settings activated. After opening the control panel, the unit will switch off after a pre-adjusted time between 0 to 30 seconds.

@@Note: If the OFF TIMER is set to 0 second, the unit switches off immediately after opening the control panel. There are various ways of switching the unit on/off: Switching on/off using the vehicle ignition If the unit is correctly connected to the vehicle's ignition and it was not switched off using ON/OFF button 1, it will switch on/off simultaneously with the ignition. A delay in switching off is expected if the "OFF TIMER" setting is not "0".

Switching on/off using button 1 To switch the unit on, press button 1. To switch the unit off, press button 1 for longer than two seconds. the unit switches off.

Note: If you switch on the unit when the ignition is off, the unit will switch off automatically after one hour to prevent draining of the vehicle battery.

Switching on by inserting a CD If the unit is switched off and there is no CD inserted in the drive, button 2. press the The release panel opens. Gently insert the CD with the printed side uppermost into the drive until you feel some resistance. the CD will be drawn automatically into the drive. You must not hinder or assist the drive as it draws in the CD. @@Note: The unit will remain off if the ignition is off.

The volume can be adjusted in steps from 0 (mute) to 66 (maximum). To help you adjusting the volume more easily, the audible volume level will increase or decrease accordingly as you make your changes. If you select "LAST VOL", the volume played before the unit was last switched off will be reactivated. If the volume was higher before the unit was switched off and "LAST VOL" has been selected, the volume will be set at "38" the next time the radio is switched on.

@@This feature allows you to instantaneously reduce (mute) the volume to a level preset by you.

Setting the mute level You can set the unit's mute volume level. @@ Announcement is then heard over the car sound system's loudspeakers. @@@@Set your preferred volume level using the or button :. @@@@Use the or button : to switch between the options. "OFF" means beep off, "ON" means the beep is switched on.

press the MENU button 9. Note: The optimum setting (0 - 5) for the speed-dependent volume adjustment feature depends on how noise levels develop in your particular vehicle. You will need to test various settings in order to find out which is best suited to your vehicle. (only KEY WEST MP36) This feature automatically adjusts the volume of the car sound system to suit the speed at which the vehicle is travelling. In order for this to work, your car sound system must be connected as described in the installation instructions. You can adjust the automatic volume boost feature in six steps from (0 to 5). (0 - 5) using the @@If you are listening to CD/MP3, CD changer or AUX mode, press the BND. To save the setting, switch the device off and on again or wait approx. This unit can receive programmes broadcast over the FM and AM frequency ranges. There are three memory banks for the FM range and one for the AM range. Six stations can be stored in each memory bank.

selecting the FM memory bank or the AM frequency range respectively Press the BND·TS button 6 to switch between the FM memory banks (FM1, FM2 and FMT) and the AM frequency range respectively. In order to guarantee the perfect functioning of the radio element, the unit must be set for the region in which you are located. You can choose between Europe (EUROPE), America (USA), Thailand (THAI) and South America (S-AMERICA). The tuner comes from the factory set for the region in which the unit was sold. Should you encounter problems with radio reception, please check this setting. Press and hold down the 1 and 5 buttons ; at the same time and switch on the device again with button 1. "TUNER" is displayed. Press the or buttons : within the next 8 seconds and select your tuner region. There are various ways of tuning into a station. automatic seek tuning Press the or button :.

The unit tunes into the next receivable station. Setting the sensitivity for station seek tuning You can configure the radio to only tune into stations with a strong reception or to also tune into those with a weak reception.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/3308804)

[KEY WEST MP36 user guide](http://yourpdfguides.com/dref/3308804)

<http://yourpdfguides.com/dref/3308804>

"SENS LO" means it is set to the lower sensitivity setting. set the required sensitivity using the or button :. When you have finished making your changes, press the MENU button 9.

Tuning into stations manually You can also tune into stations manually. You can automatically store six stations with the strongest reception in the region. The stations are stored in the FMT or AM memory depending on the selected frequency range. Note: Stations that were previously stored in this memory are deleted in the process. After the process is completed, the station that is stored in location 1 of the respective memory bank will be played.

Select the memory bank in which the station was stored. @@@@ Problems might be experienced when trying to play copy-protected CDs. @ risk of damage to the CD drive! Contoured CDs (shape CDs) are not suitable for playback in this unit. @@@ press the The release panel opens. @@@@ You must not hinder or assist the drive as it draws in the CD. @@ cD playback begins. Note: The unit will remain off if the ignition is off. To turn it on and play the inserted CD, press button 1 once. @@@@ Playback begins from the point at which it was last interrupted. You can briefly play all the tracks on a CD.

Press the MENU button 9 for longer than two seconds. @@ note: You can set the scantime. @@@@ You can briefly play all the tracks/files on the CD. @@@@ Repeat this step until the desired mode is shown. @@@@ Press the MENU button 9 twice to complete the setting. Note: Information on handling CDs, inserting CDs and operating the CD changer can be found in the operating instructions supplied with your CD changer. The CD Changer will resume playback from where it was last played previously. To move up/ down from one CD to another, press the or button : once or several times. To move up/ down from one track to another on the current CD, press the or button : once or several times. To fast search backwards or forwards, keep one of the buttons : pressed until fast reversing/fast forwarding begins.

5 options are available: Track number and play time Track number and clock CD number and track number CD number and clock CD number and play time Press the DISPL button 8 once or several times for longer than two seconds until the required display appears. Ton 5 MIX ; longer than two seconds. To briefly play all the tracks on all inserted CDs in ascending order, press the MENU button 9 for longer than two seconds. "TRK SCAN" appears briefly follows by blinking the track numT. The "AUTO DIM" feature is used to adjust the car radio's illumination automatically to suit the set cockpit illumination.

When you have finished making your changes, You can adjust the colour of the display illumination to suit the illumination of your vehicle cockpit. KEY WEST MP36: The primary colours red, green and blue (R-G-B) are available for this. Each colour provides values from 0-16. MAUI MP36: The primary colours red and green (R-G) are available for this. Each colour provides values from 0-4.

You can select the colour of the display illumination during the colour scan. The display shows all the possible colour variations that are available in the RGB or RG (MAUI MP36) spectrum. @@@@ Adjust the other colours to suit your preferences. When you have finished making your changes, Note: If you do not press a button, the colour scan will stop after cycling through the colours once (approx. After you switch on your device, the system displays a short message in the display. the factory default setting is the "BLAUPUNKT" text. Instead of this you can enter your own text up to 9 characters long. Instead of connecting a CD changer, you can connect another audio source equipped with a line output. The audio source, for example, can be a portable CD player, MiniDisc player or MP3 player. the AUX input must be activated in the menu.

If you want to connect an external audio source, you will need an adapter cable. You can obtain this adapter cable (BP no. Note: You can delete the entire line by pressing and holding down the or button : for longer than two seconds. @@ Move the selection cursor using @@@@ 5 - 107. @@@@ - Make sure you do not damage vehicle components when drilling any holes. - The cross sections of the positive and negative cables must not be less than 1. - You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer. - Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline.

When installing an amplifier or changer, you must first connect the device earth connections before connecting the plugs for the line-in or line-out jacks. Device earth connections may not be connected to the earth connection (casing) of the car radio. Car-specific adapter cable which is available at your dealer. 1 2 3 4 5 6 7 8 Speaker out RR+ Speaker out RRSpeaker out RF+ Speaker out RFSpeaker out LF+ Speaker out LFSpeaker out LR+ Speaker out LR- This information is subject to change without notice! Please keep the filled-in radio pass in a safe place! .



[You're reading an excerpt. Click here to read official BLAUPUNKT KEY WEST MP36 user guide](http://yourpdfguides.com/dref/3308804)
<http://yourpdfguides.com/dref/3308804>