



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT KINGSTON DJ. You'll find the answers to all your questions on the BLAUPUNKT KINGSTON DJ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT KINGSTON DJ
User guide BLAUPUNKT KINGSTON DJ
Operating instructions BLAUPUNKT KINGSTON DJ
Instructions for use BLAUPUNKT KINGSTON DJ
Instruction manual BLAUPUNKT KINGSTON DJ

Operating instructions



Kingston DJ



[You're reading an excerpt. Click here to read official BLAUPUNKT KINGSTON DJ user guide](http://yourpdfguides.com/dref/3330900)
<http://yourpdfguides.com/dref/3330900>

Manual abstract:

.....
.....
.. 22 What you need to know! ...
.....
.....
22 Traffic safety
.....
.....
.....
.....
.....
. 22 Installation/connection

.....
.....
.. 22 Radio operation with RDS ...
..... 24 AF - Alternative Frequency ..

.....
.....
.. 24 REG - Regional ...
.....
.....
.....
.....
.... 24 Selecting a waveband

.....
.....
.....
.....
. 25 Automatic seek tuning

.....
.... 25 Manual seek tuning .
.....
.....

.....
. 25 Adjusting the seek tuning sensitivity
. 25 Stereo - mono switch (FM)
.....

..... 25 Changing the memory bank (FM)
.....
25 Storing stations
.....

.....
.....
.....
.....
.. @@26 Recalling stored stations

.....
.....
@@@26 Tape operation
.....
.....
.....
28 Inserting a tape
.....

.....
.....

.....
30 Selecting a CD/title with the rocker switch

.....
.....

.....
.....
.....

.. 30 SCAN

.....
.....
.....

.....
.....
.....

.... 30 MIX

.....
.....
.....

.....
.....
.....

31 Reception of traffic announcements with RDS-EON

..... 27 Priority of traffic announcements ON/OFF .

.....
.....
.....

.....
.....
.....

..... 27 Warning beep ...

.....
.....
.....

..... 27 Switching the warning beep off ...

.....

.. 27 Automatic seek tuning start (During cassette operation) ...

.....

..... 27 Adjusting the volume for traffic messages and warning beep

.....
.....
.....

..... 27 Appendix .

.....
.....
.....

.....
.....

... 31 Technical data ..

.....

.....
.....
.....

..... 31 18 1 Amplifier On Off 2 Rocker switch 5 Fast winding/Autoreverse Changing the track Press simultaneously TR1-PLAY or TR2-PLAY in the display ENGLISH Seek tuning Volume Scan: Press for 1 second up Fast rewind To stop: press FF Fast forward To stop: press FR FRANÇAIS PORTUGUES ESPAÑOL SVENSKA NEDERLAND ITALIANO down in short steps up in short steps down When "CODE" lights up in the display, read chapter "Anti-theft coding" first. SCAN Hold down for approximately 1 second to sample all stations to be received. Extra functions: DSC mode: Select and program DSC settings.

Coding: Enter code and confirm with 3 Eject tape . Press 4 Cassette slot Insert tape (side A or I facing up, the open side facing to the right). 6 Display Radio:

Wave band Station name/frequency Seek tuning sensitivity Preset button Memory bank Priority of traffic announcements Alternative frequency Traffic program identifier Stereo Loudness 19 DEUTSCH Short description Cassette: Side 1 or 2 Radio reproduction during rapid tape run Metal/CrO2 Dolby 7 1, 2, 3, 4, 5, 6 - preset buttons You can store 6 stations on each FM memory bank (I, II, III and T). To store a station: Press button during radio operation and hold it down until the radio resumes play again. To recall a station: Select a waveband. For FM stations, also select the desired memory bank by pressing FM-T as many times as required. Then press the corresponding preset button. Extra function: Coding - Read chapter "Anti-theft coding" first. Buttons 1, 2, 3, 4 - To enter the fourdigit code. Press each button repeatedly until the four-digit code given in the car radio passport is displayed.

8 MIX/PS MIX: CD changer control PS (Preset Scan): To briefly sample all stored stations of the selected memory bank I-III or T. 9 Dolby NR* This set allows you to play cassettes recorded with Dolby-B noise reduction. To switch Dolby-NR on/off: Press the button. * Noise reduction system manufactured under license from Dolby Laboratories. "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories.

CD changer (option): Title no. : MTL For optimal reproduction of metal and CrO2 tapes. To switch MTL on/off: Press the button. ; lo Seek tuning sensitivity lo lit up in the display indicates normal seek tuning sensitivity (the system will pick up strong stations only). dx lit up in the display indicates high seek tuning sensitivity (the system will also pick up weaker stations).

To change the seek tuning sensitivity: press lo. For more information see chapter "DSC programming". CD no. 20 < AF - Alternative Frequency in RDS mode When "AF" is displayed in the RDS mode, the radio searches for a better frequency of the same program. AF on/off: Press button. Extra function: REG ON / REG OFF - With REG ON, the radio only switches to a better alternative frequency, if it offers the same regional program (see "REG - Regional"). = TA (Traffic Announcement) If "TA" is on, the system will play traffic stations only. TA on/off: press button. > M-L To select MW or LW. Press button if required.

? FM-T - FM, Travelstore To select one of the FM memory banks I, II, III or "T" (Travelstore). To change the memory bank: Press button until the desired memory bank is indicated on the display. To store the six most powerful stations automatically with Travelstore: Store: Press FM-T until seek tuning starts (see display). Recall: Press FM-T until "T" appears on the display. Then briefly press one of the presets 1, 2, 3, 4, 5, 6. @ AUD/GEO AUD To adjust the treble and bass frequencies using the rocker switch. Treble For more information see chapter "DSC programming". GEO To adjust the balance (left/right) and fader (front/rear) using the rocker switch. Fader front + Bass + Bass Treble 21 PORTUGUES Extra function: Loudness - Adaptation of the low frequencies to the human ear. Turning on/off loudness: Hold AUD depressed for approximately 2 seconds.

Loudness is turned on when "LD" lights up in the display. To modify a setting, ·press AUD or GEO first and then change the setting using the rocker switch. The adjusted value is shown in the display. The last setting will be stored automatically. If the setting remains unchanged within 8 seconds, the display will shift back to the previous condition.

ESPAÑOL SVENSKA NEDERLAND Fader rear ITALIANO Balance left Balance right FRANÇAIS ENGLISH DEUTSCH Important information A DSC (Direct Software Control) Use the DSC function to adjust a number of programmable default settings to your personal needs. See "DSC programming" for more details. B SRC (Source) To select between the connected audio sources, e.g. cassette, radio, CD changer (option).

C Security LED (CODE-LED) Flashes as additional anti-theft protection when the car radio is turned off, provided you have activated this mode before under DSC - CODE-LED. What you need to know! Before starting to use your new car radio you should carefully read through the information on "Traffic safety" and "Anti-theft coding". Installation/connection The code system can only be switched on and off, if the radio is connected to permanent power. If you like to install your new car radio by yourself or add other audio components to the existing ones, then please read carefully the enclosed instructions on installation and connection. Do not connect the loudspeaker outputs to ground! Only use the accessory and replacement parts approved by Blaupunkt.



[You're reading an excerpt. Click here to read official BLAUPUNKT](#)

[KINGSTON DJ user guide](#)

<http://yourpdfguides.com/dref/3330900>

Traffic safety Traffic safety has always priority. Use your car radio in such a manner that you are always able to cope with and react to the prevailing traffic situation at any given time. Remember, even at 50 km/h you are still moving at a speed of 14 m per seconds. It is also very important that you are able to hear, and react to, acoustic warning signals around you, for example from the police or the firebrigade. Therefore, adjust the volume reasonably.

22 · Wrong code number entered It should not be possible for thieves to ascertain the code number by trial-and-error. This is why the set will be blocked for a certain period of time, if an incorrect code number is entered. In this case, "- - -" will appear in the display. This waiting time is 10 seconds after the first three attempts, and 1 hour following subsequent attempts. After 19 unsuccessful attempts, "OFF" will appear in the display and the set can no longer be restarted. Note: Keep your car radio passport with the code number in a safe place in order to avoid "unauthorized access" to your car radio. If the power supply to the radio is interrupted while the code system is switched on, you need to know the right code number. Switching the code system on Precondition:

The radio must be connected to permanent power. In order to switch the code system on: · Turn the radio off. · Hold down the preset buttons 1 and 4 simultaneously.

Turn the radio on. "CODE" briefly appears before the radio begins to operate. · 23 PORTUGUES If four dashes appear again in the display, you have entered a wrong code number. Now it is essential to enter the correct code after the waiting period has elapsed (CODE in the display). ESPAGÑOL · Release preset buttons 1 and 4.

The code system is on. "CODE" will be briefly displayed each time the radio is turned on. Your car radio is now ready for operation. SVENSKA Enter the code number given in the Blaupunkt car radio passport: Example: the code number is 2521. · Press preset button 1 twice, "2000" appears in the display. · Press preset button 2 five times, "2500" appears in the display. · Press preset button 3 twice, "2520" appears in the display. · Press preset button 4 once, "2521" appears in the display. To confirm the code number: Press the upper part of the rocker switch. NEDERLAND ITALIANO FRANÇAIS The car radio comes standard with the code system deactivated. If the anti-theft coding system is on while the power supply to the unit is interrupted (e.g. theft, disconnecting the car battery), the set is electronically blocked. @@@@@"CODE" will appear in the display. @@@@@"NDR1 NDS" (local radio program in Lower Saxony, German Press the desired preset button and hold it down.

@@@@@To change the seek tuning sensitivity, · press lo. @@@@On MW and LW, you can store six stations each. · Select the waveband by pressing FM·T or M·L. @@@@The activated preset button is indicated on the display. @@@@Select the desired memory bank to recall FM presets. @@@@To activate Scan: · press knob 1 for approximately 1 second. @@@@During the actual searching process, "SCAN" is flashing. @@@@Press FM·T for at least 2 seconds. @@@@As soon as this procedure has finished, the first station will be played. FM stations can also be stored manually on the Travelstore bank (see "Storing stations").

Sampling stored stations briefly with Preset Scan You can briefly sample all preset stations of a memory bank using the Preset Scan function. On FM, you can let the system sample the stations stored on the Travelstore level or on the three other memory banks. · Select a waveband. · On FM, press the FM·T button to choose the desired memory bank. To start Preset Scan: · Press PS.

To continue listening to a sampled station/switch Preset Scan off: · Press PS once again. 26 Switching the warning beep off a) Tune to another traffic program station: · or Press the rocker switch or press a preset button to recall a traffic program station. 27 PORTUGUES ESPAGÑOL SVENSKA Many FM broadcasters provide their service area with traffic messages at regular intervals. All traffic program stations transmit a special signal parallel to the radio program. Your car radio is able to identify such traffic program station by this TP signal.

The display will indicate "TP" to confirm that a traffic program station is tuned in. Other radio stations do not air traffic announcements by themselves, but offer the possibility to receive the traffic announcements of another radio station within the same radio network. During reception of such a station (e.g. NDR3) "TP" lights on the display as soon as the priority of traffic announcements is activated. Then the display has to light "TA". If a traffic announcement is aired, your radio will switch to the traffic program station for the duration of the message and will switch back to the previous station after the end of the message. Priority of traffic announcements b) Switch the traffic message priority off: ON/OFF · Press TA. "TA" lights up in the display, if the priority of traffic announcements is on. To switch the function on and off, · press the TA button.

If you press TA when a traffic announcement is played, the radio stops playing the message and switches to the previous mode. The priority of later traffic announcements remains on. "TA" goes out in the display. Automatic seek tuning start (During cassette operation) If you leave the reception area of your traffic program station while you are playing a cassette, the car radio will automatically tune into another traffic program station. If no traffic program station is found within approximately 30 seconds, the tape will be stopped and you will hear a warning beep. To switch the warning beep off, proceed as detailed above. Warning beep Whenever you leave the reception area of the traffic program station you are tuned to, you will hear a warning beep after approximately 30 seconds. This warning beep will also be released, if you press a preset button on which a station without traffic program is stored. Adjusting the volume for traffic messages and warning beep A default value is set ex factory for the volume of traffic announcements and the warning beep. You can change this default setting with the DSC function (see "DSC programming, ARI (TA)").

NEDERLAND ITALIANO FRANÇAIS ENGLISH DEUTSCH Reception of traffic announcements with RDS-EON Tape operation Inserting a tape · Turn on the set. Insert a tape. To stop fast forward: · press FR. Fast rewind · Press FR (fast rewind). When the tape has been completely rewound, the set will start playing the same track again.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/3330900)

[KINGSTON DJ user guide](http://yourpdfguides.com/dref/3330900)

<http://yourpdfguides.com/dref/3330900>

To stop fast rewind: · press FF. Note: If there is too much tension on the tape during playback, the set may switch to the other track by itself. In this case check the condition of the tape. Sometimes it helps to rewind the cassette tape completely. Eject tape Insert tape with side A or 1 facing up, the open side facing to the right Tape selection with MTL Press the MTL button for optimal reproduction when using metal or CrO2 tape.

"MTL" will then light up on the display. To switch the function on/off: · Press MTL. The tape will be played in the direction used last. If "TR1-PLAY" is displayed, this means that track 1 or A of the tape is played. Changing the track Press simultaneously TR1-PLAY or TR2-PLAY in the display Dolby B-NR* Fast rewind To stop: press FF Fast forward To stop: press FR Ejecting a tape · Press . The cassette will be ejected. Autoreverse If, while a tape is playing, you wish to switch to the other track of that tape: · press FR and FF simultaneously. At the end of the tape, the set will automatically switch to the other track. The display will show "TR1-PLAY" for track 1 or A and "TR2PLAY" for track 2 or B. Fast winding Fast forward · Press FF (fast forward).

At the end of the tape, the set will switch to the other track and start playing it. 28 With this set you can play cassettes recorded with or without Dolby-B noise reduction. Cassettes recorded with Dolby NR* distinguish by their reduced background noise and the improved dynamic characteristics. To switch Dolby on/off: · press . When Dolby is on, " " is indicated on the display. * Noise reduction system manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Changing the audio source with SRC When you have inserted a cassette, you can change between tape or radio reproduction. @@@@ Use a cleaner cassette to remove normal dirt build-up. For tougher cases, use a cotton swab (Q-tip) soaked with alcohol.

Never use any hard tools to clean your unit! This car radio offers direct software control (DSC) to adjust a number of default settings to your personal needs and store them. Listed below you will find an overview of such default settings. To change a setting, · press DSC. Then use the rocker switch to select the functions described in the following and change the respective value. The current condition is indicated on the display.

Select function COLOUR To match the display colour to the dashboard illumination. Select orange or green. Loudness - to boost the less perceptible, deeper tones for a more natural sound impression. LOUD 1 - low boost LOUD 6 - strong boost LOUD BEEP ARI (TA) Select function LOCAL (lo) Seek tuning sensitivity for local reception LOCAL 1 - high sensitivity LOCAL 3 - low sensitivity DIS. 1 - high sensitivity DIS.

3 - low sensitivity 29 PORTUGUES DIS (dx) Seek tuning sensitivity for distant reception LED 1 - LED only flashes if the car is switched off via the ignition. ESPAÑOL CODE-LED To select the LED mode for optical theft protection. SVENSKA To adjust the volume of traffic announcements between 1 9. The traffic announcement will then be reproduced with this volume (1 = low). NEDERLAND Change setting + Change setting Acknowledgement tone for functions requiring a push of more than 2 seconds. Adjust the volume of that tone between 0 and 9 (0 = OFF). ITALIANO FRANÇAIS ENGLISH DEUTSCH DSC programming CD changer control (option) LED 2 - LED always flashes if the car radio is switched off. LED 0 - No flashing. RM RM-ON - Makes it possible to listen to radio broadcasts (Radio Monitor) during fast winding of the cassette player. RM-OFF - Means that the function is off.

With this set you can control the following Blaupunkt CD changers: CDC-A03, -F03, -A05. Selecting a CD/title with the rocker switch Select title (upwards): press briefly CUE (audible): hold down Starting CD changer operation with SRC on the car radio It is necessary that the changer is fitted with a magazine. Use the SRC button to switch between the connected audio sources (radio - changer cassette). Press SRC until the changer functions appear on the display, e.g. D1 - TR 01 D = disk, TR = track (title). Title no. Select CD (downwards) Select CD (upwards) Restarting a title: press briefly Select title (downwards): briefly press as many times as required REVIEW (audible): hold down To leave the DSC mode/store the setting, · press DSC. The display shows you the current condition. Survey of DSC default settings LOCAL DIS COLOUR LOUD BEEP ARI (TA) CODE-LED RM : : : : : 1 1 orange 5 5 5 2 OFF CD no. SCAN To briefly sample all CD tracks. To start SCAN: · press the SCAN knob on the car radio for approximately 1 second. The titles will be briefly played one after another in ascending order. To cancel SCAN: · briefly press SCAN once again. The currently sampled track will continue to play.

30 MIX This function allows you to play the tracks of the selected CD at random. When all tracks of a disc have been played, the system starts playing the following CD of the magazine, whereby the MIX function remains active. To start MIX: · press the MIX button briefly. To cancel MIX: · press the MIX button briefly. Note: It might happen in exceptional cases that the changer shows malfunctions caused by voltage drops.

Should this happen, turn the car radio off and on again. The changer will then return back to normal operation. Technical data Amplifier: Output power: 4 x 19 W or 2 x 24 W RMS acc. to DIN 45324/3.1 4 x 20 W or 2 x 25 W music acc. to DIN 45324/ 3.2 FM: Sensitivity: Frequency response: Cassette: Frequency response: 1.0 µV at 26 dB signal-tonoise ratio 35 - 15,000 Hz (-3 dB) 32 - 16,000 Hz (-3 dB) Subject to modifications! 31 PORTUGUES ESPAÑOL SVENSKA NEDERLAND ITALIANO FRANÇAIS ENGLISH DEUTSCH Appendix Blaupunkt-Werke GmbH Bosch Gruppe 10/94 K7/VKD 3 D94 147 015 PM 18.



[You're reading an excerpt. Click here to read official BLAUPUNKT KINGSTON DJ user guide](http://yourpdfguides.com/dref/3330900)
<http://yourpdfguides.com/dref/3330900>