



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT LAGUNA CD36. You'll find the answers to all your questions on the BLAUPUNKT LAGUNA CD36 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLAUPUNKT LAGUNA CD36**  
**User guide BLAUPUNKT LAGUNA CD36**  
**Operating instructions BLAUPUNKT LAGUNA CD36**  
**Instructions for use BLAUPUNKT LAGUNA CD36**  
**Instruction manual BLAUPUNKT LAGUNA CD36**

 Radio | CD

Laguna CD36

7 646 085 510

Operating and installation instructions  
Notice d'emploi et de montage  
Instrucciones de manejo e instalación  
Instruções de serviço e de montagem  
操作及安装手册  
사용 및 장착 설명서



<http://www.blaupunkt.com>

 **BLAUPUNKT**



[You're reading an excerpt. Click here to read official BLAUPUNKT LAGUNA CD36 user guide](http://yourpdfguides.com/dref/3331344)  
<http://yourpdfguides.com/dref/3331344>

**Manual abstract:**

16 Displaying the time continuously when the unit is off and the ignition is on 16 Briefly displaying the time when the unit is switched off. We hope you enjoy using this new piece of equipment. Before using the device for the first time, please read these instructions carefully. The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the unit please contact your dealer or the telephone hotline for your country. You will find the hotline telephone numbers printed at the back of this booklet. You can conveniently access the most important functions of your car radio from the steering wheel via the optional RC08 or RC10. You cannot switch the device on/off using the remote control. amplifier All Blaupunkt and Velocity amplifiers can be used. CD changer You can connect the following Blaupunkt CD changers: CDC A 08, IDC A 09 and CDC A03.

Only operate your car radio if the road and traffic conditions allow you to do so. Familiarise yourself with the unit before setting off on your journey.

@@@@@@@If you want to install your car radio yourself, please read the installation and connection instructions that follow these operating instructions. As a way of protecting your equipment against theft, the unit is equipped with a detachable control panel (release panel). without this control panel, the car radio is worthless to a thief.

Protect your equipment against theft by taking the control panel with you every time you leave your vehicle. Do not leave the control panel in your vehicle not even in a hidden place. Never expose the control panel to direct sunlight or other heat sources. Avoid making direct skin contact with the control panel's contacts. If necessary, clean the contacts with a lint-free cloth and some alcohol.

First, pull the control panel straight off the unit and then out towards the left. The unit switches off after the control panel is detached. all the current settings are saved. Any CD already inserted in the unit remains there. Slide the control panel from left to right into the unit's guide. Press the left-hand edge of the control panel into the unit until it clicks into place. Note: When attaching the control panel, make sure you do not press the display. If the device was still switched on when you detached the control panel, it will automatically switch on again with the last settings activated (i. There are various ways of switching the unit on/off: Switching on/off using the vehicle ignition If the unit is correctly connected to the vehicle's ignition and it was not switched off using ON/OFF button 1, it will switch on/off simultaneously with the ignition. Switching on/off using button 1 To switch the unit on, press button 1.

To switch the unit off, press button 1 for longer than two seconds. the unit switches off. Note: If you switch on the unit when the ignition is off, the unit will switch off automatically after one hour to prevent draining of the vehicle battery. Switching on by inserting a CD If the unit is switched off and there is no CD inserted in the drive, gently insert the CD with the printed side uppermost into the drive until you feel some resistance. the CD will be drawn automatically into the drive. You must not hinder or assist the drive as it draws in the CD. Note: The unit will remain off if the ignition is off. The volume can be adjusted in steps from 0 (mute) to 66 (maximum). This feature allows you to instantaneously reduce (mute) the volume to a level preset by you. Setting the mute level You can set the unit's mute volume level.

@@To help you adjusting the volume more easily, the audible volume level will increase or decrease accordingly as you make your changes. If you select "LAST VOL", the volume played before the unit was last switched off will be reactivated. If your unit is connected to a mobile telephone, the car radio's volume will be muted as soon as you "pick up" the telephone. "PHONE" shows in the display. This requires the mobile telephone be connected to the car radio as described in the installation instructions.

If the volume was higher before the unit was switched off and "LAST VOL" has been selected, the volume will be set at "38" the next time the radio is switched on. @@For some functions you will hear a confirmation beep if you keep a button pressed for longer than two seconds. For instance, after storing a radio station to a station button you will hear a confirmation beep. Use the or buttons 8 to switch between the options. "OFF" means beep off, "ON" means the beep is switched on.

@@@@@@@ "TUNER" is displayed. @@@@"SENS LO" means it is set to the lower sensitivity setting. set the required sensitivity using the or buttons 8. When you have finished making your changes, press the MENU button 7. @@@@@@Six stations can be stored in each memory bank. @@There are various ways of tuning into a station. automatic seek tuning Press the or button 8. The unit tunes into the next receivable station.

@@@@@@@Select the memory bank in which the station was stored. @@@@You can choose to continuous display one of the followings: Band and Time Band and Frequency Keep the DIS button : pressed until the required display appears.

You can use this unit to play standard CDs, CD-Rs and CD-RWs with a diameter of either 5 or 3 inches. To ensure the system functions properly, only use CDs labelled with the compact disc logo. Problems might be experienced when trying to play copy-protected CDs. Blaupunkt cannot guarantee the proper functioning of copy-protected CDs! risk of damage to the CD drive! Contoured CDs (shape CDs) are not suitable for playback in this unit. We accept no liability for any damage to the CD drive or CD that may occur as a result of the use of unsuitable CDs. If a CD is already inserted in the drive and the unit is playing Radio, CD Changer or AUX mode. press the SRC button = repeatedly until "CD" appears in the display. Playback begins from the point at which it was last interrupted. If you press the or button 8 once, the current track will be played again from the beginning. To fast search backwards or forwards, keep one of the buttons 8 pressed until fast reversing / fast forwarding begins.

If there is no CD inserted in the drive and the unit is playing Radio, CD Changer or AUX mode, gently insert CD with the printed side uppermost into the drive until you feel some resistance. the CD is drawn into the drive automatically. You must not hinder or assist the drive as it draws in the CD. cD playback begins. Note: The unit will remain off if the ignition is off.

To turn it on and play the inserted CD, press button 1 once. The next randomly selected track will then be played. You can briefly play all the tracks on a CD. Press the MENU button 7 for longer than two seconds. Two options are available: Track number and clock.



[You're reading an excerpt. Click here to read official BLAUPUNKT LAGUNA CD36 user guide](http://yourpdfguides.com/dref/3331344)  
<http://yourpdfguides.com/dref/3331344>

Track number and playing time. Press the DIS button : for longer than two seconds until the required display appears. The next track will then be played for scantime as set in the "Setting the scantime". note: You can set the scantime. For further details, please read the section entitled "Setting the scantime" in the "Radio mode" chapter. stopping SCAN and continuing playback To stop scanning , press the MENU button 7. The current track will then continue to be played. Remove the CD Notes: An ejected CD will be reloaded into the unit if not removed within 10 seconds to protect it from accidental damage. You may also eject a CD when the unit is off, or when CD is not playing. If you want to repeat a track, press button 4 RPT ;.

"RPT TRCK" appears briefly in the display and the RPT symbol lights up. The track is repeated until you deactivate RPT. Cancelling repeat If you want to stop the repeat function, press button 4 RPT ; again. Note: Information on handling CDs, inserting CDs and operating the CD changer can be found in the operating instructions supplied with your CD changer. 5 options are available: Track number and play time Track number and clock CD number and track number CD number and clock CD number and play time Press the DIS button : once or several times for longer than two seconds until the required display appears. The CD Changer will resume playback from where it was last played previously. If you wish to repeat the current track, briefly press button 4 RPT ;.

"RPT TRCK" appears briefly and RPT lights up in the display. If you wish to repeat the current CD, press button 4 RPT ; longer than two seconds. "RPT DISC" appears briefly and RPT lights up in the display.

@@@@@@@@To play all the tracks on the current CD in random order, briefly press button 5 MIX ;. To play the tracks on all the inserted CDs in random order, press button 5 MIX ; longer than two seconds. To briefly play all the tracks on all inserted CDs in ascending order, press the MENU button 7 for longer than two seconds. "TRK SCAN" appears briefly follows by blinking the track number of the CD track being scanned. stopping SCAN To stop scanning , briefly press the MENU button 7.

The current track will then continue to be played. For further details, please read the section entitled "Setting the scantime" in the "Radio mode" chapter. When you have finished making your changes, press the MENU button 7. The minutes flash on and off and can be adjusted. When yo a safe place! .



[You're reading an excerpt. Click here to read official BLAUPUNKT LAGUNA CD36 user guide](http://yourpdfguides.com/dref/3331344)  
<http://yourpdfguides.com/dref/3331344>