



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT LAUSANNE RD 148. You'll find the answers to all your questions on the BLAUPUNKT LAUSANNE RD 148 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT LAUSANNE RD 148
User guide BLAUPUNKT LAUSANNE RD 148
Operating instructions BLAUPUNKT LAUSANNE RD 148
Instructions for use BLAUPUNKT LAUSANNE RD 148
Instruction manual BLAUPUNKT LAUSANNE RD 148

Radio / CD

Modena RD 148
Lausanne RD 148
Nevada RD 148

Einbauanleitung
Fitting instructions
Instructions de montage
Istruzioni di montaggio
Inbouwinstructies
Monteringsanvisning
Instrucciones de montaje
Instruções de montagem



BLAUPUNKT
Bosch Gruppe

Sicherheitshinweise

Vor Einbau Ihres Autoradios die Einbau- und Anschlußvorschriften lesen.

Für die Dauer der Montage und des Anschlusses ist der Minuspol der Batterie abzuklemmen.

Hierbei sind die Sicherheitshinweise des Kfz-Herstellers (Airbag, Alarmanlagen, Bordcomputer, Wegfahrsperren) zu beachten.

Beim Bohren von Löchern darauf achten, daß keine Fahrzeugteile (Batterie, Kabel, Sicherungskasten) beschädigt werden. Der Querschnitt des Pluskabels darf 2,5 mm² nicht unterschreiten. Das Gerät ist mit einer Sicherung, 10 A flink, abgesichert.

Das Seitenteil des Autoradios wird im Betrieb sehr heiß.

Es ist darauf zu achten, daß keine Kabel am Gehäuse anliegen.

In einigen Fahrzeugen liegt ein 2-poliger Stecker im Einbauschacht. Dieser Stecker darf nicht am Autoradio angeschlossen werden.

In Audi/VW Fahrzeugen darf der fahrzeugseitige 8-polige +/- Stecker nicht direkt an Blaupunkt Autoradios angeschlossen werden, da sonst der Dauerplus gegen Masse kurzgeschlossen wird und eine Leiterbahn im Radio aufbrennt.

8 622 621 140 50x 07 07



[You're reading an excerpt. Click here to read official BLAUPUNKT LAUSANNE RD 148 user guide](http://yourpdfguides.com/dref/3310658)
<http://yourpdfguides.com/dref/3310658>

Manual abstract:

@@ disconnect the vehicle battery's negative terminal before making connections. @@@@The positive lead used must have a cross-section of at least 2. During operation of the unit, the set's side wall may heat up considerably. Be sure to keep all wires away from hot parts of the housing. In some vehicles you will find a 20-pin connector pre-fitted in the dashboard's installation space. This connector must not be used for connecting the car radio! In vehicles manufactured by Audi and VW, the 8-pin positive/negative connector provided in the car must not be connected to a Blaupunkt radio directly! Otherwise the permanent +12 V line will be short-circuited to ground, leading to serious damage of the radio's internal circuitry (burn-out of printed conductor). In order to take advantage of the full car radio output and to avoid incorrect electrical connections with ISO plugs in the vehicle, it is advisable not to use the vehicle-specific positive/negative connection for this car radio. @@@@ be sure to observe Fig. @@@@Cut the negative line from the vehicle-specific Blaupunkt adapter wiring, join it with connection cable 7 607 884 093 and lay the negative line to a suitable ground, such as a chassis screw, the chassis itself or corresponding grounds (do not roll up the wiring). Some vehicles are equipped with a 10-pin plug in the installation compartment.

Do not connect this plug with the car radio as it could possibly damage the radio (by burning out the printed conductors). @@ g. @@ 1. @@5

Positive/negative connection with connection line 7 607 884 093. @@7 LF = left front, RF = right front, LR = left rear, RR = right rear.

If necessary, also use cables 7 607 647 093 and 7 607 648 000. @@@@Pull the unit out using both handles, see Fig. @@This information is subject to change without notice! @@@@Cut the ground line as necessary. then strip the insulation and attach a cable lug (solder if necessary). Remove the paint of the ground contact surface and treat with graphite grease (important for a good ground connection).

Brown / ground When connecting the positive line to terminal 15 of the fuse box (+12 V via ignition) behind the fuse, it will be possible to turn the system on and off via the ignition. @@@@Do not connect the vehicle's positive line! Lay the red positive wire with a 2. @@@@If necessary, drill a hole into the splash wall and use a cable duct as required. The control wire is the switched positive output for external pieces of equipment such as a power antenna, maximum load < 150 mA. (only Modena RD 148) When connecting a phone, the car radio will be automatically muted when making a call. Kapa minuskabeln på den fordonsspecifika Blaupunkt-adapterkabeln, förbind den med anslutningskabel 7 607 884 093 och lägg minuskabeln till ett lämpligt godsställe, exempelvis karosseriskruv, karosseriplåt, och förkorta i förhållande till godsstället (bilda inga ledningsringar). @@@@Lägg pluskabeln (röd) med stor area (2,5 mm²) till batteriet. .



[You're reading an excerpt. Click here to read official BLAUPUNKT LAUSANNE RD 148 user guide](http://yourpdfguides.com/dref/3310658)
<http://yourpdfguides.com/dref/3310658>