



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT MILANO MP28. You'll find the answers to all your questions on the BLAUPUNKT MILANO MP28 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT MILANO MP28
User guide BLAUPUNKT MILANO MP28
Operating instructions BLAUPUNKT MILANO MP28
Instructions for use BLAUPUNKT MILANO MP28
Instruction manual BLAUPUNKT MILANO MP28

www.blaupunkt.com

Radio | CD | MP3 | WMA

Milano MP28	7 648 493 110
Monte Carlo MP28	7 648 483 110
San Remo MP28	7 648 491 110

Bedienungs- und Einbauanleitung
Operating and installation instructions
Mode d'emploi et de montage
Istruzioni d'uso e di installazione
Gebruiksaanwijzing en inbouwhandleiding
Bruks- och monteringsanvisning

BLAUPUNKT



[You're reading an excerpt. Click here to read official BLAUPUNKT MILANO MP28 user guide](http://yourpdfguides.com/dref/2736518)
<http://yourpdfguides.com/dref/2736518>

Manual abstract:

This device is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist. The Blaupunkt GmbH declares that the device complies with the basic requirements and the other relevant regulations of the directive 89/336/EEG. These instructions employ the following symbols:

CAUTION! Warns about damaging the CD drive The CE mark confirms the compliance with EU directives. The device was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions. If you are installing device yourself You may only install the device yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the installation instructions at the end of these instructions. The device contains a Class 1 laser that can cause injuries to your eyes.

Do not open the device and do not perform any modifications. **dANGER!** Increased risk of injury from connector In case of an accident, the protruding connector in the front AUX-IN socket may cause injuries. The use of straight plugs or adapters can lead to an increased risk of injury. It is, therefore, recommended to use angled jack plugs, e. g. When changing the audio source), changing the volume is not audible.

Do not increase the volume during this mute phase. Always remove the control panel whenever you leave the vehicle. Transport the control panel so that it is protected against impacts and the contacts cannot become dirty. Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the device. Use only a dry or slightly moistened cloth for cleaning the device.

Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid. The warranty terms can be called up under www.blaupunkt.com. Remote control The steering wheel and/or handheld remote control allows you to access the basic functions of your car sound system safely and conveniently. You cannot switch the device on/off using the remote control! You can find out from your Blaupunkt dealer or on the Internet at www.blaupunkt.com. Com which remote controls can be used with your car sound system. Information about the availability of this service in your country can be found at www.blaupunkt.com. If you want to take advantage of this service, you may request a pick-up service for your device via the Internet. The device is equipped with a detachable control panel (flip-release panel) as a way of protecting your equipment against theft.

The device is worthless to a thief without this control panel. Protect your device against theft by taking the control panel with you whenever you leave your vehicle. Do not leave the control panel inside your vehicle - not even in a hidden place. Do not expose the control panel to direct sunlight or another heat source. Avoid direct skin contact with the control panel's electrical contacts. The device switches off as soon as the control panel is removed. Any CD already inserted in the device remains there. You can switch on the device with any button.

Note: To protect the vehicle battery, the device will switch off automatically after one hour if the ignition is off. You can adjust the volume in increments from 0 (off) to 100 (maximum). When you switch off the device, the volume selected last is stored. There are hands-free systems that activate the mute function of the radio with a LOW signal (0 V) or HIGH signal (12 V). This information can be found in the operating instructions of your hands-free system.

In the menu, you can select whether the radio should mute during an incoming call using a HIGH or a LOW signal: u Press the MENU button 3. Note: "HIGH" means that the device mutes with an incoming HIGH signal. "LOW" means that the device mutes with an incoming LOW signal. "OFF" means that the volume is not lowered during a call. You can quickly reduce the volume to a preset level.

Cancelling mute To return to your previously set volume level, u briefly press the On/Off button 6 again. If your car sound system is connected to a cell phone, the car sound system is muted when you answer a call. Note: During a phone call, no traffic announcements are switched through. This device is equipped with an RDS radio receiver. Many of the receivable FM stations broadcast a signal that not only carries the programme but also additional information such as the station name and programme type (PTY). To ensure proper functioning of the tuner, the device must be set for the region in which it is being operated. the tuner is factory-set to the region in which it was sold. U Select your tuner region with the button ?

There are various ways of tuning into a station. The radio tunes into the next receivable station. The wavebands MW and LW can be switched on or off via the menu.

The stations are stored in the FMT memory bank. Besides transmitting the station name, some FM stations also provide information on the type of programme that they are broadcasting. Your car radio can receive and display this information. For example, the programme types can be: CULTURE TRAVEL JAZZ SPORT SERVICE POP ROCK SCIENCE CHILDREN You can use the PTY function to select stations of a particular programme type. If you specify the programme type and start seek tuning, the radio will switch from the current station to a station of the selected programme type. notes: If the tuner does not find a station that corresponds to the selected programme type, you will hear a beep several times and "PTY NONE" appears briefly on the display. The radio will then retune to the station that it received last. U Select the waveband or memory bank with the BAND button >. u Press one of the station buttons 1 - 6 =. The stored station is played if it can be received.

During seek tuning, you cannot perform any menu settings. Your device is equipped with an RDS-EON receiver. You can select between -2 and +2. the settings are saved. Do not insert any shape CDs.

Do not insert any 8-cm CDs. Do not attach labels to CDs since the label may detach during operation. notes: Label CDs only by using a marker since it does not contain any caustic materials. To ensure proper functioning, use only CDs with the Compact-Disc logo. copy-protected CDs can cause playback problems.

Blaupunkt cannot guarantee the proper functioning of copy-protected CDs! Besides being able to play audio CDs on this device, you can also play CDs containing Mnce or several times.



[You're reading an excerpt. Click here to read official BLAUPUNKT MILANO MP28 user guide](http://yourpdfguides.com/dref/2736518)
<http://yourpdfguides.com/dref/2736518>

If you press the button @ once, the current track will be played again from the beginning. To fast search forwards or backwards, u press and hold down the ? The next randomly selected track will then be played. @@To repeat a track, u briefly press the 3 RPT button =. the display shows "RPT". The track is repeated continuously until you deactivate Repeat. To repeat a directory, u press the 3 RPT button = for longer than 2 seconds. Cancelling Repeat If you want to cancel the repeat function, u Press the 3 RPT button = again. The next track will then be scanned. The currently scanned track will then continue to be played normally.

You can adjust the time and time mode only if the menu item is set to "CLOCK ON". The time adjusts itself automatically with the RDS signal if it can be received. @@@@Note: Your user settings (audio, station memory) are overwritten when you load the standard settings. @@@@ the settings are saved. @@You can adjust the bass level between -10 and +10. @@ u Turn the volume control 5 to adjust the level from -10 to +10. When you have finished making your changes, u wait 5 seconds. @@@@@You can adjust the treble level between -10 and +10. @@ u Turn the volume control 5 to adjust the level from -10 to +10. When you have finished making your changes, u wait 5 seconds.

@@@@When you have finished making your changes, u wait 5 seconds. X-Bass allows you to increase the bass at low volume. When you have finished making your changes, u wait 5 seconds. When you have finished making your changes, u wait 5 seconds. This device features an equaliser in which the settings for "FLAT" (linear) and the music genres "CLASSICS", "POP M" and "ROCK M" are already programmed.

When you have finished making your changes, u wait 5 seconds. Note: Without equaliser presets, you can adjust the bass and treble from -10 to +10. If you change the treble and/or bass while an equalizer presetting (POP M, ROCK M, CLASSICS, FLAT) is selected, the equaliser switches off automatically (DSP OFF). To connect an external audio source via the rear or front AUX input (depending on the model), you need a cable with cinch plugs (rear AUX input) or a 3. The AUX input can be selected with the SRC button 4.

Subject to changes 53 When carrying out installation work and making connections please observe the following safety instructions: Â· disconnect the negative terminal of the battery! When doing so, please observe the vehicle manufacturer's safety instructions. â· Make sure you do not damage vehicle components when drilling any holes. â· The cross sections of the positive and negative cables must not be less than 1. You can obtain the adapter cable required for your vehi.



[You're reading an excerpt. Click here to read official BLAUPUNKT MILANO MP28 user guide](http://yourpdfguides.com/dref/2736518)

<http://yourpdfguides.com/dref/2736518>