



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT MODENA RD 148. You'll find the answers to all your questions on the BLAUPUNKT MODENA RD 148 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT MODENA RD 148
User guide BLAUPUNKT MODENA RD 148
Operating instructions BLAUPUNKT MODENA RD 148
Instructions for use BLAUPUNKT MODENA RD 148
Instruction manual BLAUPUNKT MODENA RD 148

Radio / CD

Modena RD 148

Operating instructions



 **BLAUPUNKT**
Bosch Gruppe



[You're reading an excerpt. Click here to read official BLAUPUNKT MODENA RD 148 user guide](http://yourpdfguides.com/dref/3857461)
<http://yourpdfguides.com/dref/3857461>

.....
.....
.....
.. 43 Checking the programme type of the station

.....
.....
.....
.....
... 43 Displaying the selected programme type

.....
.....
.....
.....
..... 43 Selecting a programme type

..... 43 Storing programme types ..
.....
.....
..... 44 Scanning stations with PTY SCAN ... 44 PTY priority .

.....
.....
.....
.....
..... 44 Adjusting the volume for traffic announcements and the warning beep 46 CD operation .

.....
.....
.....
.....
.. 47 Switching to CD operation ...

.....
.....
.....
.....
.. 47 Inserting a CD

.....
.....
.....
.....
.. 47 Removing a CD

.....
.....
.....
.....
.. 47 Selecting a track ...

.....
.....
.....
.....
.. 47 Repeat track

.....
.....
.....
.....
... 47 MIX playback

.....
.....
.....
... 47 SCAN ..

.....
.....
.....
.....
.....

..... 48 Selecting the display mode

.....
.....

... 48 Entering CD names

.....
.....
.....

... 48 Deleting CD names with DSC UPDATE . 48 KeyCard theft protection system

.....
.....
.....
.....

..... 37 Operating the unit ...

.....
.....
.....

.....
37 Removing the KeyCard

.....
.....

.... @@37 Displaying the radio pass data

.....

.. 38 Short Additional Memory (S.A.M.
) 38 Turn On Message (T.O.

M.)

.....

... @@38 Care of your KeyCard .

.....
.....
.....

. 38 Clock

.....
.....
.....
.....
.....

. 49 Setting the clock

.....
.....
.....

..... 49 Displaying the clock

.....
.....
.....

.....
.....
.....

..... 46 DSC programming

.....
.....

..... 53 Overview of the DSC factory settings .

. 55 Specifications

.....
.....
.....

.. 56 Blaupunkt telephone hotline

.....

.... 56 30 1 Switching on/off with the buttons: Press one of the buttons illustrated here after you have inserted the KeyCard.

The unit will play at the pre-adjusted volume. Switching on when the ignition is switched off: To keep on operating the set when the ignition is switched off (KeyCard is inserted), proceed as follows: Press ON after you hear the double beep tone. The unit will turn on. To prevent the battery from going dead, the system will turn off automatically after it has played for one hour. 2 VOL+ / VOL- Alters the volume. Each time the set is switched on, it will play at the pre-adjusted volume (VOL FIX). You can also change the VOL FIX setting (see the section on "DSC programming"). 3 Instantly mutes the volume. Press the button to mute the volume immediately. "MUTE" will appear in the display.

Cancel the function by pressing button or VOL+. If you press VOL-, the normal volume will be the same as the mute volume. To programme the mute volume level, proceed as follows: · Set the desired volume. for 2 seconds until you · Press hear a beep. Now this volume level is stored as your mute volume. Extra function Press to store settings made in the DSC menu. 4 SC - Scan Radio operation Scan Press SC briefly "FM SCAN" will alternate with the abbreviated name of the scanned station in the display. The unit will scan all of the FM stations in the current reception range. Preset Scan Preset Scan cannot be started unless PTY has been switched off ("PTY" does not light up in the display). Press SC for approximately 2 seconds until you hear a beep.

Switching on/off with the KeyCard: The set is switched on or off by inserting or removing the KeyCard. Note: Be sure to read the information in the section on "KeyCard theft protection system". Switching on/off via the ignition: If the equipment has been connected correspondingly, the set can also be turned on and off with the vehicle ignition. After the ignition has been switched off, a double beep tone will remind you that you should remove the KeyCard before leaving your vehicle. 31 PORTUGUÉS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH DEUTSCH Quick reference "SCAN" will alternate with the abbreviated name of the scanned station in the display.

The unit will scan all of the stations stored on the preset buttons in the current reception range. To stop Scan / Preset Scan: Press SC or the search rocker switch once again. PTY Scan PTY Scan cannot be started unless PTY is switched on ("PTY" lights up in the display). All of the stations for the programme type selected will be scanned briefly. CD operation CD Scan Press SC briefly "CD-SCAN" will appear in the display.

The unit will scan all CD titles. To stop CD Scan: Press SC once again. 5 LD - Loudness When the car stereo is playing quietly, the Loudness function creates a more natural sound by boosting the low frequency range. 32 To switch Loudness on/off: Press LD briefly. Additional function: CLOCK If you select the clock function the current time will appear permanently in the display. To switch the display mode: Press LD for approximately 2 seconds. The time will disappear from the display for approximately 8 seconds when you select a different function. 6 Rocker switch Radio operation For FM only: <</>> To scroll through the station networks when AF is on, NDR 1, 2, 3, 4, N-JOY, FFN, ANTENNE ...

. CD operation / Track selection Press ginning Up Down once to go back to the be- of the current track. Fast advance, audible (CUE). Hold down >> as long as required. Fast reverse, audible (REVIEW). Hold down << as long as required. / Station search Up Down <</>> Up/Down in short intervals (for FM only when AF is off) Extra rocker switch functions: Further setting functions with AUD A DSC MODE @ PTY ? Requirement: The corresponding function must be activated. 7 Display a i) AF j) T e f g h i jk l m n k) A l) LD m) PTY n) CD o) T5 b o c - Alternative frequency for RDS operation - Traffic programme (a traffic information station is playing) - Priority for traffic information stations - Loudness is activated - Programme type function is activated - A CD is inserted in the unit - Track no. 5 is playing Flashing KeyCard tongue When the radio is turned off and the KeyCard removed, the KeyCard tongue can be programmed to flash for optical theft protection. For more information see the section on "DSC programming".

9 BND Switches between the memory levels/ wavebands FMI, FMII, TS (Travelstore), M and L. Additional Travelstore function Storing the six stations with the strongest reception using Travelstore: Press BND until you hear a beep or "T--STORE" appears in the display. : AF Alternative Frequency during RDS operation: When "AF" lights up in the display, the system will automatically search for a frequency offering better reception for the same RDS programme.



[You're reading an excerpt. Click here to read official BLAUPUNKT MODENA RD 148 user guide](http://yourpdfguides.com/dref/3857461)
<http://yourpdfguides.com/dref/3857461>

AF on/off: Press AF briefly. 8 KeyCard theft protection system To operate the set the KeyCard must be inserted first.

d KeyCard Insert KeyCard When the KeyCard tongue is protruding out of the unit, insert the KeyCard with the contact area facing up into the slot in the middle of the area. If necessary, pull the KeyCard forward. Be sure to read the information in the section on "KeyCard theft protection system". a) NDR2 - Station name b) VIVALDI - CD name or c) 1 : 52 - CD time (playback time) and number (CD number) d) 16:31 - Time e) FM - Waveband f) 6 - Preset button (1-6) g) I, II, T - Memory bank I, II or Travelstore h) lo - Seek tuning sensitivity 33 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH DEUTSCH Regional function on/off: Press the AF button for approximately 2 seconds until you hear a beep. "REG ON" or "REG OFF" will appear in the display (see the section on REG - regional programme).

; TA (Traffic Announcement) When "T" lights up in the display, the radio is currently playing a traffic information station. When "A" appears in the display, the priority for traffic stations has been activated. You can only tune into those stations which broadcast traffic announcements. Priority on/off: Press TA. < 1, 2, 3, 4, 5, 6 - preset buttons Radio operation On FM, you can store six stations for each of the memory banks I, II and "T". On MW/LW, you can store six stations each for each waveband. To store a station - Press a preset button during radio operation and hold it down until the set resumes play after the muting and you hear a beep. 34 To recall a station - Select the desired waveband. On FM, adjust the corresponding memory bank and press the relevant preset button briefly. Extra function for preset buttons To store and recall a PTY programme type.

On FM, you can store and recall one programme type on/from each preset button when PTY is active ("PTY" lights up in the display). CD operation I/II - Pause Switching Pause on/off: Press I/II. "CD PAUSE" will appear briefly in the display. 2/RPT - Repeat Repeat track: Press 2/RPT, "REPEAT" will appear briefly in the display and the track will repeat until 2/RPT is pressed again. "RPT OFF" will then appear in the display. 3/MIX MIX plays the CD tracks in random order. Switching MIX on/off: Press 3/MIX briefly. The mode activated will appear briefly in the display: "MIX CD" or "MIX OFF". = · SRC SRC (Source) When a CD is inserted you can switch between the different audio sources radio and CD. (Eject) Hold down the button for approximately 2 seconds and the CD will eject.

> CD slot When you insert a disc into the slot with the label side facing up, it will be pulled in automatically and transported to the playback position. CD playback switches on automatically. ? PTY (Programme Type) In the PTY mode, the preset buttons become programme type buttons. With each preset you can select one programme type such as NEWS, SPORT, POP MUSIC, EDUCATE, etc. With the << >> rocker switch, it is possible to recall all of the PTY programme types as long as the PTY function has been activated ("PTY"e unit Turn on the set.

With the KeyCard tongue protruding out of the unit, insert the KeyCard into the slot with the contact area facing up in the middle of the area. The car radio is now ready for operation. If a wrong KeyCard is inserted, then "CARD ERR" will appear in the display. In this case please do not make any further adjustments. The system will switch off by itself after approximately 10 seconds.

If another card type is inserted (e.g. phone or credit card), the display now exactly which programme you have tuned into, making it easy to find the desired station quickly. But RDS offers you further advantages: REG - regional programme Certain radio programmes are split up at times into regional programmes offering local information. The 1st programme broadcast by NDR, for example, offers programmes with different contents in the northern German states of Schleswig-Holstein, Hamburg and Lower Saxony at certain times of the day. If you are listening to a particular regional programme and wish to continue doing so, · press the AF button for approximately 2 seconds. "REG ON" will appear in the display. If you leave the service area of the regional programme you are tuned into, or if you 39 AF - Alternative frequency The AF (Alternative Frequency) function makes sure that the radio always tunes into the strongest frequency of the currently selected programme automatically. This function is activated when "AF" appears in the display. In order to switch this function on or off, · press the AF button briefly.

While searching for the strongest reception signal, the radio may switch to mute briefly. PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO If the reception quality of the selected programme deteriorates beyond a certain point: · Tune into another station. FRANÇAIS "SEARCH" will disappear from the display when the alternative frequency has been found or after the frequency band has run through completely. ENGLISH Using the SRC (source) button you can switch between the radio and CD audio sources. The Radio Data System will enhance your enjoyment when you listen to FM radio stations. If "SEARCH" appears in the display when the radio is switched on or one of the stored frequencies recalled, the unit is already automatically searching for an alternative frequency. DEUTSCH Selecting the operating mode Radio operation with RDS (Radio Data System) would like to take advantage of full RDS service, switch to "REG OFF". · Press the AF button for approximately 2 seconds until "REG OFF" appears. "REG ON" or "REG OFF" will appear briefly in the display each time the radio is switched on. Station tuning Automatic tuning - / Press / ; the car radio will automatically search for the next station. If you hold / pressed up or down on the rocker switch, seek tuning will speed up in the upwards or downwards direction. Manual tuning: Press << >>; the frequency will change in short intervals in the downwards or upwards direction. If you hold << >> pressed to the left or the right on the rocker switch, the frequency scan will speed up. · Selecting a waveband With this car radio you can select between the following wavebands: FM 87.5 - 108 MHz MW 531 - 1602 kHz LW 153 - 279 kHz · Select the desired waveband by pressing the BND button.

Note: In the DSC menu it is possible to block MW or LW or both wavebands for station selection. The advantage of doing this is that only the required wavebands can be selected and it is no longer necessary to press BND so often.



[You're reading an excerpt. Click here to read official BLAUPUNKT MODENA RD 148 user guide](http://yourpdfguides.com/dref/3857461)
<http://yourpdfguides.com/dref/3857461>

Switching DCF 77 on/off: · Press DSC for approximately 2 seconds. If the display shows "DCF77 ON", DCF 77 is active. If the display shows "NO DCF77", DCF 77 is inactive.

To quit this function: · Press DSC. · Press DSC briefly, "CLOCKSET" will appear in the display. Press << >> to set the hours/minutes. You can move to a different position by pressing /. After you have set the clock, press briefly to store the new setting. Setting the clock a) automatically The clock is set automatically when the radio is tuned into an RDS station which has the "CT" function (clock time). If the RDS signal is not received for a week, the radio will attempt to use · 49 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS b) manually with DSC-CLOCKSET ITALIANO for approximately 2 seconds. · Press "UPDATE" will appear briefly in the display. The deletion process is complete. If it is not possible to receive the DCF 77 signal, the radio will switch off after a few seconds.

FRANÇAIS "CLK SYNC" will appear in the display for 20 seconds and you will hear a melody (Big Ben) to indicate that the radio is still active and that the power antenna (if connected) is still extended. ENGLISH DCF 77 to adjust the clock to the correct time the next time the radio is switched off. Condition: DCF 77 is switched on. DEUTSCH Clock Deactivating the hour correction function You can set the clock to permanent display in both the radio and CD modes. If another function is selected, the clock display will disappear for approximately 8 seconds and the station selected, for example, will appear in the display.

To switch the display mode: · Press LD for approximately 2 seconds. In the DSC menu it is possible to switch off the hour correction function with "CLK MAN/ CLK AUTO". An automatic correction for minutes will continue to take place. This is useful if you would like to display the time for a different time zone, for example. If necessary, · Press DSC briefly and · Press / as often as required until "CLK MAN/CLK AUTO" appears in the display.

To deactivate the hour correction function press << >> to select "CLK MAN". · Press << >> to set the hours/minutes. Displaying the clock Warning note Danger of damaging the automatic power antenna in a car wash If your vehicle is equipped with an automatic power antenna, it might still remain fully extended after you have turned the radio off in order to synchronise the time with DCF 77. Before you drive into a car wash · switch the radio off by pressing the ON button. The power antenna will retract, if it doesn't, press ON again. DCF 77 will remain inactive for as long as the radio is switched off. Do not drive into the car wash unless the power antenna has retracted! After you leave the car wash "DCF 77" will reactivate when you switch the radio on again. Correcting the clock after the power has been disconnected If the radio has been disconnected from its power source for a longer period of time, "0:00" will appear in the display when it is re-connected. The time will be set automatically by RDSCT, but can also be adjusted manually if desired. You need only set the time manually if it is not possible to receive an RDS station with CT (clock time).

50 Position, installation and the rear volumes of, for example, the door or rear window shelf all play an important role. Even the sound produced by well selected and installed speakers can be affected negatively by resonance frequencies in the vehicle interior. As a result, the bass sounds may be lost or reverberate, the mid-range tones sound too overpowering and music instruments or voices may be distorted or the total sound quality may be completely lifeless. The overall sound quality can be greatly enhanced if certain frequencies are suppressed or boosted. This car stereo is equipped with 2 parametric filters. The first filter "LOW EQ" can be set from 32 to 500 Hz, the second filter "HIGH EQ" from 630 to 10000 Hz. In this context, parametric means that it is possible to set the frequency and either boost or reduce it (+10 to 20 dB) individually for each of these filters. These parametric filters can be adjusted to very exact settings even without the help of measuring instruments. Notes on making the settings The following notes are intended as recommendations only. They do not necessarily reflect your own personal sound preferences.

We recommend that you use a music CD you are familiar with to make the settings. The CD should include tracks with different instruments and vocals. Purely electronic music is not well suited to serve as a basis for making the settings because the original sounds cannot be determined. Before you set the equaliser, set bass, treble, balance and fader to "0". This setting is described in the Quick Reference under A AUD.

Now listen to the CD you have selected. Evaluate the sound according to your own personal preferences. Now refer to "Sound impression/problem" in the table and you will find suggestions to eliminate any problems under "What to do". Make the settings for bass and the lower mid-range tones with the LOW EQ filter, · Press DSC. Press / as often as necessary until "HIGH EQ" or "LOW EQ" appears in the display.

Press << or >> once and Set the level in the following table by pressing /. Press << >> to switch the frequency range. · · · Setting recommendations on the Internet Refer to our home page on the Internet <http://www.blaupunkt.de> to find setting recommendations for new vehicles on the market. 51 PORTUGUÊS ESPAÑOL SVENSKA Now you can compare the sound produced by your car stereo with and without the equaliser. NEDERLANDS to store your settings. · Press You can switch the equaliser on and off by pressing AUD for approximately 2 seconds. ITALIANO FRANÇAIS ENGLISH The acoustic characteristics of the car interior affect the quality of the sound reproduced in your vehicle to a much greater extent than the speakers. The individual steps you have to take to make these settings are described in the table.

select HIGH EQ for treble and mid-range tones. The "HIGH EQ" and "LOW EQ" filters can be set in the DSC menu: DEUTSCH Setting the equaliser Assistance in setting your equaliser Start to make your settings in the mid-range/treble and end it with the bass range. Frequency range Bass 30 100 Hz Sound impression / Problem Bass reproduction too weak What to do Boost the basses with the "LOW EQ" filter Frequency: 50 to 100 Hz Level: +4 to +6 dB Notes Avoid distortion. Boost the level carefully if the speaker diameter is too small.



[You're reading an excerpt. Click here to read official BLAUPUNKT MODENA RD 148 user guide](http://yourpdfguides.com/dref/3857461)
<http://yourpdfguides.com/dref/3857461>

Lower mid-range 100 400 Hz Unclear bass Playback reverberates Unpleasant pressure on the ears Reduce the lower mid-range with the "LOW EQ" filter
Frequency: 125 to 400 Hz Level: approx. -4 dB The tone may become too lean and aggressive. Pay attention to the underlying tone of the music Mid-range
sound 400 4 000 Hz Sound appears to be too much in the foreground, very aggressive, no stereo effect Reduce the mid-range with "HIGH EQ" filter
Frequency: 1 000 to 2 500 Hz Level: -4 to -6 dB Playback should not be too quiet. Tone too powerless. Treble 4 000 20 000 Hz Lifeless reproduction Lack of
transparency Instruments do not sparkle Boost treble range with "HIGH EQ" filter Frequency: approx. 10 kHz Level: +2 to +4 dB Avoid a piercing type of
tone.

@@@ If you wish to alter any of the programming, · press DSC. @@@ Adjust the desired volume level with << >>. When adjusted to "VOL 0", the
system will come on at the volume selected before it was switched off. Use this function to delete CD names during CD operation to make more storage
capacity available for new discs. (See "Deleting CD names with DSC-UPDATE").

CD UPD / << >> Select function Adjust/recall value 53 PORTUGUÊS ESPAÑOL SVENSKA To read out the KeyCard data. The card supplied with the radio
is used to display the model name, type number (7 6..) and the serial number. @@(See the section on "Short Additional Memory S.

A.M."). @@Press << >> to set the hours/minutes. Move to the next position (flashing) by pressing / . To store the setting selected, press briefly.

@@@ Switches the bandwidth in the FM frequency range. When there is a large number of stations within your current reception range, use << >> to
switch to SHARX ON which will prevent most interference from adjacent radio stations. This function has been set to "SHARX ON" at the factory. Here you
can choose between LED ON or LED OFF.

With LED ON, the KeyCard tongue will flash for extra anti-theft protection when the unit has been switched off and the KeyCard removed. COLOUR
Gradually matches the radio illumination to the dashboard lighting. (green/orange) Acknowledgement tone for all functions which require a button to be
pressed for more than one second. The volume can be adjusted from between 0 to 9. (0 = off). To adjust the seek tuning sensitivity. "LO" stands for local
reception. "DX" stands for distant reception. Select "LO 3" if you want to receive strong stations in the local area, select "DX 1" if you want to tune into
weaker stations which are further away. TA VOL BEEP SHARX To adjust the traffic announcement and warning beep volume from between 0 to 66.
The message will then come through at this volume, if the standard volume is lower. If the standard volume is set higher than the TA VOL level, then the
traffic report will be played at the standard volume. Use this function to set the scan time for the radio or CD player from 5 to 30 seconds. LO-DX
SCANTIME LED ON STEREO/MONO Switch modes by pressing << >>. The mode selected will appear briefly in the display.

The radio will begin with STEREO playback each time it is switched on. 54 MW OFF LW, FM only LW OFF MW, FM only AM OFF FM only LOUDNESS
Loudness - When listening at a low level, the Loudness function creates a more natural sound by boosting the low frequency range. LOUD 1 - Low boost
LOUD 6 - Max. boost HIGH EQ Equaliser setting: To activate the frequencies and set the level for the upper frequency range. Refer to the detailed
instructions in the section on "Equaliser setting".

CD NAME CD DISP To select the NAME or TIME display mode. Refer to the detailed instructions in the section on "Select display mode". Switches off the
hour correction function. Read the information in the section on "Clock, Deactivating the hour correction function". CLK MAN 55 PORTUGUÊS To quit the
DSC programming mode and store the adjustment: · Press DSC. ESPAÑOL SVENSKA NEDERLANDS ITALIANO Only available during CD playback. Use
this function to name your CDs. (See "Entering CD names"). FRANÇAIS AM ON/OFF It is possible to block out one or both of the AM wavebands (MW/LW).
This means you will select only the wavebands you want when you press BND: AM ON all wavebands are available LOW EQ Equaliser setting: To activate
the frequencies and set the level for the lower frequency range.

Refer to the detailed instructions in the section on "Equaliser setting". Overview of the DSC factory settings CLOCKSET VOL FIX CD UPD PTY LANG
READ KC LEARN KC SHARX LED COLOUR BEEP LO / DX TA VOL SCANTIME STEREO AM ON / OFF LOUDNESS HIGH EQ LOW EQ CD NAME CD
DISP CLK AUTO / MAN 0 ENGLISH SHARX ON ON green 4 DX 1 30 10 sec. ON AM ON 3 0 dB/630 Hz 0 dB/32 Hz TIME CLK AUTO ENGLISH
DEUTSCH Specifications Amplifier Output power: 4 x 23 W RMS power acc. to DIN 45324 at 14.4 V 4 x 35 W max. power Blaupunkt telephone hotline
Address of the next service centre in your vicinity (only for Germany) If you would like to know the address of the next Blaupunkt service centre of your area
without having our service list at hand: - Find out your area code. Then call the following chargeable phone number: 01 80 / 5 25 56 66. Using the area code
to be entered you will be automatically given the address and phone number of the next Blaupunkt service centre. You can also request this information by
fax. Tuner Wavebands: FM MW LW FM sensitivity: 87.

5 108 MHz 531 1602 kHz 153 279 kHz 0.9 µV at 26 dB signal-to-noise ratio FM frequency response: 20 - 16 000 Hz - CD player Frequency response: 20 -
20 000 Hz Subject to modifications! 56 Blaupunkt-Werke GmbH Bosch Gruppe 7/98 Pf K7/VKD 8 622 401 304 .



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/3857461)

[MODENA RD 148 user guide](http://yourpdfguides.com/dref/3857461)

<http://yourpdfguides.com/dref/3857461>