



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT SAN DIEGO MP27. You'll find the answers to all your questions on the BLAUPUNKT SAN DIEGO MP27 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT SAN DIEGO MP27
User guide BLAUPUNKT SAN DIEGO MP27
Operating instructions BLAUPUNKT SAN DIEGO MP27
Instructions for use BLAUPUNKT SAN DIEGO MP27
Instruction manual BLAUPUNKT SAN DIEGO MP27

www.blaupunkt.com

Radio | CD | MP3 | WMA

San Diego MP27 7 647 693 510

Operating and installation instructions
Mode d'emploi et de montage
Instrucciones de manejo e instalación
Instruções de serviço e de montagem
操作及安装手册
사용 및 장착 설명서

BLAUPUNKT



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN DIEGO MP27 user guide](http://yourpdfguides.com/dref/2684542)
<http://yourpdfguides.com/dref/2684542>

Manual abstract:

? @@Long press: Starts the Travelstore function. 8 ESC button Confirm menu item and return to the display of the MENU or AUDIO main level. 9 DIS button Short press: Briefly displays alternative display contents (e.g. time). Long press: Changes display contents. : MENU button (OK) Short press: Calls up the menu for settings. Confirming the menu selection (OK). Long press: Starts the Scan function. 3 ENGLISH 1 button to remove the control panel (release panel) ; AUDIO button Sets bass, treble, balance and fader.

Selects an equalizer presetting. Contents About these instructions

.....

.....

. 5 For your safety

.....

.....

.....

..... 6 Scope of delivery

.....

.....

.....

..... 7 Remote control

.....

.....

.....

.....

7 Detachable control panel

.....

..... 8 Switching on/off .

.....

.....

.....

.....

. 9 Adjusting the volume

.....

.....

.... 10 Radio mode

.....

.....

.....

.....

. 11 Adjusting the tuner.....

.....

.....

..... 11 Switching to radio mode

.....

... @@ 12 Tuning into a station ..

.....

.....

..... @@ 12 Storing stations

.....

.....

.....

..... @@ 12 Listening to stored stations

.....

... 13 Scanning receivable stations (SCAN) ..

13 Setting the scanning time

..... 13 CD mode

.....

.....
.....
.....
.....
.....
.. 14 Switching to CD mode ...
.....
..... 14 Selecting tracks ...
.....
.....
.....
..... 14 Fast track selection
.....
.....
.....
15 Fast searching (audible).....
.....
... 15 Random track play (MIX) ..
.....
..... 15 Scanning tracks (SCAN).....
.....
.....
... 15 Repeating tracks (REPEAT)
..... 15 Interrupting playback (PAUSE)....
.....
15 Configuring the display
.....
... 16 Displaying CD text
.....
.....
..... 16 Ejecting a CD.
.....
.....
.....
.....
.....
.. 16 MP3/WMA mode
.....
.....
.....
. 17 Preparing an MP3/WMA CD
.... 17 Switching to MP3 mode .
.....
.....
.. 18 Configuring the display
.....
.....
.....
. 18 Selecting a directory
.....
.....
... 19 Selecting Tracks/Files..
.....
.....
.....
.... 19 Fast search
.....
.....
.....

..... 19 Random track play (MIX) .

.....

.....

..... 19 Scanning tracks (SCAN)...

..... @@20 Interrupting playback (PAUSE).

.....

... 20 CD-changer mode

.....

.....

.....

. 20 Switching to CD-changer mode 20 Selecting CDs.

.....

.....

.....

.....

. 20 Selecting tracks

.....

.....

.....

20 Fast searching (audible).....

.....

... 21 Configuring the display ..

.....

..... 21 Repeating individual tracks or whole CDs (REPEAT) ...

.....

.....

..... 21 Random track play (MIX) .

.....

.....

. 21 Scanning all tracks on all CDs (SCAN) .. 21 Interrupting playback (PAUSE)..

..... 22 CLOCK time ...

.....

.....

.....

.....

.... 22 Displaying the time

.....

.....

..... 22 Setting the time ..

.....

.....

.....

..... 22 Selecting 12/24-hour clock mode ...

. 22 Displaying the time continuously when the device is off and the ignition is on

.....

.....

..... 23 Sound .

.....

.....

.....

.....

.....

....	23 Adjusting the bass .
.....
.....	23 Adjusting the treble .
.....
...	23 Setting the left/right volume distribution (balance)
.....
....	24 Adjusting the front/rear volume distribution (fader)
.....
.....
...	24 Equalizer presettings (Presets) ..
.....	24 X-BASS

.....	25 External audio sources .
.....
.....

25 Specifications

.....	26 Installation instructions
.....

152 4 About these instructions These instructions contain important information to easily and safely install and operate the device. · Read these instructions carefully and completely before using the device. · Keep the instructions at a location so that they are always accessible to all users. · Always pass on the device to third parties together with these instructions. In addition, observe the instructions of the devices used in conjunction with this device. This device is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist. Declaration of conformity The Blaupunkt GmbH declares that this car sound system complies with the basic requirements and the other relevant regulations of the directive 1999/5/EG. Symbols used These instructions employ the following symbols: CAUTION! Warns about laser beam CAUTION! Warns about damaging the CD drive The CE mark confirms the compliance with EU directives.

u Identifies a sequencing step · Identifies a listing Service In some countries, Blaupunkt offers a repair and pickup service. Under www.blaupunkt.com, you can obtain information whether this service is available in your country. If you want to use this service, you may request a pickup service for your device using the Internet. Warranty We provide a manufacturer's warranty for products bought within the European Union. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid. The warranty terms can be called up under www.blaupunkt.com or requested directly from: Blaupunkt GmbH Hotline Robert-Bosch-Str.

200 D-31139 Hildesheim 5 ENGLISH About these instructions Use as directed For your safety For your safety The device was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions: If you are installing device yourself You may only install the device yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the installation instructions at the end of these instructions. After operation · The device is worthless to a thief without the control panel. Always remove the control panel whenever you leave the vehicle.

· Transport the control panel so that it is protected against impacts and the contacts cannot become dirty. Cleaning notes Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the device. · Use only a dry or slightly moistened cloth for cleaning the device. · If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol.

Observe the following! Danger! The device contains a Class 1 laser that can cause injuries to your eyes.

Do not open the device and do not perform any modifications. In operation · Operate the device only if traffic situation permits it! Stop at a suitable location to perform more extensive operations. · Remove or attach the control panel only while the vehicle is standing an. · Always listen at a moderate volume so that you can hear acoustic warning signals (e.g. police sirens) and protect your hearing. Do not increase the volume when selecting a different audio source or while the CD changer changes the CD. The device is briefly muted. 6 Disposal of old unit (EU countries only) Do not dispose of your old device in the household trash! Use the return and collection systems available to dispose of the old device. Scope of delivery Remote control The scope of delivery includes:

- 1 Car sound system
 - 1 Support frame
 - 2 Disassembly bar
 - 1 Operating instructions
 - 1 Handheld remote control RC 12H
- Optional equipment (not part of the scope of delivery) Use only accessories approved Blaupunkt.

by Your car sound system is equipped with an RC 12H handheld remote control. Most of the functions can be operated conveniently and safely with the remote control. Note that a line of sight must exist between the remote control and the remote control receiver, which is located in the detachable control panel. You cannot switch the device on/off using the remote control. Steering wheel remote control A steering wheel remote control allows for safely and conveniently operating the basic functions of your car sound system from the steering wheel.



[You're reading an excerpt. Click here to read official BLAUPUNKT
SAN DIEGO MP27 user guide
http://yourpdfguides.com/dref/2684542](http://yourpdfguides.com/dref/2684542)

You cannot switch the device on/off using the remote control. You can find out from your Blaupunkt dealer or on the Internet at www.blaupunkt.com which remote controls can be used with your car sound system. Amplifiers You can use all Blaupunkt and Velocity amplifiers.

CD changers You can connect the following Blaupunkt CD changers: CDC A 03, CDC A 08 and IDC A 09. 7 ENGLISH Scope of delivery Remote control Detachable control panel Detachable control panel Theft protection The device is equipped with a detachable control panel (flip-release panel) as a way of protecting your equipment against theft. The device is worthless to a thief without this control panel. Protect your device against theft by taking the control panel with you whenever you leave your vehicle. Do not leave the control panel inside your vehicle - not even in a hiding place.

The control panel has been designed to be easy to use. Notes: · Never drop the control panel. · Never expose the control panel to direct sunlight or other heat sources. · Avoid direct skin contact with the control panel's electrical contacts. If necessary, please clean the contacts with a lint-free cloth moistened with cleaning alcohol.

u Pull the control panel straight out of the device and to the left. The device switches off. All the current settings are saved. Any CD already inserted in the device remains there. Attaching the control panel u Push the control panel into the guides of the device from the left to the right. u Carefully push on the left side of the control panel until it clicks into place. Detaching the control panel 1 Note: When attaching the control panel, make sure you do not push on the display. If the device was still switched on when you detached the control panel, it will automatically switch on with the last setting activated (radio, CD, CD changer or AUX) when the panel is replaced. u Press the button 1. The locking mechanism of the control panel is unlocked.

8 Switching on/off There are various ways of switching the device on/off: Switching on/off using the vehicle ignition The device will switch on/off simultaneously with the ignition if the device is correctly connected to the vehicle's ignition and you did not switch the device off by pressing button 2.

Switching on/off using button 2 u To switch on the device, press button 2. u To switch off the device, press and hold down button 2 for longer than two seconds. The device switches off. Note: To protect the vehicle battery, the device will switch off automatically after one hour if the ignition is off. Switching on with CD draw-in If the device is switched off and no CD is in the drive, u gently insert the CD with its printed side uppermost into the drive 4 until you feel some resistance. The drive draws in the CD automatically. You must not hinder or assist the drive as it draws in the CD. The device switches on and CD playback starts. Switching the device on/off using the detachable control panel u Detach the control panel.

The device switches off. u Attach the control panel again. The device switches on. The last setting (radio, CD, CD changer or AUX) is reactivated. 9

ENGLISH Switching on/off Note: If the vehicle ignition was switched off prior to inserting the CD, you must switch in on first with the button 2 to start the playback are three memory banks available for the FM waveband (FM1, FM2 and FMT) and one for the AM waveband.

Five stations can be stored in each memory bank. To switch between the memory banks FM1, FM2 and FMT or the AM waveband, u briefly press the BND/TS ? button. "SENS HI" means that the tuner is set to the highest sensitivity setting. @@u Set the desired sensitivity level using buttons 6. @@@@Automatic station seek tuning u Press the or button 6.

The radio tunes into the nextor further information, please read the chapter entitled "MP3/ WMA mode". Selecting tracks u Press one of the arrow buttons 6 to select the next or previous track. @@@@The track is repeated continuously until you deactivate RPT. @@@@The next randomly selected track will then be played. Cancelling MIX u Press the 5 MIX button < again. @@ "PAUSE" appears on the display. Cancelling pause u During the pause, press the button 3 <. @@u Press and hold down the MENU button : for longer than two seconds. The next track will then be scanned. Note: You can set the scanning time.

@@@@The CD is ejected. u Remove the CD. @@10 seconds. @@The CD text might contain the names of the artist, album and tracks.

@@@@@Switching CD text on/off u Press the MENU button :. @@@@You can also play WMA files. The operation for playing MP3 and WMA files is identical. @@@@@The format of the CD must be ISO 9660 Level 1/Level 2 or Joliet. Other formats cannot be played reliably. You can create a maximum of 252 directories on a CD.

@@@@The device is capable of displaying the directory name. Name the directories and tracks/files using your CD burner software.

@@@@@The leading zeros must also be entered. @@This device can display ID3 tags (version 1). When creating (encoding) MP3 files from audio files, you should use bit rates up to a maximum of 256 Kbit/sec.

This device can only play MP3 files that have the ".MP3" file extension. Notes: To ensure uninterrupted playback, · do not try changing the file extension to ".MP3" of any files other than MP3 files and then attempt to play them! The device will ignore these invalid files during playback. · Do not use "mixed" CDs containing both non-MP3 data and MP3 tracks (the device only reads MP3 files during MP3 playback).

· Do not use mix-mode CDs containing both CD-audio tracks and MP3 tracks. If you try playing a mix-mode CD, the device will only play the CDaudio tracks. Configuring the default display You can display various types of information on the current track: · Track number and playing time "TRCKTIME" · Track number and time "TRCK-CLK" · Directory number and track number "DIR-TRCK" · Directory number and time "DIR-CLK" · Directory number and playing time "DIR-TIME" Note: After the MP3 scrolling text was scrolled once after a track change, the information is permanently shown on the display. To switch between the different display options, u press and hold down the DIS button 9 for longer than 2 seconds. u For an additional selection, press and hold down the DIS button 9 for longer than 2 seconds. Configuring the MP3 scrolling texts One of the following scrolling texts is shown once on the display with every track change. Afterwards, the configured standard display is shown. The available scrolling texts are: · Directory name ("DIR NAME") · Name of the track ("SONG NAME") · Name of the album ("ALBM NAME") · Name of the artist ("ARTIST") · File name ("FILE NAME") Switching to MP3 mode MP3 mode is activated in the same way as normal CD mode.



[You're reading an excerpt. Click here to read official BLAUPUNKT](#)

[SAN DIEGO MP27 user guide](#)

<http://yourpdfguides.com/dref/2684542>

For further information, please read the section entitled "Switching to CD mode" in the "CD mode" chapter. Configuring the display The following settings require that an MP3 CD is in the device.

18 MP3/WMA mode Note: Artist, track and album name are part of the MP3-ID tag of version 1 and can only be displayed if they have been saved with the MP3 files (for further information, please read the instructions that came with your PC's MP3 software or burner software). To switch between the different display options, u press the MENU button :. u Press the or button 6 repeatedly until "MP3 DISP" appears on the display. u Select the desired MP3 scrolling text with the or button 6. When you have finished making your changes, u press the MENU button : twice. To play the tracks in the current directory in random order, u briefly press the 5 MIX button <. "MIX DIR" appears on the display and the MIX symbol lights up. To play all the tracks contained on the inserted MP3 CD in random order, u press and hold down the 5 MIX button < for longer than two seconds. "MIX CD" appears on the display and the MIX symbol lights up. Cancelling MIX To cancel MIX, u briefly press the 5 MIX button <.

"MIX OFF" appears on the display and the MIX symbol disappears. Selecting a directory To move up or down to another directory, u press the or button 6 once or several times. Scanning tracks (SCAN) You can scan (briefly play) all the tracks on the CD. u Press and hold down the MENU button : for longer than two seconds. The next track will then be scanned.

"TRK SCAN" appears on the display next to the flashing track numbers. The titles of the CD are scanned in ascending order. Note: You can set the scanning time. For further information on setting the scanning time, please read the section entitled "Setting the scanning time" in the "Radio mode" chapter. Selecting Tracks/Files to move up or down to another track/file in the current directory, u press the or button 6 once or several times.

If you press the button 6 once, the current track will be played again from the beginning. Fast search To fast search backwards or forwards, u press and hold down the or button 6 until fast searching backwards / forwards begins. 19 ENGLISH Random track play (MIX) MP3/WMA mode CD-changer mode Cancelling SCAN and continuing listening to a track u Briefly press the MENU button :. @@@@@"RPT DIR" appears briefly on the display. @@@@A border appears around the CD changer symbol. @@@@@"PAUSE" appears on the display. Cancelling pause u During the pause, press the button 3 <. @@@@@"MIX CD" appears briefly and MIX lights up on the display. @@"MIX ALL" appears briefly and MIX lights up on the display. Cancelling MIX u Briefly press the 5 MIX button <.

@@"RPT TRCK" appears briefly and RPT lights up on the display. To repeat the current CD, u press and hold down the 4 RPT button < for longer than two seconds. "RPT DISC" appears briefly and RPT lights up on the display. Scanning all tracks on all CDs (SCAN) To scan (briefly play) all the tracks on all the inserted CDs in ascending order, u press and hold down the MENU button : for longer than two seconds. "TRK SCAN" appears on the display and the number of the current track flashes. 21 ENGLISH Fast searching (audible) Cancelling REPEAT To stop the current track or current CD from being repeated, u briefly press the 4 RPT button <. "RPT OFF" appears and RPT disappears on the display. CD-changer mode CLOCK time Stopping SCAN To stop scanning, u briefly press the MENU button :. The currently scanned track will then continue to be played normally. Note: You can set the scanning time.

For further information, please read the section entitled "Setting the scanning time" in the "Radio mode" chapter. CLOCK time Displaying the time To briefly display the time, u press and hold the SRC/ button > until the time appears on the display. Setting the time To set the time, u press the MENU button :. u Press the or button 6 repeatedly until "CLOCK SET" appears on the display. u Press the button 6.

The time appears on the display. The hours flash and can be adjusted. buttons u Adjust the hours with the 6. Once the hours are set, u press the button 6. The minutes flash.

butu Adjusts the minutes with the tons 6. u Press the MENU button : twice. Interrupting playback (PAUSE) u Press the button 3 <. "PAUSE" appears on the display. Cancelling pause u During the pause, press the button 3 <. Playback is continued. Selecting 12/24-hour clock mode u Press the MENU button :. The display shows "MENU". u Press the or button 6 repeatedly until "24 H MODE" or "12 H MODE" appears on the display. u Press the or button 6 to switch between the modes.

22 CLOCK time Sound Displaying the time continuously when the device is off and the ignition is on To display the time when the device is off and the vehicle ignition is on, u press the MENU button :. The display shows "MENU". u Press the or button 6 repeatedly until "CLOCK OFF" or "CLOCK ON" appears on the display. u Press the or button 6 to switch the display between ON and OFF. When you have finished making your changes, u press the MENU button :.

You can adjust the sound settings (bass and treble) separately for each source (radio, CD, CD changer or AUX). The volume distribution settings (balance and fader) apply to all the audio sources. Note: If bass and treble allow only a limited adjustment, set the equaliser presetting to EQ OFF. For further details, please read the section "Equaliser presets". Adjusting the bass u Press the AUDIO button ;.

"BASS" appears on the display. u Press the or button 6 to adjust the bass. When you have finished making your changes, u press the AUDIO button ;.

Adjusting the treble u Press the AUDIO button ;. "BASS" appears on the display.

u Press the button 6 repeatedly until "TREBLE" appears on the display. u Press the or button 6 to adjust the treble. When you have finished making your changes, u press the AUDIO button ;. 23 ENGLISH When you have finished making your changes, u press the MENU button :. Sound Sound Setting the left/right volume distribution (balance) To adjust the left/right volume distribution (balance), u press the AUDIO button ;.

"BASS" appears on the display. u Press the button 6 repeatedly until "BAL" appears on the display. u Press the or button 6 to adjust the left/right volume distribution. When you have finished making your changes, u press the AUDIO button ;. Equalizer presettings (Presets) This device features an equalizer in which the settings for the music genres "ROCK", "POP" and "CLASSIC" are already programmed.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/2684542)

[SAN DIEGO MP27 user guide](http://yourpdfguides.com/dref/2684542)

<http://yourpdfguides.com/dref/2684542>

To select an equalizer preset, u Press the AUDIO button ;. "BASS" appears on the display. u Press the button 6 repeatedly until "POP", "ROCK", "CLASSIC" or "EQ OFF" appears on the display. u Press the or button 6 to select one of the presets or select "EQ OFF" to switch off the equalizer. When you have finished making your changes, u press the AUDIO button ;.

Note: By selecting an equaliser preset (POP, ROCK, CLASSIC), the adjustment range of the sound setting for bass and treble is restricted. Adjusting the front/rear volume distribution (fader) To adjust the front/rear volume distribution (fader), u press the AUDIO button ;. "BASS" appears on the display. u Press the button 6 repeatedly until "FADER" appears on the display. u Press the or button 6 to adjust the front/rear volume distribution. When you have finished making your changes, u press the AUDIO button ;. 24 X-Bass External audio sources X-Bass allows you to increase the bass at low volume. The selected X-Bass setting is effective for all audio sources (radio, CD, CD changer or AUX). The X-BASS increase can be set in increments of 1 to 3. "XBASS OFF" means that the X-BASS function is switched off.

Adjusting the X-BASS boost u Press the X-BASS button =. "X-BASS" appears on the display. u Press the or button 6 repeatedly until the desired setting appears on the display. When you have finished making your changes, u press the X-BASS button =. Instead of the CD changer, you can also connect another external audio source equipped with a line output.

Audio sources can, for example, be portable CD players, MiniDisc players or MP3 players. @@@@The display shows "MENU". @@u Press the or button 6 to switch AUX on or off. When you have finished making your changes, u press the MENU button :. Note: If the AUX input is switched on, you can select it by pressing the SRC/ button >.

The display shows "AUX INPUT" and a border appears around the AUX symbol. 25 ENGLISH X-BASS External audio sources Specifications Specifications Amplifier Output power: 18W RMS x 4ch @ 14.4V @ 4ohm @ 1% THD FM frequency response: 35 - 16,000 Hz CD Frequency response: 20 - 20,000 Hz Tuner Frequency ranges USA: FM: 87.5 - 107.9 MHz (200 kHz step) AM: 530 - 1710 kHz (10 kHz step) Frequency ranges Europe: FM: 87.5 - 108 MHz (100 kHz step auto/ 50 kHz manual) AM: 531 - 1602 kHz (9 kHz step) Frequency ranges Thailand: FM: 87.5 - 108 MHz (50 kHz step auto/ 25 kHz step manual) AM: 531 - 1602 kHz (9 kHz step) Frequency ranges South America: FM: 87.5 - 107.9 MHz (100 kHz step auto/ 50 kHz step manual) AM: 530 - 1710 kHz (10 kHz step) FM mono sensitivity: 17 dbf 26 Pre-amp out 4 channels: 2V Input sensitivity AUX input: 2 V / 6 k approx. 1.

3 kg Weight Subject to changes! Installation instructions · Notice de montage · Instrucciones de instalación · Instruções de montagem · · Installation instructions Safety instructions When carrying out installation work and making connections please observe the following safety instructions: · Disconnect the negative terminal of the battery! @@@@You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer. ·

Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline. 152 When installing an amplifier or changer, you must first connect the device earth connections before connecting the plugs for the line-in or line-out jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). Notice de montage Consignes de sécurité Respecter les consignes de sécurité suivantes pendant la durée du montage et du branchement. · Débrancher le pôle (-) de la batterie ! Respecter les consignes de sécurité du constructeur automobile ! · Veiller à n'endommager aucune pièce du véhicule en perçant des trous. · La section du câble (+) et (-) ne doit pas dépasser 1,5 mm². · Ne pas brancher les connecteurs du véhicule sur la radio ! Les câbles d'adaptation nécessaires pour le type de véhicule sont disponibles auprès des revendeurs BLAUPUNKT.

· En fonction du modèle, votre véhicule peut différer de cette description. Nous déclinons toute responsabilité en cas de dommages causés par des erreurs de montage ou de connexion et en cas de dommages consécutifs. Supplied Mounting Hardware Matériel de montage fourni Ferrreteria de montaje suministrada Elementos de fixação fornecidos Available as an optional accessory Disponible en option De venta como accesorios especiales Disponíveis como acessórios opcionais A A 7 607 621 . . .

B Installation kits Kits de montage Juegos de montaje Kits de montagem 7 608

. 156 182 53 165 1-20 12V A 2. 5. Removal / Démontage / Desmontaje // Desmontagem / 3. 1. 0°- 30° 2. +/ 10° B 2. +/ 10° 8 613 150 002 157 PORTUGUÊS ca. 10 mm ESPAÑOL FRANÇAIS ENGLISH 1. 4.

3. 6. 12V 158 Aut. antenna C B A 1 3 2 4 6 5 7 9 8 10 12 11 13 15 14 16 18 17 19 20 2 4 6 8 1 2 3 4 5 6 7 8 300 mA A 1 2 3 4 5 6 7 8 No connection Radio Mute No connection Permanent +12V Aut. antenna No connection Kl.15/Ignition Masse/GND 1 2 3 4 5 6 7 8 B Speaker out RR+ Speaker out RR Speaker out RF+ Speaker out RFSpeaker out LF+ Speaker out LFSpeaker out LR+ Speaker out LR- * C C1 1 2 3 4 6 Line Out LR Line Out RR Line Out / Ground Line Out LF +12V Amplifier 7 8 9 10 1 12 C2 C3 13 14 15 16 17 18 19 20 CDC-Data - In CDC-Data - Out Permanent +12V +12V Bus / GND AF / GND CDC Line In - L CDC Line In - R No connection No connection Radio Mute RC +12V Remote Control RC - GND * * * Equalizer Amplifier Optional (Remote Control Eye) CD-Changer 159 PORTUGUÊS ESPAÑOL FRANÇAIS 1 3 5 7 10 Ampere * FB +12V / RC +12V +12V Amplifier Sum Somme Suma Soma ENGLISH 7. C-1 C-2 C-3 8. Preamp./Sub./Center - out cable 12V Amplifier Relais 12V A 7 1 35 Kl.

15 +12V 8 24 6 Radio Mute + + + + - 4 Ohm 4 Ohm 4 Ohm 4 Ohm 12V 12V RR R F LF LR Subject to changes! Sous réserve de modifications!

Modificaciones reservadas! Sob reserva de alterações! 160 .



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN DIEGO MP27 user guide](http://yourpdfguides.com/dref/2684542)
<http://yourpdfguides.com/dref/2684542>