



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT SAN FRANCISCO 310. You'll find the answers to all your questions on the BLAUPUNKT SAN FRANCISCO 310 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT SAN FRANCISCO 310
User guide BLAUPUNKT SAN FRANCISCO 310
Operating instructions BLAUPUNKT SAN FRANCISCO 310
Instructions for use BLAUPUNKT SAN FRANCISCO 310
Instruction manual BLAUPUNKT SAN FRANCISCO 310

www.blaupunkt.com

Radio | CD | USB | MP3 | WMA

Madrid 210 7 649 068 510 / 7 649 069 510
San Francisco 310 7 649 073 510 / 7 649 074 510
Toronto 410 BT 7 640 000 510 / 7 640 001 510

www.blaupunkt.com

Bedienungs- und Einbauanleitung
Operating and installation instructions
Mode d'emploi et de montage
Instrucciones de manejo e instalación
Instruções de serviço e de montagem

BLAUPUNKT



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN FRANCISCO 310 user guide](http://yourpdfguides.com/dref/3644994)
<http://yourpdfguides.com/dref/3644994>

Manual abstract:

Always pass on the car sound system to third parties together with these instructions. In addition, observe the instructions of the devices used in conjunction with this car sound system. Observe the following notes about road safety: · Use your device in such a way that you can always safely control your vehicle. In case of doubt, stop at a suitable location and operate your device while the vehicle is standing. Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e. When changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase. Observe the following notes to protect yourself against injuries: · do not modify or open the device. The device contains a Class 1 laser that can cause injuries to your eyes. Do not increase the volume during mute phases, e.

Changing the volume is not audible during a mute phase. Do not increase the volume during mute phases, e. Use as directed This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist.

Installation instructions You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the installation instructions at the end of these instructions. These instructions employ the following symbols: DANGER! Warns about high volume The CE mark confirms the compliance with EU directives. KG declares that the car sound systems Madrid 210 and San Francisco 310 comply with the basic requirements and the other relevant regulations of the directive 89/336/EEC and the car sound system Toronto 410 BT complies with the basic requirements and the other relevant regulations of the directive 1999/5/EC. The declaration of conformity can be found on the Internet under www.

Attention Transport securing screws Before the startup of the car sound system, ensure that the transport securing screws are removed (see the chapter "Installation instructions"). Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system. Use only a dry or slightly moistened cloth for cleaning the car sound system. If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol. The car sound system is equipped with a detachable control panel (release panel) to protect your equipment against theft. in the delivery state , the control panel is in the supplied case. To start operating the radio after installation, you must first attach the control panel (see the section "Attaching the control panel" in this chapter). Always take the control panel with you when leaving the vehicle. The car sound system is worthless to a thief without this control panel. caution Damage to the control panel Never drop the control panel.

Transport the control panel so that it is protected against impacts and the contacts cannot become dirty. Do not expose the control panel to direct sunlight or another heat source. Avoid direct skin contact with the control panel's electrical contacts. Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device. The scope of delivery includes: 1 Car sound system 1 Operating/installation instructions 1 Case for the control panel 1 Support frame 1 Antenna connection adapter 1 Set of small parts Extended scope of delivery (only for 7 649 069 510). U Push the control panel carefully into the left bracket until it clicks into place. removing the control panel u Press the button 1 to unlock the control panel. The left side of the control panel detaches from the device and is secured by the bracket against falling out. U Move the control panel slightly to the left until it disengages from the right bracket. U Carefully remove the control panel from the left bracket.

Note: The car sound system automatically switches off as soon as the control panel is removed. U To switch off the device, press and hold down the On/Off button 3 for longer than 2 seconds. the car sound system switches off. Note: If you switch on the car sound system while the vehicle ignition is switched off, it automatically switches off after 1 hour to preserve the vehicle battery. Switching on/off via vehicle ignition The car sound system will switch off/on simultaneously with the ignition if the device is correctly connected to the vehicle's ignition as shown in the installation instructions and you did not switch the device off by pressing the On/Off button 3.

For the Toronto 410 BT, you can define whether the language for messages on the display is English or German. Adjusting the volume You can adjust the volume in steps from 0 (off) to 50 (maximum). u Turn the volume control 4 to change the volume. Note: If a telephone or navigation system is connected with the car sound system as described in the installation instructions, the car sound system is muted in case of a telephone call or navigation announcement so that you can hear the playback of the telephone or navigation system undisturbed. While it is muted, the display shows "TELEPHONE".

Muting the car sound system (Mute) u Briefly press the On/Off button 3 to mute the car sound system or to reactivate the previous volume. While it is switched low, the display shows "MUTE". This car sound system is designed for operation in different regions with different frequency ranges and station technologies. The factory default of the reception area is "EUROPE". in addition , the reception areas "USA" , "THAILAND" and "SOUTH AMERICA" are available. Note: If you operate the car sound system outside of Europe, you may first have to set a suitable reception area in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "TUNER AREA"). You can manually switch the display brightness between daytime mode and night-time mode or switch automatically with the driving lights of the vehicle. In the reception area "EUROPE", an FM station can identify traffic reports by means of an RDS signal. If priority for traffic reports is switched on, a traffic report is automatically switched through, even if the car sound system is currently not in radio mode. The demo mode shows the functions of the car sound system as scrolling text on the display.

By pressing any button, the demo mode is interrupted and you can operate the device. The demo mode can be switched on and off in the user menu (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "DEMO MODE").



**[You're reading an excerpt. Click here to read official BLAUPUNKT
SAN FRANCISCO 310 user guide
http://yourpdfguides.com/dref/3644994](http://yourpdfguides.com/dref/3644994)**

The Toronto 410 BT can be connected with suitable cell phones and MP3 players via Bluetooth®. This enables it to perform hands-free calling with the connected telephone (via the loudspeakers and the integrated microphone of the car sound system) and audio playback of MP3 files stored on the Bluetooth® device. Note: You can also connect an external microphone for hands-free calling (see the chapter "Installation instructions"). Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the reception area "EUROPE" that allows the following additional functions: · The car sound system recognises traffic announcements and news broadcasts and can automatically switch them through in other operating modes (e. Regional: At certain times, some radio stations divide their programme into regional programmes providing different content. If the REGIONAL function is activated, the car sound system changes only to those alternate frequencies on which the same regional programme is being broadcast. the functions RDS and REGIONAL are activated and deactivated in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu items "RDS" and "REGIONAL"). Note: If you adjust a different reception area than "EUROPE", RDS is automatically switched off.

If you want to use radio stations with RDS features in your region, switch on RDS in the user menu. There are various ways of tuning into a station: Tuning into stations manually u Briefly press the / button 7 once or several times to incrementally change the frequency. Note: For the reception area "EUROPE": In the FM waveband, the next station of the broadcasting network is automatically tuned into if the RDS function is switched on. The radio tunes into the next receivable station. notes: · For the reception area "EUROPE": In the FM waveband, only traffic information stations are tuned into if the priority for traffic information () is switched on.

If PTY and RDS are switched off, you can also start station seek tuning by pressing the / button 7. Changing to the next station of the broadcasting network Note: This function requires that RDS is switched on and PTY is switched off (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu items "RDS" and "PTY"). The following memory banks are available in the different reception areas: Region EUROPE USA THAILAND SOUTH AMERICA Memory banks FM1, FM2, FMT, MW, LW FM1, FM2, FMT, AM, AMT FM1, FM2, FMT, AM FM1, FM2, FMT, AM, AMT U Press the SRC button > repeatedly until the desired memory bank is displayed. Note: Up to 5 stations can be stored in each memory bank. The scan function is used to scan every receivable station of the current waveband.

Note: You can adjust the scan time for each station (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "SCAN TIME"). During the scan, the display alternately displays "SCAN" and the current frequency as well as memory bank or station name. U Briefly press the MENU button 2 to continue listening to the station that is currently being received. For the reception area "EUROPE": If the priority for traffic information is switched on (), only traffic information stations are stored. If the FMT memory bank is deactivated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "BAND"), it is automatically reactivated if you initiate the Travelstore function. In the reception areas "EUROPE" and "USA", an FM station can transmit its current programme type, e. Note: In the reception area "EUROPE", you can adjust the language in which the programme types are displayed (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY LANGUAGE"). With Travelstore, you can automatically search for and store the 5 FM stations offering the strongest reception in the region in one memory bank, Any previously stored stations in this memory bank are deleted in the process. In the reception areas "EUROPE" and "THAILAND", you can store 5 FM stations in the FMT memory bank with Travelstore. In the reception areas "USA" and "SOUTH AMERICA", you can also store 5 AM stations in the AMT memory bank.

The tuner starts the automatic station seek tuning; the display shows "FM TSTORE" or "AM TSTORE". After the storing is completed, the radio plays the station at memory location 1 of the FMT or AMT level. As soon as a station with the desired programme type is found, it remains being tuned into. notes: · If no station with the selected programmes you to change to the previous/next folder of the current category, e. g. To the next genre, if you previously selected a track on the iPod via the corresponding genre. U Insert the SD/MMC card with its labelled side up and its contacts first into the card slot @ until it clicks into place. u Attach the control panel. After switch-on, the device automatically selects the inserted SD card as audio source. U Press and hold down the button / 7 until the desired position has been reached.

2 seconds to start the scan, or briefly to continue playing the currently scanned track. During the scan, the display alternately displays "SCAN" and the current track number or file name. Playing tracks in random order Once or several times to switch among these displays: Opera- Display / icon tion TRACK 01 0:15 CD TRACK 01 3:37 SONG-INFO / FILE-INFO / PLAYTIME 0:15 Meaning Track number and playing time Track number and duration Track name 1 File name Playing time Track duration Artist 1 Album name 1 1 Track name, artist and album name must be stored as ID3 tag to be able to display them. In Browse mode, you can directly search for and select a certain track on the MP3/WMA data carrier or iPod without interrupting the current playback. Browse mode in MP3/WMA mode In MP3/WMA mode, you can select and play a track from a directory of the data carrier.

The The display shows the first or current folder on the data carrier is being displayed. notes: · The first folder is displayed only if the browse mode has been called for the first time after inserting or connecting the data carrier. You can exit the browse mode at any time by pressing the 1 LIST button =. U Press the / button 7 once or several times to select a different folder. U Press the / button 7 once or several times to select a different track.

Browse mode in iPod mode In iPod mode, you can select and play a track using the categories "Artists", "Albums" or "Genre" stored in the ID3 tags. The The display shows the first category, "ARTISTS", is displayed.



[You're reading an excerpt. Click here to read official BLAUPUNKT
SAN FRANCISCO 310 user guide
http://yourpdfguides.com/dref/3644994](http://yourpdfguides.com/dref/3644994)

Note: You can exit the browse mode at any time by pressing the 2 ID3 button =. U Press the / button 7 once or several times to select a different category. U Press the / button 7 once or several times to select a different entry. U Press the / button 7 once or several times to select a different track. Instead of the arrow keys 7, you use the volume control 4 and the On/Off button 3 to select and confirm list entries: Function Selecting entries in lists Confirming entries Return to the higher level Browse mode / As soon as an external audio source, such as a portable CD/MiniDisc or MP3 player is connected to the front AUX-IN socket :, it can be selected with the SRC button >. You can enter an individual name for the AUX source that is shown on the display in AUX mode (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "AUX EDIT"). You can play back an AUX source at the same time with one of the internal audio sources of the car sound system. Hence, you can play back the announcements of a navigation device connected to the front AUX-IN socket : via the loudspeakers of the car sound system while listening to the radio or a CD at the same time.

In addition, you can adjust the volume levels of both audio sources to each other. For more details, please read the section "Making settings in the "VARIOUS" menu", menu items "AUX MIX" and "AUX MIX GAIN" in the chapter "User settings". Note: With activated fast browsing, you cannot change the volume in browse mode or mute the car sound system. To do so, first exit the browse mode by pressing the button 1 LIST = or 2 ID3 = or starting the track playback. The following sound settings can be changed in the "AUDIO" menu: · Increased risk of injury from connector. In case of an accident, the protruding connector in the front AUX-IN socket may cause injuries. The use of straight plugs or adapters leads to an increased risk of injury. For this reason, we recommend using angled jack plugs, e. 15 seconds after the last button activation and you are returned to the display of the current audio source.

In the menu, you can press the button 7 in each case to return to the higher menu level.

For each of the three treble, middle and bass bands, you can select a frequency as well as adjust the level. U Press the / button 7 to change among the following menu items: EQUALIZER EQ TREBLE EQ MIDDLE EQ BASS EQ X-BASS U Press the / button 7 to change among the following menu items: FREQUENCY (settings: 10/12. U Press the / button 7 to change among the following menu items: FREQUENCY (settings: 0. U Press the / button 7 to change among the following menu items: FREQUENCY (settings: 60/80/100/200 Hz) GAIN (settings: 7 to +7) EQ X-BASS Adjusting the frequency and level for the increase of bass at low volume. u Press the button 7 to open the menu.

U Press the / button 7 to change among the following menu items: FREQUENCY (settings: 60/80/100 Hz) GAIN (settings: 0 to +3) u Turn the volume control 4 in each case to perform the setting. In the user menu, the user settings can be found in the following menus: · 15 seconds after the last button activation and you are returned to the display of the current audio source. In the menu, you can press the button 7 in each case to return to the higher menu level. Display shows the icon BAND (band selection) Activating or deactivating memory banks. Memory banks that can be deactivated: FM2, FMT, MW and LW (only for reception area EUROPE), AM and AMT (only for reception area USA and SOUTH AMERICA).

U Press the / button 7 repeatedly until the desired memory bank is displayed. U Turn the volume control 4 to toggle between the settings ON (activate memory bank) and OFF (deactivate memory bank). Deactivated memory banks are skipped during the source selection with the SRC button >. Note: If a memory bank is deactivated, the stations stored in this memory bank are retained. Settings: AUTO (display brightness is automatically switched by switching the driving lights on or off), MANUAL (display brightness can be switched manually). u Turn the volume control 4 to perform the setting. Automatic switching of the display brightness is possible only if your car sound system is installed as described in the installation instructions and your vehicle features the corresponding connection. When displaying MP3 file names) either as single display or continued display. U If necessary, turn the volume control 4 to adjust the desired volume for the ON VOL setting. Settings: ON VOL (power-on volume; 1 50) or LAST VOL (volume set last before switching off the car sound system).

Note: When you set the time in 12-hour mode (HOUR MODE 12), an "AM" is displayed before the time for the time before noon or a "PM" for the time after noon. @@@@U Press the or button 7 to reach the next or previous position. @@@@The factory settings are restored. @@@@The warranty terms can be called up from www. @@@@When installing an amplifier, you must first connect the device earth connections before connecting the plugs for the line-out jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). Speaker out RR+ Speaker out RR Speaker out RF+ Speaker out RF Speaker out LF+ Speaker out LF Speaker out LR+ Speaker out LR Please keep the filled-in radio pass in a safe place! This material may be reproduced, copied or distributed for personal use only. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Short press: Switch on car sound system In operation: Mute car sound system (Mute) Long press: Switch off car sound system Button Ending/rejecting a phone call button Short press: Answering a call, speed dial Long press: Open the phone book of the cell phone or activate voice dialing 18 Storing a phone number in the car sound system.

The car sound system was manufactured according to the state of the art and established safety guidelines. @@@@ Keep the instructions at a location so that they are always accessible to all users. Always pass on the car sound system to third parties together with these instructions. iMPORTANT! Observe the safety notes for this device in the operating and installation instructions. In addition, observe the instructions of the devices used in conjunction with this car sound system.

You can connect the car sound system via Bluetooth® with other Bluetooth®-ready devices, such as cell phones or MP3 players. This allows you to use the car sound system with its integrated microphone as hands-free system for connected cell phones and control the audio output of other Bluetooth® devices and play them back via the loudspeakers of the car sound system (Bluetooth® streaming).



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN FRANCISCO 310 user guide](http://yourpdfguides.com/dref/3644994)
<http://yourpdfguides.com/dref/3644994>

Note: You can also connect an external microphone for hands-free calling (see operating and installation instructions, ch. For this reason, Bluetooth® devices must be located near the car sound system (in the vehicle) to establish and maintain a connection. To establish a Bluetooth® connection, you must first pair the car sound system and the Bluetooth® device.

when you pair the devices, a Bluetooth® connection is subsequently established automatically. This connection remains in effect as long as the Bluetooth® device is within range. Because you moved the cell phone outside the range, the connection is automatically re-established as soon as you are back within range. You can connect only one cell phone and streaming device with the car sound system at a time. If you connect a new device with the car sound system, the connection to a currently connected device may automatically be interrupted. However, the car sound system leaves up to 5 different Bluetooth® devices paired, and you can quickly and easily connect any of these devices with the car sound system again. These instructions employ the following symbols:

DANGER! Warns about injuries The CE mark confirms the compliance with EU directives. Note: You can pair up to 5 Bluetooth® devices with this car sound system. Before you can pair a sixth device, you must first unpair one of the 5 already paired devices (see ch. "Additional functions in the Bluetooth® menu", section "Managing paired devices").

If you should attempt to pair a sixth Bluetooth® device, "PHONE LIST FULL PLEASE DELETE ENTRIES FROM LIST" is displayed. 30 seconds after the last button activation and you are returned to the display of the current audio source. In the menu, you can press the button 7 in each case to return to the higher menu level. If you attempt to open the Bluetooth® menu during this time, "LINK BUSY" briefly appears on the display. Note: If a connection with a cell phone currently exists, this connection is automatically disconnected if you pair and connect another cell phone. U Press the button 7 to pair a cell phone. the display shows "PAIRING" and the Bluetooth® symbol is flashing. The car sound system can now be recognised by a Bluetooth® cell phone for approx. 2 minutes and connected. U Search the car sound system from your cell phone (Bluetooth® name: "TORONTO 410 BT").

As soon as the car sound system is located by the cell phone and is to be connected, the display briefly shows "ENTER PIN" and the currently stored PIN (by default "1234"). u Establish the connection from your cell phone. Enter the PIN displayed by the car sound system. The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the cell phone are paired and connected. If no connection can be established, the display briefly shows "CONNECT FAILED".

If the telephone connected last cannot be located after switching on the car sound system, the car sound system attempts to connect one of the other paired telephones. If none of the telephones can be located, the display briefly shows "NO DEVICE". Thereby confirming the current PIN, and then enter this PIN on the streaming device. the display shows "PAIRING" and the Bluetooth® symbol is flashing. The car sound system can now be recognised by the streaming device for approx.

2 minutes and connected. U Search the car sound system from your streaming device (Bluetooth® name: "TORONTO 410 BT") and establish the connection. Enter the PIN of the car sound system, if necessary. The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the streaming device are paired and connected. notes: · If no connection can be established, the display briefly shows "CONNECT FAILED". After switch-on, the car sound system automatically attempts to reconnect the device connected last. if the connection attempt fails, the display briefly shows "CONNECTION LOST". If necessary, attempt to re-establish the connection from the streaming device. If the device connected last cannot be located after switching on the car sound system, the car sound system attempts to connect one of the other paired devices. If none of the devices is located, the display briefly shows "NO DEVICE".

Note: If a connection with a streaming device currently exists, this connection is automatically disconnected if you pair and connect another streaming device.

U Press the or button 7 to reach the next or previous position. For some streaming devices, you have to enter the PIN of the car sound system instead. For these devices, press only the button 7 repeatedly until you reach beyond the last position, With an incoming call, the display alternately shows "INCOMING CALL" and the number of the caller. The current audio source is muted and a ring tone is played via the loudspeakers of the car sound system. Note: If the number of the caller is not being transmitted, the display shows "PRIVATE NUMBER" instead of the number. Caller is stored together with a name, the name of the entry and the number are displayed (see the section "Storing a phone number in the car sound system" in this chapter). Calling an entry in the phone book Note: This function is only available if the phone book of the connected cell phone was transferred to the car sound system (see the chapter "Additional functions in the Bluetooth® menu", section "Phone book functions"). The display shows the first phone book entry. Note: If the phone book has not yet been transferred, the display briefly shows "PHONEBOOK NOT AVAILABLE".

U Press the / button 7 once or several times to select a different entry. notes: / button · Press and hold down the 7 to quickly scroll through the entries. With activated fast browsing, you can select an entry in the phone book by turning the volume control 4. During this process, the volume cannot be changed. Note: You can also call an entry in the phone book via speed dial (see the section "Speed dial" in this chapter).

Note: During the call, you can adjust the volume with the volume control 4 or mute the device with a short press of the On/Off button Making a call You can now enter a phone number with up to 20 digits: u Turn the volume control 4 to select a digit for the respective position. U Press the or button 7 to reach the next or previous position. notes: · You can also reach the next position by pressing the ON/Off button 3. While entering the phone number, you cannot change the volume or mute the car sound system. < button to call the number u Press the entered.

"CALLING" and the dialed number are alternately shown on the display. As soon as your calling party answers the call, the display alternately shows "CALL" and the time of the current phone call.



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN FRANCISCO 310 user guide](http://yourpdfguides.com/dref/3644994)
<http://yourpdfguides.com/dref/3644994>

Upon ending the call, the display briefly shows "CALL END". Making a call with voice dial Note: This function is only available if the connected cell phone supports voice dial. If no Bluetooth® connection is established when voice recognition is activated, the display briefly shows "VOICE DIAL FAILED NO BT CONNECTION". If the spoken name is not being recognised or the time for the voice recognition has already expired, the display briefly shows "DIAL FAILED". You can cancel the voice recognition by pressing the button ;. Please note that the duration of the voice recognition is limited and depending on the respective cell phone. You can also activate the voice recognition via speed dial (see the section "Speed dial" in this chapter). 2 seconds to store the number and name.

the display briefly shows "NUMBER SAVED". Afterwards, you are returned to the Bluetooth® menu and the "DIAL NEW NUMBER" menu item. notes: · A number previously stored on the memory button is replaced. If a telephone is unpaired, the numbers stored for this telephone are automatically deleted. Speed dial for any phone number or for the number dialed last or a stored number With speed dial, you can make a call without first having to select the corresponding function in the Bluetooth® menu. To call the number dialed last, a stored number or any number, button <. U press the The display shows the number dialed last. U If necessary, press a memory button 1 - 5 = to call the stored number. Note: If no number is stored under the selected memory button, the display briefly shows "NO NUMBER". Storing a phone number in the car sound system You can store phone numbers in the car sound system and place calls with the speed dial (see the section "Speed dial" in this chapter).

A phone number is stored for the currently connected telephone and is available only for this telephone. The car sound system can store up to five numbers for up to five paired devices. 2 seconds to store only the number. - or u Press the 7 button to enter a name for the entry. You can now enter a name with up to 15 characters: The car sound system is muted and the display shows "SPEAK NOW".

U Press the or button 7 to reach the next or previous position. Note: You can also reach the next position by pressing the ON/Off button 3. U If necessary, press the On/Off button 3 to open the entry menu and enter a number (enter the phone number as described in the section "Making a call"). Speed dial for phone book entries Note: This function is only available · If the phone book of the connected cell phone was transferred to the car sound system (see the chapter "Additional functions in the Bluetooth® menu", section "Phone book functions") · If the speed dial is set for phone book entries (see the chapter "Additional functions in the Bluetooth® menu", section "Setting the button function for speed dial"). To select an entry of the phone book with the speed dial and call it, u press the < button for approx.

2 seconds. The display shows the first phone book entry. U If necessary, select another entry as described in the section "Calling an entry in the phone book". Speed dial for voice dial Note: This function is only available · If the connected cell phone supports voice dial · If the speed dial is set for voice dial (see the chapter "Additional functions in the Bluetooth® menu", section "Setting the button function for speed dial"). Tom activate the voice recognition with the speed dial, < button for approx. The car sound system is muted and the display shows "SPEAK NOW". The Bluetooth® streaming mode can be selected only if a suitable streaming device is connected. If the connection to the streaming device is lost during playback, the display briefly shows "CONNECTION LOST" and the car sound system changes to the previous audio source. It must be entered on the cell phone when pairing a cell phone. This PIN can be changed.

You can now enter the PIN: U Press the or button 7 to reach the next or previous position. notes: · You can also reach the next position by pressing the ON/Off button 3. While entering the phone number, you cannot change the volume or mute the car sound system. U Press the button 7 repeatedly until you reach past the last position to confirm the PIN entered and return to the Bluetooth® menu. Note: If no connection can be established, the display briefly shows "CONNECT FAILED". If the device is already connected, the display briefly shows "CONNECT EXIST". to disconnect the connection to the displayed device , u press the button ;. The display briefly shows "DISCONNECTED" and you are returned to the Bluetooth® menu. Note: If the device was not connected, the display briefly shows "NO CONNECTION". The display briefly shows "DELETED" and you are returned to the Bluetooth® menu. @@@@U Press the / button 7 once or several times to select another device or the "DELETE ALL" option. You have the following options: To connect the displayed device, button <. U press the As soon as the device is connected, "CONNECTED" is briefly displayed and you are returned to the Bluetooth® menu. Transferring the phone book of the cell phone to the car sound system You can transfer the phone book of the connected cell phone to the car sound system to call entries of the phone book using the car sound system. The car sound system accepts only entries from the memory of the telephone and not from the SIM card inserted in the telephone.

The transfer does not delete the phone book from the cell phone. The car sound system can store the phone books of the paired telephones with a total of up to 1000 entries. If several numbers are stored on the telephone for one contact (e. g. Landline, cell phone number, office number and similar), each number is stored as a separate entry by the car sound system.

Each entry consists of a name and a number, each up to 20 characters on digits. Note: Do not switch off the car sound system while transferring the phone book. If you do or if the power supply of the car sound system should be interrupted for any reason, you have to restart the transfer. After the download is complete, the display briefly shows "DOWNLD COMPLETE". If the transfer of the phone book fails, the display briefly shows "DOWNLOAD FAILED". If the transfer of the phone book exceeds the storage capacity of the car sound system, the display briefly shows "PHONEBOOK FULL". The phone book entries transferred so far remain stored. If you supplemented or changed entries on your cell phone since the last transfer, you can update the phone book on the car sound system by transferring it again. If the storage capacity of the car sound system is exceeded in the process, first delete the already transferred phone book (see the next section) or unpair another cell phone, if necessary, so that its phone book is also deleted from the car sound system (see the section "Managing paired devices" in this chapter).



[You're reading an excerpt. Click here to read official BLAUPUNKT SAN FRANCISCO 310 user guide](http://yourpdfguides.com/dref/3644994)
<http://yourpdfguides.com/dref/3644994>

If you insert a CD during an ongoing transfer, the playback does not start until the transfer is completed.

Deleting the phone book of the cell phone from the car sound system You can delete the phone book of the connected cell phone. You can select whether the long press of the button < opens the phone book or activates voice dial. u In the Bluetooth® menu , select the "SOFTKEY" menu item. Next to "SOFTKEY", the current "PBOOK" setting for phone book or "VOICE" for voice dial is displayed. .



[You're reading an excerpt. Click here to read official BLAUPUNKT
SAN FRANCISCO 310 user guide
http://yourpdfguides.com/dref/3644994](http://yourpdfguides.com/dref/3644994)