



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT SAO PAULO RCR 27. You'll find the answers to all your questions on the BLAUPUNKT SAO PAULO RCR 27 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT SAO PAULO RCR 27
User guide BLAUPUNKT SAO PAULO RCR 27
Operating instructions BLAUPUNKT SAO PAULO RCR 27
Instructions for use BLAUPUNKT SAO PAULO RCR 27
Instruction manual BLAUPUNKT SAO PAULO RCR 27

Radio / Cassette

Montevideo RCR 87
Sao Paulo RCR 27

Operating instructions



BLAUPUNKT
Bosch Gruppe



[You're reading an excerpt. Click here to read official BLAUPUNKT SAO PAULO RCR 27 user guide](http://yourpdfguides.com/dref/3310393)
<http://yourpdfguides.com/dref/3310393>

Manual abstract:

.. 1 2 3 4 5 6 7 8 9 10 2 Contents Quick reference

.....
.....
.....

15 Important notes

.....
.....

..... 17 Precautions ..

.....
.....
.....
.....

. 17 Traffic safety

.....
.....

.....
.....
.....

.. 17 Installation

.....
.....
.....
.....

..... 17 Accessories ...

.....
.....
.....

.....
.....

.... 17 Amplifier .

.....
.....
.....
.....
.....

..... 17 Receiving traffic programme stations with RDS-EON..

.....
.....

... 21 Traffic announcement priority on/off 21 Beep tone ...

.....
.....
.....
.....

.....
.....

.. 21 Switching off the beep tone ...

.....
.....

..... 21 Automatic seek tuning start (tape operation)

.....
.....
.....
.....

| | |
|--|-------|
| . 21 Adjusting the volume for traffic messages | |
| | |
| | |
| | |
| .. 22 Detachable face ... | |
| | |
| | |
| 18 Detaching the face | |
| | |
| .. 18 Attaching the face ... | |
| | |
| | |
| 18 Tape operation | |
| | |
| 22 Inserting a tape . | |
| | |
| | |
| | |
| | |
| . 22 Removing a tape | |
| | |
| | |
| | |
| 22 Fast winding | |
| | |
| | |
| | |
| .. 22 Reversing the tape (autoreverse) | |
| . 23 Care notes | |
| | |
| | |
| | |
| 23 Selecting the audio mode | |
| 18 Radio operation with RDS (Radio Data System) | |
| | |
| 18 AF - Alternative frequency | |
| | |
| | |
| . 18 Station tuning | |
| | |
| | |
| | |

..... 19 Automatic tuning /

.....
.....
... 19 Manual tuning ..

.....
.....
.....
... 19 Selecting the seek tuning sensitivity 19 Changing the memory bank ...

.....
.... 19 Storing stations .

.....
.....
.....
. 20 Automatically storing the strongest stations with Travelstore

.....
.... 20 Recalling stored stations .

.....
.....
.....
..... 20 Switching between stereo and mono ... 20 Loudness .

.....
.....
.....
.....
.....
..... 20 Appendix

.....
.....
.....
.....
.....
.....
..... 23 Specifications

.....
.....
.....
.....
.....
.....
.....
.... 23 Blaupunkt telephone help line .

..... @@@@@"MUTE" will appear. The volume will be set to "0".

The function is cancelled by pressing ON or + briefly. 2 + / - (VOLUME) To alter the volume. Each time you switch the unit on, it will play at the volume selected last. / Automatic tuning Up Down if "m" does not light up in the display Manual tuning Up/down in short intervals, if "m" lights up in the display.

@@@@"To store a station: Press a preset button during you hear a beep. @@@@"AF on/off: Press TA/AF for about 1 second. FRANÇAIS ENGLISH 6 TA/AF TA - priority for traffic announcements If "TA" lights up in the display, the system will play traffic stations only. Priority on/off: Press TA/AF briefly. DEUTSCH Quick reference "m" is displayed - manual tuning with /. Press lo.

m several times if required to select the desired function. 8 AUD/LD AUD audio To adjust the treble, bass, balance and fader. Adjusting the fader is not possible with the Sao Paulo RCR 27. If the display shows "TREB" or "BASS", you can adjust the playback of the treble and bass frequencies using the rocker switch. If "BAL" or "FAD" is displayed, you can set the balance (left/right) and fader (front/rear).

Press AUD/LD as many times as required and make the setting using the rocker switch. If you do not change the setting within 8 seconds, the display will switch back to the previous condition. LD - Loudness When the system is played at a low volume level, the Loudness function creates a more natural sound by boosting the low frequency range. Loudness on/off: Press AUD/LD for approximately 1 sec. @ @ 9 BND/TS BND - To select the FM memory banks I, II and T. To switch over: Press BND as often as required. The selected mode appears in the display. @@"To store: Press button for approximately 1 sec. until you hear a beep and "T-STORE" appears in the display. @@@@@"= Cassette ejection Press . @@"You should take the detachable face with you when you leave your car. Detaching the face: Press REL. Attaching the face: Apply the right hand side of the face to the chassis first and then gently push the left side of

the face against the front of the chassis until it snaps into place. Precautions Before using your new car radio, please read the following information carefully. Installation If you would like to install your new car radio yourself or add other audio components to existing ones, then please read the enclosed instructions on installation and connection carefully.

In order to ensure that the set operates properly it is necessary for the positive power supply line to be connected to the ignition and the permanent +12 V lead. Do not ground the loudspeaker outputs! Traffic safety Traffic safety always has the highest priority. As the driver of a motor vehicle, it is your responsibility to pay attention to the traffic situation at all times. Never use your car radio in a way that could distract you. Please keep in mind that you travel a distance of 14 m per second at a speed of only 50 km/h. Should the traffic situation become particularly demanding, we advise you not to use the radio. Always make sure that you are still able to hear any warning signals coming from outside of the vehicle, such as police or fire engine sirens, so that you can react accordingly. Therefore, you should always select a moderate volume for playing your car radio while you are driving. Accessories Use only the accessories and spare parts approved by Blaupunkt. Amplifier All Blaupunkt amplifiers.

17 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH DEUTSCH Important notes Detachable face This unit is equipped with a detachable face. You can remove the control face at a push of the REL button. In order to prevent the unit from being stolen, we recommend you to take the detachable face with you when you leave your car. Re-inserting the face is child's play. @@Detaching the face · Press the REL button.

The unit will be switched off automatically. The control panel will be released in order for you to remove it. @@@@If RDS is activated, the preset buttons become programme buttons. @@@@This function is activated if "AF" appears in the display. @@@@The selected memory bank is indicated in the display.

@@@@To alter the sensitivity level: · Press lo.m briefly. If "lo" is displayed, the radio will only pick up strong, local stations. If "lo" it off, the radio will also pick up weaker, distant stations. If "m" light up, manual tuning has been activated. Please refer to the section on "Manual tuning" for more information. // Manual tuning Up/down in short intervals, if "reset button which has a traffic programme station allocated to it.

@@@@Traffic messages will be played at a higher volume than the normal audio playback, if the priority for traffic messages has been activated before. If the volume level is altered while a message is played, this will only affect the current announcement. The car radio has to be switched on.

The unit will automatically switch to tape operation when a tape is inserted. Fast winding Fast forward · Press FF (fast forward). When the end of the tape is reached, the mechanism will reverse the tape and start playing the other side. Stop fast forward · Press FR Fast rewind · Press FR (fast rewind). When the beginning of the tape is reached, the mechanism will start playback. Stop fast rewind · Press FF. Inserting a tape · Turn on the set. · Insert a tape. Side A or 1 will be played. @@@@At the end of a tape side the mechanism changes directions automatically to play the other side (autoreverse).

The display shows "TR 1" for track (side) 1 or "TR 2" for track 2.



[You're reading an excerpt. Click here to read official BLAUPUNKT
SAO PAULO RCR 27 user guide
http://yourpdfguides.com/dref/3310393](http://yourpdfguides.com/dref/3310393)

Note: If there is too much tension on the tape during playback, the set may switch over by itself before having reached the end of the tape side. In this case check the condition of the cassette tape. @@@@Use a head cleaning tape to remove normal dirt build-up. For tougher cases, use a cotton swab (Q-Tip) dipped in alcohol.

Do not attempt to clean by inserting a hard object into the player! Specifications Amplifier Output power: Sao Paulo RCR 27 2 x 5.5 W RMS power acc. to DIN 45 324 at 14.4 V 2 x 10 W max. power Montevideo RCR 87 4 x 19 W RMS power acc. to DIN 45324 at 14.4 V 4 x 20 W max. power Tuner Wavebands: FM: FM sensitivity: 87.5 - 108 MHz 1.0 µV at 26 dB signal-to-noise ratio FM frequency response: 35 - 15.000 Hz Tape player Frequency response: 35 - 15.000 Hz Subject to modifications! 23 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH DEUTSCH Appendix Blaupunkt telephone help line Address of the next service centre in your vicinity (only for Germany) If you would like to know the address of the next Blaupunkt service centre of your area but haven't got our service lis.



[You're reading an excerpt. Click here to read official BLAUPUNKT
SAO PAULO RCR 27 user guide
http://yourpdfguides.com/dref/3310393](http://yourpdfguides.com/dref/3310393)