



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT STUTTGART 120. You'll find the answers to all your questions on the BLAUPUNKT STUTTGART 120 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT STUTTGART 120
User guide BLAUPUNKT STUTTGART 120
Operating instructions BLAUPUNKT STUTTGART 120
Instructions for use BLAUPUNKT STUTTGART 120
Instruction manual BLAUPUNKT STUTTGART 120

The advertisement features a central image of a Blaupunkt car radio with a digital display showing 'BLUETOOTH'. Above the radio, the text reads 'Car Radio | CD | USB | Bluetooth' and 'www.blaupunkt.com'. Below the radio, it lists 'Heidelberg 220 BT' and 'Stuttgart 120' with their respective part numbers: '1 011 200 212 / 1 011 200 213' and '1 011 200 202 / 1 011 200 203'. At the bottom, there is a logo for 'www.blaupunkt.com' and the text 'Operating and installation instructions'. The Blaupunkt logo is prominently displayed at the very bottom of the advertisement.



[You're reading an excerpt. Click here to read official BLAUPUNKT STUTTGART 120 user guide](http://yourpdfguides.com/dref/4312138)
<http://yourpdfguides.com/dref/4312138>

Manual abstract:

@@@These instructions contain important information to easily and safely install and operate the car sound system. Read these instructions carefully and completely before using the car sound system. Keep the instructions at a location so that they are always accessible to all users. Always pass on the car sound system to third parties together with these instructions. @@@@ @@@ Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e. When changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase. General safety notes Observe the following notes to protect yourself against injuries: A Do not modify or open the device. The device contains a Class 1 laser that can cause injuries to your eyes. B Do not increase the volume during mute phases, e.

g. When changing the audio source. Changing the volume is not audible during a mute phase. Do not increase the volume during mute phases, e. g.

When changing the audio source. Use as directed This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the performance limits in the technical data. Repairs and installation, if necessary, should be performed by a specialist. Installation instructions You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle.

For this purpose, observe the installation instructions at the end of these instructions. Warns about damaging the CD drive DANGER! Warns about high volume The CE mark confirms the compliance with EU directives. KG declares that the car sound system Stuttgart 120 complies with the basic requirements and the other relevant regulations of the directive 2004/108/ EEC and the car sound system Heidelberg 220 BT complies with the basic requirements and the other relevant regulations of the directive 1999/5/EC. The declaration of conformity can be found on the Internet under www. Optional equipment (not part of the scope of delivery) Use only accessories approved by Blaupunkt. Information is available from your Blaupunkt specialised dealer or on the Internet under www. Placing the device in operation Attention Transport securing screws Before the startup of the car sound system, ensure that the transport securing screws are removed (see the chapter "Installation instructions"). Cleaning notes Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system. Use only a dry or slightly moistened cloth for cleaning the car sound system. If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol.

Attaching/detaching the control panel The car sound system is equipped with a detachable control panel (release panel) to protect your equipment against theft. To start operating the radio after installation, you must first attach the control panel (see the section "Attaching the control panel" in this chapter). Always take the control panel with you when leaving the vehicle. The car sound system is worthless to a thief without this control panel. Caution Damage to the control panel Never drop the control panel. Transport the control panel so that it is protected against impacts and the contacts cannot become dirty. Do not expose the control panel to direct sunlight or another heat source. Avoid direct skin contact with the control panel's electrical contacts. Disposal notes Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device. Scope of delivery The scope of delivery includes: 1 Car sound system 1 Operating/installation instructions 1 Support frame 2 Disassembly tools Extended scope of delivery (only for 1 011 200 203 / 1 011 200 213): 1 Handheld remote control (incl.

Battery) 1 Connecting cable chamber A 1 Connecting cable chamber B 1 Antenna connection adapter 5 Placing the device in operation Attaching the control panel u Push the control panel into the bracket at the right edge of the device. U Push the control panel carefully into the left bracket until it clicks into place. Removing the control panel u Press the button 1 to unlock the control panel. The left side of the control panel detaches from the device and is secured by the bracket against falling out. U Move the control panel slightly to the left until it disengages from the right bracket.

U Carefully remove the control panel from the left bracket. Note: The car sound system automatically switches off as soon as the control panel is removed. Note: If you switch on the car sound system while the vehicle ignition is switched off, it automatically switches off after 1 hour to preserve the vehicle battery.

Switching on/off via vehicle ignition The car sound system will switch off/on simultaneously with the ignition if the device is correctly connected to the vehicle's ignition as shown in the installation instructions and you did not switch the device off by pressing the On/Off button 3. Volume Adjusting the volume You can adjust the volume in steps from 0 (off) to 50 (maximum).

U Turn the volume control 4 to change the volume. Note (Stuttgart 120): If a telephone is connected with the car sound system as described in the installation instructions, the car sound system is muted in case of a phone call. During muting, the display shows "TELEPHONE". Muting the car sound system (Mute) u Briefly press the On/Off button 3 to mute the car sound system or to reactivate the previous volume. During muting, the display shows "MUTE". Setting the reception area This car sound system is designed for operation in different regions with different frequency ranges and station technologies. The factory default of the reception area is "EUROPE". In addition, the reception areas "USA", "S-AMERICA" and "THAILAND" are available. Note: If you operate the car sound system outside of Europe, you may first have to set a suitable reception area in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "AREA"). Switching demo mode on/off The demo mode shows the functions of the car sound system as scrolling text on the display.

You can turn the demo mode on or off: u Switch off the car sound system if it is not already turned off. Stuttgart 120 u Press and hold the buttons 7 and 6 > at the same time and press the On/Off button 3. Switching on/off Switching on/off with the On/Off button u For switch-on, press the On/Off button 3. The car sound system switches on. U To switch off the device, press and hold down the On/Off button 3 for longer than 2 seconds.



[You're reading an excerpt. Click here to read official BLAUPUNKT STUTTGART 120 user guide](http://yourpdfguides.com/dref/4312138)
<http://yourpdfguides.com/dref/4312138>

The car sound system switches off. 6 Placing the device in operation \ Traffic information \ Radio mode Heidelberg 220 BT = u Press and hold the buttons 7 and at the same time and press the On/Off button 3. The car sound system switches on. The display briefly shows "DEMO MODE" if you switched on the demo mode. By pressing any button, the demo mode is interrupted and you can operate the device.

Radio mode RDS Many FM stations broadcast an RDS (Radio Data System) signal in addition to their programme in the reception area "EUROPE" that allows the following additional functions: Â· The station name is shown on the display. â· The car sound system recognises traffic announcements and news broadcasts and can automatically switch them through in other operating modes (e. Alternate frequency: If RDS is activated, the car sound system automatically selects the best receivable frequency for the station that is currently set. â· Regional: At certain times, some radio stations divide their programme into regional programmes providing different content. If the REGIONAL function is activated, the car sound system changes only to those alternate frequencies on which the same regional programme is being broadcast.

The functions RDS and REGIONAL are activated and deactivated in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu items "RDS" and "REGIONAL"). Traffic information In the reception area "EUROPE", an FM station can identify traffic reports by means of an

RDS signal. If priority for traffic reports is switched on, a traffic report is automatically switched through, even if the car sound system is currently not in radio mode. If priority is switched on, the display shows the). "TRAFFIC" is displayed traffic jam symbol (during a switched-through traffic announcement.

The priority is activated and deactivated in the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "TRAFFIC"). notes: Â· The volume is increased for the duration of the switched-through traffic announcement. You can adjust the minimum volume for traffic announcements (see the chapter "User settings", section "Making settings in the "VOLUME" menu", menu item "TA VOLUME"). Changing to radio mode or selecting a memory bank The following memory banks are available in the different reception areas: Region EUROPE USA S-AMERICA THAILAND Memory banks FM1, FM2, FMT, MW FM1, FM2, FMT, AM, AMT FM1, FM2, FMT, AM, AMT FM1, FM2, FMT, AM, AMT u Press the SRC button @ repeatedly until the desired memory bank is displayed. 7 Radio mode Notes: Â· Up to 5 stations (Heidelberg 220 BT) or up to 7 stations (Stuttgart 120) can be stored in each memory bank. â· Memory banks can be activated or deactivated via the user menu (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "TUN BAND" (band selection)). Deactivated memory banks are skipped during the source selection with the SRC button @. â· The sensitivity of seek tuning can be adjusted (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "SEEK SENS").

Storing stations or calling stored stations u Select the desired memory bank. U If necessary, set the desired station.

u Press a station buttons > for approx. 2 seconds to store the current station under the button. - or u Briefly press a station button > to call up the stored station. Tuning into a station There are various ways of tuning into a station: Tuning into stations manually u Briefly press the / button 7 supported by all stations. PTY In the reception areas "EUROPE" and "USA", an FM station can transmit its current programme type, e. Hence, the PTY function allows a targeted search for broadcasts of a certain programme type, e. Note that PTY is not supported by all stations. Note: The PTY function is only available if it has been activated (see the chapter "User settings", section "Making settings in the "TUNER" menu", menu item "PTY"). Selecting a programme type u Briefly press the / button 7. The currently selected programme type is briefly displayed, and you can select a different programme type.

Switching display u Press the DIS button A to toggle between these two displays: Display ABCDEF or FM1 102. 90 FM1 18:30 Meaning Station name or Memory bank/frequency Memory bank/time 9 CD/MP3/WMA mode CD/MP3/WMA mode Basic information This car sound system can be used to play audio CDs (CDDA) and CD-R/RWs with audio, MP3 or WMA files as well as MP3 or WMA files on USB data carriers. notes: Â· To ensure proper functioning, use only CDs with the Compact-Disc logo. â· Blaupunkt cannot guarantee the flawless function of copy-protected CDs and all CD blanks and USB data carriers available on the market. Note the following information when preparing an MP3/WMA data carrier: Â· Wma" (the use of more characters IX DIR MIX ALL MIX OFF Meaning Mixing tracks Mixing tracks of the current folder Mixing tracks of the data carrier Regular playback Switching display u Press the DIS button A once or several times to switch among these displays: Operation Display Meaning Track number and playing time Track number and duration Track number and time File name Artist* Album name* Track name* Playing time Track duration Time T01 00:15 CD T01 03:37 T01 18:30 FILE ARTIST ALBUM SONG PLAY 00:15 TOTAL03:37 CLOCK18:30 If the MIX function is switched on, the icon MIX (mix all tracks) or MIX (mix tracks of current folder) is shown on the display.

Repeatedly playing individual tracks or directories u Press the 4 RPT button > to change among the playback modes: Operation Display CD RPT TRACK RPT TRACK MP3/ WMA RPT DIR Gen. RPT OFF Meaning Repeating tracks Repeating tracks Repeating folders Regular playback MP3/ WMA * Track name, artist and album name must be stored as ID3 tag to be able to display them. Browse mode (Heidelberg 220 BT only) In Browse mode, you can directly search for and select a certain track on the MP3/WMA data carrier without interrupting the current playback. Calling the browse mode u Press the 1 LIST button > to call up the browse mode. The first or current folder on the data carrier is being displayed.

notes: Â· The first folder is displayed only if the browse mode has been called for the first time after inserting or connecting the data carrier. Afterwards, the current folder is displayed whenever the browse mode is called. If the RPT function is switched on, the icon (repeat tracks) or (repeat folders) is shown on the display.



[You're reading an excerpt. Click here to read official BLAUPUNKT
STUTTGART 120 user guide
http://yourpdfguides.com/dref/4312138](http://yourpdfguides.com/dref/4312138)

12 CD/MP3/WMA mode | Bluetooth - You can exit the browse mode at any time by pressing the LIST button >. Press the / button 7 once or several times to select a different folder. Press the button 7 to display the tracks of the selected folder. The first track of the folder is shown on the display. Note: Pressing the button 7 returns you to the folder list. Press the / button 7 once or several times to select a different track. Press the button 7 to play the track.

the playback starts. You are exiting the browse mode. fast browsing Fast browsing enables faster access to tracks. Instead of the arrow keys 7, you use the volume control 4 to select list entries: Function Selecting entries in lists Confirming entries Return to the higher level Browse mode / 7 7 7 Bluetooth (Heidelberg 220 BT only) You can connect the car sound system via Bluetooth with other Bluetooth-ready devices, such as cell phones or MP3 players. This allows you to use the car sound system with its integrated microphone as hands-free system for connected cell phones and control the audio output of other Bluetooth devices and play them back via the loudspeakers of the car sound system (Bluetooth streaming). Bluetooth technology is a wireless connection of short range. Perform the setting (see the following sections). Briefly press the MENU button 2 to exit the menu. 2 minutes and connected. Establish the connection from your cell phone.

Enter the PIN displayed by the car sound system. Press the button 7 to pair a streaming device. If you register a sixth one, the Bluetooth device registered first is unregistered. Pairing and connecting a cell phone Note: If a connection with a cell phone currently exists, this connection is automatically disconnected if you pair and connect another cell phone. Press the button 7 to pair a cell phone.

14 Bluetooth Turn the volume control 4 to select a digit for the respective position. Press the or button 7 to reach the next or previous position. Press the button 7 repeatedly until you reach past the last position to confirm the PIN entered. Note: Not all streaming devices require the entry of a PIN on the car sound system. For some streaming devices, you have to enter the PIN of the car sound system instead.

For these devices, press only the button 7 repeatedly until you reach beyond the last position, thereby confirming the current PIN, and then enter this PIN on the streaming device. The display shows "PAIRING" and the Bluetooth symbol is flashing. The car sound system can now be recognised by the streaming device for approx. 2 minutes and connected. Search the car sound system from your streaming device (Bluetooth name: "BLAUPUNKT") and establish the connection. Enter the PIN of the car sound system, if necessary. The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the streaming device are paired and connected. After switch-on, the car sound system automatically attempts to reconnect the device connected last. If the connection attempt fails, the display briefly shows "DISCONNECTED". If necessary, attempt to re-establish the connection from the streaming device.

If the device connected last cannot be located after switching on the car sound system, the car sound system attempts to connect one of the other paired devices. If none of the devices is located, the display briefly shows "NO DEVICE". Telephone functions Answering/rejecting an incoming phone call With an incoming call, the display alternately shows "IN CALL" and the number of the caller. The current audio source is muted and a ring tone is played via the loudspeakers of the car sound system. Note: If the number of the caller is not being transmitted, the display shows "IN CALL" instead of the number. If the number of the caller is stored together with a name in the car sound system, the name of the entry and the number are displayed (see the section "Storing a phone number in the car sound system" in this chapter). Press the button < to answer the call. "CALL" and the duration of the ongoing call are displayed. Button = to reject the call or Press the to end the current call. The display shows "END CALL".

notes: During the call, you can adjust the volume with the volume control 4 or mute the device with a short press of the On/Off button 3. You can preset the hands-free volume in the user menu (see the chapter "User settings", section "Making settings in the "VOLUME" menu", menu item "TEL VOLUME"). Press the button 7 to open the entry menu. Press the button < to call the number entered. Upon ending the call, the display briefly shows "END CALL".

Press the button 7 to activate voice recognition. - or Press the button < for approx. 2 seconds to activate the voice recognition with the speed dial. Say the name of the desired calling partner. If the spoken name is not being recognised or the time for the voice recognition has already expired, the display briefly shows "VOICE DIAL FAILED".

You can cancel the voice recognition by button =, pressing the . Please note that the duration of the voice recognition is limited and depending on the respective cell phone. Storing a phone number in the car sound system You can store five phone numbers in the car sound system and place calls with the speed dial (see the following section). Enter the phone number as described in the section "Making a call". Press the desired memory button 1 - 5 > for approx. 2 seconds to store the number. You can now enter a name with up to 15 characters: Turn the volume control 4 to select a character for the respective position. Press the or button 7 to reach the next or previous position. Note: You can also reach the next position by pressing the ON/Off button 3. Press the memory button 1 - 5 > again for approx.

2 seconds to store the number and name. The display briefly shows "NUMBER SAVED". Afterwards, you are returned to the Bluetooth menu and the "DIAL NEW NUMBER" menu item. Note: A number previously stored on the memory button is replaced. Speed dial for any phone number or for the number dialed last or a stored number With speed dial, you can make a call without first having to select the corresponding function in the Bluetooth menu. to call the number dialed last, button <. Press the The display shows the number dialed last. 16 Bluetooth Note: If no cell phone is currently connected, the Bluetooth menu is opened.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/4312138)

[STUTTGART 120 user guide](http://yourpdfguides.com/dref/4312138)

<http://yourpdfguides.com/dref/4312138>

the "PAIRING" menu item is selected. U Press the button < to call the number.

@@To call a stored number, button <. U Press the u Press a memory button 1 - 5 > to call the stored number. Note: If no number is stored under the selected memory button, the display briefly shows "NO NUMBER". button < to call the number. U Press the @@To call any number, u press the button <.

U Press the On/Off button 3 to open the entry menu and enter a number (enter the phone number as described in the section "Making a call"). button < to call the number. U Press the @@Selecting tracks u Press the / button 7 briefly to change to the previous/next track. Interrupting playback u Press the 3 > button to interrupt the playback ("PAUSE") or to continue it. Additional functions in the Bluetooth® menu Changing the Bluetooth® PIN The factory-set

Bluetooth® PIN of the car sound system is "1234"; e.

g. It must be entered on the cell phone when pairing a cell phone. This PIN can be changed. U In the Bluetooth® menu, select the "PIN EDIT" menu item. U Press the button 7 to open the entry menu. You can now enter the PIN: u Turn the volume control 4 to select a digit for the respective position. U Press the or button 7 to reach the next or previous position. Note: While entering the PIN, you cannot change the volume of the car sound system. U Press the button 7 repeatedly until you reach past the last position to confirm the PIN entered and return to the Bluetooth® menu. Managing paired devices In the Bluetooth® menu, you can manage the paired Bluetooth® devices (cell phones and streaming devices such as MP3 player).

In the device lists for cell phones and streaming devices, the Bluetooth® names or addresses of the paired devices are displayed. You can do the following:

· Disconnecting the connection to the currently connected Bluetooth® device · establishing a connection to one of the paired Bluetooth® devices ·

Unpairing a Bluetooth® device Bluetooth® streaming mode Starting the Bluetooth® streaming mode u Press the SRC button @ repeatedly until "BT

STREAM" appears on the display. The Bluetooth® streaming mode can be selected only if a suitable streaming device is connected. · If the connection to the streaming device is lost during playback, the display briefly shows "DISCONNECTED" and the car sound system changes to the previous audio source.

17 Bluetooth® | External audio sources u In the Bluetooth® menu, select the menu item "PHONE LIST" or "STREAMING LIST". U Press the button 7 to

open the selected list. The first device on the list is displayed. note: If no device is paired, "NO DEVICE" is briefly displayed. U Press the / button 7 once or

several times to select another device. U Press the button 7 to select between the following options: To connect the selected device, u press the / button 7

repeatedly until the "CONNECT DEVICE .

" menu item is selected. U Press the button 7 to connect the device. As soon as the device is connected, "CONNECTED" is briefly displayed and you are

returned to the Bluetooth® menu. Note: If no connection can be established, the display briefly shows "CONNECT FAILED". If the device is already

connected, the display briefly shows "CONNECTED".

To disconnect the connection to the selected device, u press the / button 7 repeatedly until the "DISCONNECT DEVICE . " menu item is selected. U Press the

button 7 to disconnect the device. The display briefly shows "DISCONNECTED" and you are returned to the Bluetooth® menu. To unpair the selected

device, u press the / button 7 repeatedly until the "DELETE DEVICE .

" menu item is selected. U Press the button 7 to unpair the device. The display briefly shows "DELETED" and you are returned to the Bluetooth® menu.

Unpairing all paired devices u In the Bluetooth® menu, select the "DELETE ALL PAIRED DEVICES" menu item. U Press the button 7 to unpair all cell

phones or streaming devices. The display briefly shows "ALL DEVICES DELETED". external audio sources Front AUX-IN socket Danger! Increased risk of

injury from connector. In case of an accident, the protruding connector in the front AUX-IN socket may cause injuries. The use of straight plugs or adapters

leads to an increased risk of injury. For this reason, we recommend using angled jack plugs, e.

As soon as an external audio source, such as a portable MP3 player is connected to the front AUX-IN socket ;, it can be selected with the SRC button @.

"AUX" then appears on the display. 18 Sound settings Sound settings The following sound settings can be changed in the "AUDIO" menu: · Adjusting the

increase of bass at low volume (X-Bass) · Selecting a sound profile (Presets) Making settings in the "AUDIO" menu BASS Bass level. settings: ·7 to +7. U

Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. U Press the button 7 to open the submenu. U Turn the volume

control 4 to perform the setting. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting.

U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. U Press the button 7 to open the submenu. U Turn the volume

control 4 to perform the setting. U Press the button 7 to open the submenu.

U Turn the volume control 4 to perform the setting. Calling and exiting the "AUDIO" menu u Briefly press the MENU button 2 to open the user menu. U Press

the / button 7 repeatedly until the "AUDIO" menu item is selected. U Press the button 7 to open the "AUDIO" menu. @@U Perform the setting (see the next

section).

U Briefly press the MENU button 2 to exit the menu. 16 seconds after the last button activation and you are returned to the display of the current audio

source. @@19 User settings User settings Calling the user menu and selecting a menu u Briefly press the MENU button 2 to open the user menu. In the user

menu, the user settings can be found in the following menus: · BLUETOOTH (Heidelberg 220 BT only, see chapter "Bluetooth®") u Press the / button 7

repeatedly until the desired menu is selected. U Press the button 7 to open the selected menu. @@U Perform the setting (see the following sections). U Briefly

press the MENU button 2 to exit the menu. 16 seconds after the last button activation and you are returned to the display of the current audio source.

@@Making settings in the "TUNER" menu RDS Switching the RDS function on or off. settings: ON , OFF.

U Press the button 7 to open the submenu.



[You're reading an excerpt. Click here to read official BLAUPUNKT
STUTTGART 120 user guide](http://yourpdfguides.com/dref/4312138)

<http://yourpdfguides.com/dref/4312138>

U Turn the volume control 4 to change between the settings. TRAFFIC (traffic information) (only for reception area EUROPE) Only possible in FM radio mode: Switching priority for traffic announcements on or off. settings: ON , OFF. U Press the button 7 to open the submenu. U Turn the volume control 4 to change among the settings. If priority is switched on for traffic information, the . Display shows the icon TUN BAND (band selection) Activating or deactivating memory banks. Memory banks that can be deactivated: Region EUROPE USA S-AMERICA THAILAND Memory banks FM2, FMT, MW FM2, FMT, AM, AMT FM2, FMT, AM, AMT FM2, FMT, AM, AMT Settings in each case: ON, OFF. U Press the button 7 to open the submenu.

U Press the / button 7 repeatedly until the desired memory bank is displayed. U Press the button 7 to change the setting. U Turn the volume control 4 to toggle between the settings ON (activate memory bank) and OFF (deactivate memory bank). 20 User settings Deactivated memory banks are skipped during the source selection with the SRC button @. notes: Â· In the factory default, all AM memory banks are deactivated.

â· If a memory bank is deactivated, the stations stored in this memory bank are retained. REGIONAL (only for reception area EUROPE) Only possible in FM radio mode: Switching REGIONAL function on or off. settings: ON , OFF. U Press the button 7 to open the submenu. U Turn the volume control 4 to change between the settings.

U Press the button 7 to open the submenu. U Turn the volume control 4 to change between the settings. U Press the button 7 to open the submenu. U Turn the volume control 4 to change between the settings. PTY LANG (only for reception area EUROPE) Select the language for the display of the programme types. settings: ENGLISH , DEUTSCH (German) , FRANCAIS (French). U Press the button 7 to open the submenu. u Turn the volume control 4 to select a language. AREA (reception area) Select the reception area for the radio reception. settings: EUROPE , USA , S-AMERICA , THAILAND.

U Press the button 7 to open the submenu. u Press the / button 7 to select a reception area. U Press the button 7 to set the reception area. U Press the button 7 to confirm the selected reception area. Making settings in the "DISPLAY" menu DIM DAY/DIM NIGHT Setting the display brightness for the day (DIM DAY) or the night (DIM NIGHT). settings: 1 Â 16. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. If your car sound system is installed as described in the installation instructions and your vehicle features the corresponding connection, the display brightness for day and night is switched by switching the vehicle lighting on or off. When displaying MP3 file names) either as single display or continued display. settings: IX (single display) , ON (continued display). U Press the button 7 to open the submenu. U Turn the volume control 4 to change between the settings.

21 User settings Making settings in the "VOLUME" menu ON VOLUME Setting the power-on volume. settings: 1 Â 50.

U Press the button 7 to open the submenu. U Turn the volume control 4 to set the desired power-on volume. @@@@ Always set the device to a moderate volume. U Press the button 7 to open the submenu. U Turn the volume control 4 to change between the settings.

@@ settings: 1 Â 50. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. @@ settings: 1 Â 40. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. Note: During the call, you can adjust the volume with the volume control 4. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. Making settings in the "CLOCK" menu CLK DISP Switch the permanent display of the time on or off.

settings: ON , OFF. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. If the permanent display of the time is switched on, the time is shown on the display. The display of the respective audio source is shown only after pressing a button. @@@ U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. 22 User settings \ Factory settings CLOCK SET Setting the time. U Press the button 7 to open the submenu. U Press the / button 7 to change between minutes and hours.

The minute or hour display flashes if it is selected. U Turn the volume control 4 to adjust the minutes or hours. @@@@ settings: 5 Â 30. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting.

@@ settings: ON , OFF. U Press the button 7 to open the submenu. U Turn the volume control 4 to perform the setting. NORMSET Restoring the original factory settings of the car sound system. U Press the button 7 to open the submenu.

U Press the button 7 to confirm restoring the factory settings. The car sound system switches off and is reset to the factory settings. * Only in reception area "EUROPE" ** Only in reception areas "USA", "S-AMERICA" and "THAILAND" In the user menu, you can restore the original factory settings of the car sound system (see the chapter "User settings", section "Making settings in the "VARIOUS" menu", menu item "NORMSET"). 23 Useful information \ Technical data Useful information Warranty We provide a manufacturer's warranty for products bought within the European Union. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid. The warranty terms can be called up from www. Information about the availability of this service in your country can be found at www. If you want to take advantage of this service, you may request a pick-up service for your car sound system via the Internet. 475 kg Subject to changes 24 Installation instructions Installation instructions Safety instructions

When carrying out installation work and making connections please observe the following safety instructions: Â· Disconnect the negative terminal of the battery! When doing so, please observe the vehicle manufacturer's safety instructions. â· Make sure you do not damage vehicle components when drilling any holes.

â· The cross sections of the positive and negative cables must not be less than 1. Do not connect the vehicle's plug connectors to the radio! You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer. â· Depending on the model, your vehicle may differ from the description provided here. We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/4312138)

[STUTTGART 120 user guide](http://yourpdfguides.com/dref/4312138)

<http://yourpdfguides.com/dref/4312138>

When installing an amplifier, you must first connect the device earth connections before connecting the plugs for the line-out jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). 30 Please keep the filled-in radio pass in a safe place! © 2012 All rights reserved by Blaupunkt. This material may be reproduced, copied or distributed for personal use only. This product is protected by certain intellectual property rights of Microsoft.

Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. .



[You're reading an excerpt. Click here to read official BLAUPUNKT
STUTTGART 120 user guide
http://yourpdfguides.com/dref/4312138](http://yourpdfguides.com/dref/4312138)