



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT THA 475 PNP. You'll find the answers to all your questions on the BLAUPUNKT THA 475 PNP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT THA 475 PNP
User guide BLAUPUNKT THA 475 PNP
Operating instructions BLAUPUNKT THA 475 PNP
Instructions for use BLAUPUNKT THA 475 PNP
Instruction manual BLAUPUNKT THA 475 PNP



[You're reading an excerpt. Click here to read official BLAUPUNKT THA 475 PNP user guide](http://yourpdfguides.com/dref/3311900)
<http://yourpdfguides.com/dref/3311900>

Manual abstract:

You can view the warranty terms at [www.200 D-31139 Hildesheim, Germany Guarantee for the USA](http://www.200-D-31139-Hildesheim-Germany-Guarantee-for-the-USA) Please read these operating instructions before using the equipment for the first time. We provide a manufacturer guarantee for our products bought within the United States of America. The warranty terms can be called up under www.@@@ the THA amplifier should be installed by a trained person. @@@ Using today's high-performance systems and loudspeaker configurations allows for reaching sound-pressure levels above 130 dB. Please observe the following safety notes during the installation and connection. - When you drill holes, ensure that you do not damage any vehicle components. - The cross section of the plus and minus cable may not be less than 1. - An incorrect installation can result in malfunctions of the electronic vehicle systems or your car sound system.

With respect to accident safety, the THA 475 PnP must be secured in a professional way. When selecting the installation location, select a dry location that offers sufficient air circulation for cooling the amplifier. The installation surface must be suitable to accept the accompanying screws and provide a firm support. The amplifier power cable must be fitted with a fuse no more than 30 cm from the battery (see Fig. 2a) to protect the vehicle battery in case of a short circuit between power amplifier and battery.

The fuse of the amplifier protects only the amplifier, not the vehicle battery. Use loudspeakers with 2-4 impedances (see table or installation drawing). observe the maximum power handling capacity (music output). @@@@ 2, 2a, b Connection to car sound system with cinch output .

@@@@@ Note: The amplifier can add the right and left signal information only if the right as well as the left RCA connection were carried out.

Caution: In a bridge circuit, the amplifier load must be 4 ohm or higher. A lower load leads to an overheating or switch-off of the amplifier and can cause permanent damages. Connection option in case of missing or occupied AUX input at the car sound system Various NF sources, such as an MP3 player or a mobile navigation, can be directly connected via a 3. 5-mm jack plug at the Direct Aux Input. All signal sources can be listened to at the same time and their volume is adjusted at the respective source device. Note: All NF sources must be switched off during installation and connection! Installing the jack plug cable Please use our 5-m jack plug cable with order number 7 607 001 525 for the connection. Caution: For the connection, always adjust the volume control to minimum and switch off the amplifier. If you want to listen to one sound source via the front and rear loudspeakers, you must connect the Direct Aux inputs with our Y jack plug cable (7 607 001 524), (see Fig. For example, if a pair of subwoofers is to be connected, low-pass settings are required. The Level control is used to adjust the input sensitivity of the power amplifier to the output voltage of your car sound system.

Green LED: Output stage on, regular operating status. **Red LED:** Output stage is electronically switched off due to an error. @@@@ motsvarande gäller för de negativa (-) anslutningarna. @@Anslutningsmöjlighet när ingen AUX-ingång finns eller när AUX-ingången på bilradion är upptagen Du kan ansluta olika NF-källor som till exempel en MP3-spelare eller en mobil navigeringsenhet direkt via en 3,5 mm jackkontakt till Direct Aux Inputingången. PnP High-Input nur für Autoradios mit Brückenendstufe only for car radios with bridged output stage uniquement pour autoradios avec étage de sortie en pont solo per autoradio con stadio di uscita a ponte alleen voor autoradio à bruceindtrap endast för bilradio med bryggkopplat slutsteg sólo para autorradios con paso final en puente apenas para auto-rádios com estágio de saída em ponte Right right + left left + left + left right + right - Line Out right Line Out left .



[You're reading an excerpt. Click here to read official BLAUPUNKT THA 475 PNP user guide](#)
<http://yourpdfguides.com/dref/3311900>