



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT TORONTO 400 BT. You'll find the answers to all your questions on the BLAUPUNKT TORONTO 400 BT in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BLAUPUNKT TORONTO 400 BT**

**User guide BLAUPUNKT TORONTO 400 BT**

**Operating instructions BLAUPUNKT TORONTO 400 BT**

**Instructions for use BLAUPUNKT TORONTO 400 BT**

**Instruction manual BLAUPUNKT TORONTO 400 BT**



You're reading an excerpt. Click here to read official BLAUPUNKT  
[TORONTO 400 BT user guide](#)  
<http://yourpdfguides.com/dref/3311063>

### **Manual abstract:**

· Keep the instructions at a location so that they are always accessible to all users. · Always pass on the car sound system to third parties together with these instructions. In addition, observe the instructions of the devices used in conjunction with this car sound system. General safety notes Observe the following notes to protect yourself against injuries: · Do not modify or open the device. @@ · Do not increase the volume during mute phases, e.g. when changing the audio source. Changing the volume is not audible during a mute phase. @@ Observe the performance limits in the technical data. @@@@ For this purpose, observe the installation instructions at the end of these instructions.

**Symbols used** These instructions employ the following symbols: DANGER! Warns about injuries CAUTION! Warns about damaging the CD drive The CE mark confirms the compliance with EU directives. u Identifies a sequencing step · Identifies a listing Road safety Observe the following notes about road safety: · Use your device in such a way that you can always safely control your vehicle. In case of doubt, stop at a suitable location and operate your device while the vehicle is standing. Declaration of conformity The Blaupunkt GmbH declares that the car sound system Toronto 400 BT complies with the basic requirements and the other relevant regulations of the directive 1999/5/EG. 29 ENGLISH · Remove or attach the control panel only while the vehicle is standing an.

· Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e.g. police sirens). During mute phases (e.g. when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase. Cleaning notes | Disposal notes | Scope of delivery Cleaning notes Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system. · Use only a dry or slightly moistened cloth for cleaning the car sound system. · If necessary, clean the contacts of the control panel regularly using a soft cloth moistened with cleaning alcohol. Optional equipment (not part of the scope of delivery) Contact your Blaupunkt specialised dealer or visit us on the Internet under [www.blaupunkt.com](http://www.blaupunkt.com) for information about optional equipment, such as: · The steering wheel or handheld remote control from Blaupunkt for safe and convenient operation of the basic functions (switching on/off not possible with the remote control) · The

C n C-ready interfaces from Blaupunkt (C n C = Command and Control) for connecting additional data carriers and devices (e.g. via the iPod®/USB interface) · Blaupunkt CD changer · Blaupunkt or Velocity amplifier Disposal notes Do not dispose of your old unit in the household trash! Use the return and collection systems available to dispose of the old device.

**Scope of delivery** The scope of delivery includes: 1 Car sound system 1 Operating/installation instructions 1 Case for the control panel 1 Support frame 1 Set of small parts 2 Disassembly tools 1 USB connecting cable Extended scope of delivery (for 7 649 036 010 only): 1 Connecting cable chamber A (power supply) 1 Connecting cable chamber B (loudspeaker) 1 Connecting cable chamber C1 (Line-Out) 1 Antenna connection adapter 1 Handheld remote control 2 Batteries (type AAA) Note: We recommend the use of original Blaupunkt accessories ([www.blaupunkt.com](http://www.blaupunkt.com)). 30 Placing the device in operation Placing the device in operation Attaching/detaching the control panel The car sound system is equipped with a detachable control panel (release panel) to protect your equipment against theft. In the delivery state, the control panel is in the supplied case. To start operating the radio after installation, you must first attach the control panel (see the section "Attaching the control panel" in this chapter). Always take the control panel with you when leaving the vehicle. The car sound system is worthless to a thief without this control panel. Caution Damage to the control panel Never drop the control panel. Transport the control panel so that it is protected against impacts and the contacts cannot become dirty.

Do not expose the control panel to direct sunlight or another heat source. Avoid direct skin contact with the control panel's electrical contacts. Attaching the control panel u Push the control panel into the bracket at the right edge of the device. u Push the control panel carefully into the left bracket until it clicks into place. Removing the control panel u Press the button 1 to unlock the control panel.

The left side of the control panel detaches from the device and is secured by a latch against falling out. u Grasp the control panel at the left side and pull it beyond the resistance of the latch and straight out of the bracket. Note: The car sound system automatically switches off as soon as the control panel is removed. Setting the tuner region This car sound system is designed for operation in different regions with different frequency ranges and station technologies. It is factory set to the tuner region "EUROPE".

Other available tuner regions include "USA", "THAI" (Thailand) and "S AMERICA" (South America). If you operate the car sound system outside of Europe, you may first have to set a suitable tuner region: u Switch off the car sound system if it is not already turned off. u Press and hold the buttons MENU·OK ? and 4 < at the same time and press the On/ Off button 3. The car sound system switches on. The currently set tuner region appears on the display. u Press the button @ / 2 repeatedly until the desired tuner region is displayed. u Press the MENU·OK button ?. Switching on/off Switching on/off with the On/Off button u For switch-on, press the On/Off button 3. The car sound system switches on. u To switch off the device, press and hold down the On/Off button 3 for longer than 2 seconds.

The car sound system switches off. Note: If you switch on the car sound system while the vehicle ignition is switched off, it automatically switches off ion "EUROPE" that allows the following additional functions: · The station name is shown on the display. · The car sound system recognises traffic announcements and news broadcasts and can automatically switch them through in any operating mode (e.g. in CD mode). · Alternate frequency: If RDS is activated, the car sound system automatically selects the best receivable frequency for the station that is currently set. · Regional (REG): At certain times, some radio stations divide their programme into regional programmes providing different content. If the REG function is activated, the car sound system changes only to those alternate frequencies on which the same regional programme is being broadcast.



You're reading an excerpt. Click here to read official BLAUPUNKT  
TORONTO 400 BT user guide  
<http://yourpdfguides.com/dref/3311063>

To switch the RDS or REG function on or off, please read the section "Performing settings in the user menu" in the chapter "User settings" (menu items "RDS", "REG"). u Press the button @ / 2 repeatedly until the desired memory bank is displayed.

Note: Up to 5 stations can be stored in each memory bank. Tuning into stations There are various ways of tuning into a station: Tuning into stations manually u Briefly press the button 5 / > once or several times to change the frequency in increments, or long to quickly change the frequency. Notes: · For the tuner region "EUROPE": In the FM waveband, the next station of the broadcasting network is automatically tuned into if the RDS function is switched on. · For the tuner regions "EUROPE", "USA" and "S AMERICA": In the FM waveband, the current selected programme type is displayed and can be changed if the PTY function is activated (see the ch. "PTY").

Starting station seek tuning u Press the button 5 / > for approx. 2 seconds to start station seek tuning. The radio tunes into the next receivable station.

Changing to radio mode u Press the SRC button 6 repeatedly until "TUNER" is displayed: The current memory bank appears once as scrolling text on the display. 33 ENGLISH Radio mode Notes: · For the tuner region "EUROPE": In the FM waveband, only traffic information stations are tuned into if the priority for traffic infor) is switched on.

mation ( · For the tuner regions "EUROPE", "USA" and "S AMERICA": In the FM waveband, the next station with the currently selected programme type is tuned into if the PTY function is activated (see the ch. "PTY"). · The sensitivity of seek tuning can be adjusted (see the chapter "User settings", section "Performing settings in the user menu", menu item "SENS"). Storing stations automatically (Travelstore) With Travelstore, you can automatically search for and store the 5 FM stations offering the strongest reception in the region in one memory bank. Any previously stored stations in this memory bank are deleted in the process. In the tuner regions "EUROPE" and "THAI", you can store 5 FM stations in the FMT memory bank with Travelstore. In the tuner regions "USA" and "S AMERICA", you can also store 5 AM stations in the AMT memory bank. u Select a memory bank of the desired waveband, e.g. FM1 or AM. u Press the button 2 seconds.

@/2 for approx. Storing stations/Calling stored stations u Select the desired memory bank. u If necessary, set the desired station. u Press the station button 1 - 5 < for approx. 2 seconds to store the current station under the button. - or u Briefly press the station button 1 - 5 < to call up the stored station. The tuner starts the automatic station seek tuning; the display shows "FM TSTORE" or "AM TSTORE". After the storing is completed, the radio plays the station at memory location 1 of the FMT or AMT level. Note: For the tuner region "EUROPE": If the priority ), for traffic information is switched on ( only traffic information stations are stored. Scanning stations The scan function is used to scan every receivable station of the current waveband.

u Press the MENU·OK button ? for approx. 2 seconds to start the scan, or long to continue playing the currently set station. During the scan, the display alternately displays "SCAN" and the current frequency as well as memory bank or station name. Note: For radio mode, you can adjust the scan time for each station (see the ch. "User settings", section "Performing settings in the user menu", "SCAN TIME" menu item).

PTY In the tuner regions "EUROPE", "USA" and "S AMERICA", an FM station can transmit its current programme type, e.g. CULTURE, POP, JAZZ, ROCK, SPORT or SCIENCE. Hence, the PTY function allows a targeted search for broadcasts of a certain programme type, e.g.

for rock or sports broadcasts. Note that PTY is not supported by all stations. 34 Radio mode | CD/MP3/WMA/C n C/CD changer mode Note: To use the PTY function, you must activate it separately in the menu (see the ch. "User settings", section "Performing settings in the user menu", "PTY" menu item). Selecting a programme type Note: In the tuner region "EUROPE", you can adjust the language in which the programme types are displayed (see the ch. "User settings", section "Performing settings in the user menu", "PTY LANG" menu item). u Briefly press the button 5/ >. The currently selected programme type is briefly displayed, and you can select a different programme type. u If necessary, press the button 5 / > repeatedly until the desired programme type is selected. Searching for stations u Press the button 5 / 2 seconds.

> for approx. · If the tuned radio station or another station on the broadcasting network broadcasts your selected programme type at a later point in time, the car sound been recognised as MP3 CD. · "USB": Connected USB data carrier. · Name of the device connected via C n C · "CDC / AUX": Connected CD changer (if no other external audio source is connected). Notes: · The respective audio source can be selected only if a corresponding CD is inserted or a corresponding device (e.g. a USB data carrier or CD changer) is connected. · If the car sound system first has to read the data of a connected device or data carrier before the playback, the display shows "READING". For large data volumes, this may take up to 1 minute. If the device or data carrier is defective or the transferred data cannot be played back, a corresponding message appears on the display (e.

g. "ERROR" or "USB ERROR"). 36 CD/MP3/WMA/C n C/CD changer mode · If the connected CD changer first acquires the inserted CDs (e.g. after an interruption of the power supply or a change of the magazine), "MAG SCAN" is displayed.

If the CD changer does not contain any CDs or magazine, "NO DISC" is displayed. Connecting/removing a USB data carrier To be able to connect a USB data carrier, the supplied USB cable must be connected to the car sound system (see Installation Instructions). ENGLISH Inserting a CD Note: You must not hinder or assist the drive as it automatically draws in the CD. u Insert the CD with its printed side up into the CD tray 7 until you feel a slight resistance. The CD is automatically pulled in and its data are checked (the display shows "READING" during this time).

Afterwards, the playback starts in CD or MP3 mode. If a CD is inserted, the display shows the CD symbol. Note: If the inserted CD cannot be played back, "CD ERROR" is briefly displayed and the CD is automatically ejected after approx.



You're reading an excerpt. Click here to read official BLAUPUNKT

TORONTO 400 BT user guide

<http://yourpdfguides.com/dref/3311063>

2 seconds. u Switch of the car sound system so that the data carrier will be correctly registered and unregistered. u Connect the USB data carrier to the USB cable or pull it off. If a USB data carrier is connected, the display shows the USB symbol. If the USB data carrier is initially selected as audio source after connecting it or after switching on the car sound system, the data are read in first (the display shows "READING" during this time). Notes: · If the connected USB data carrier cannot be seen, "USB ERROR" is briefly displayed. · The time required for reading in the data depends on the design and size of the USB data carrier.

Ejecting a CD Notes: · If a CD is ejected and not removed, the drive will automatically draw it back in again after approx. 10 seconds. · You can also eject CDs while the car sound system is switched off or whilst another audio source is activated. u Press the CD. button : to eject an inserted Selecting tracks 5/u Briefly press the button change to the previous/next track. > To Note: If the current track plays longer than 3 seconds, pressing 5 once restarts the track. Select a folder/CD (only in MP3/WMA/C n C or CD changer mode) u Press the button @ / 2 to change to the previous/next folder or CD. Note: This also allows you to change between playlists of a device connected via C n C. 37 CD/MP3/WMA/C n C/CD changer mode Fast searching u Press and hold down the button 5 / > until the desired position has been reached. Scanning all tracks The scan function scans all available tracks.

u Press the MENU-OK button ? for approx. 2 seconds to start the scan, or long to continue playing the currently scanned track. During the scan, the display alternately displays "SCAN" and the current track number or file name. Notes: · In the CD changer mode, the scan time per track is approx. 10 seconds. For all other operating modes, you can adjust the scan time for each track (see the ch. "User settings", section "Performing settings in the user menu", "SCAN TIME" menu item). · In the Playlist mode (MP3 mode), only the tracks of the current playlist are scanned. Interrupting playback u Press the button 3 < to interrupt the playback ("PAUSE") or to continue. Playlist mode (only in MP3/WMA mode) The car sound system can play playlists that were created with an MP3 manager, such as WinAmp or Microsoft Media Player.

The playlists must be stored in the root folder of the CD or USB data carrier. The following playlist formats can be recognised: M3U, PLS. Selecting tracks in Playlist mode u Press the 2 button < for approx. 2 seconds to change to the Playlist mode: "LIST MODE" briefly appears on the display. The first track of the first playlist is played. Note: If the data carrier does not contain any playlists, "NO LIST" is briefly displayed. 5 / > u Briefly press the button change to the previous/next track of the current playlist. u Press the button @ / 2 to change to the previous/next playlist. The display briefly shows the name of the selected playlist, and the first track of the playlist is being played. Exiting the Playlist mode u Press the 2 button < for approx.

2 seconds: "LIST OFF" briefly appears on the display. The current track continues playing. Playing tracks in random order u Press the 5 MIX button < to change between the playback modes: Opera- Display tion CD MIX ALL MP3/ WMA/ C n C 1 MIX DIR 2 Meaning Mixing tracks Mixing tracks of the current folder Mixing tracks of the data carrier Mixing tracks of the current CD Mixing tracks of all CDs Regular playback MIX ALL 2 MIX CD CDC MIX ALL Gen. 1 MIX OFF In C n C mode, additional playback modes may be available depending on the connected device 2 Not in MP3 Playlist mode If the MIX function is active, the MIX symbol appears on the display. 38 CD/MP3/WMA/C n C/CD changer mode | Bluetooth® Repeatedly playing individual tracks, CDs or directories u Press the 4 RPT button < to change between the playback modes: Opera- Display tion CD RPT TRACK MP3/ RPT TRACK WMA/ RPT DIR 2 C n C 1 CDC Gen. 1 1 Artist and album name must be stored as ID3 tag and are displayed only for approx. 10 seconds and perhaps as scrolling text; otherwise, the file name is displayed. Meaning Repeating tracks Repeating folders RPT TRACK Repeating tracks RPT DISC Repeating a CD RPT OFF Regular playback Note You can switch the display of CD text of an audio CD on and off (see the ch. "User settings", section "Performing settings in the user menu", "CD TEXT" menu item). If CD text is switched on, the corresponding CD text is displayed once as scrolling text at the start of a track.

Bluetooth® You can connect the car sound system via Bluetooth® with other Bluetooth®-ready devices, such as cell phones or MP3 players. This allows you to use the car sound system with its integrated microphone as hands-free system for connected cell phones and control the audio output of other Bluetooth® devices and play them back via the loudspeakers of the car sound system (Bluetooth® streaming). Bluetooth® technology is a wireless connection of short range. For this reason, Bluetooth® devices must be located near the car sound system (in the vehicle) to establish and maintain a connection. To establish a Bluetooth® connection, you must first register the car sound system and the Bluetooth® device.

When you register the devices, a Bluetooth® connection is subsequently established automatically. This connection remains in effect as long as the Bluetooth® device is within range. If the connection is interrupted, e.g. because you moved the cell phone outside the range, the connection is automatically re-established as soon as you are back within range.

You can connect only one cell phone and streaming device with the car sound system at a time. If you connect a new device with the car sound system, the connection to a currently connected device may automatically be interrupted. However, the car sound system leaves up to 5 different Bluetooth® devices registered, and you can quickly and easily connect any of these devices In C n C mode, additional playback modes may be available depending on the connected device 2 Not in MP3 Playlist mode If the RPT function is active, the RPT symbol appears on the display. Configuring the display u Press the DIS/ESC button = once or several times to change between these displays: Operation CD T 01 18:33 01 ABC MP3/ WMA/ C n C ABCDEF ABCDEF PLAY 02:15 CLK 18:33 T 01 02:15 CDC T 01 18:33 CD 02T 03 Display T 01 02:15 Meaning Track number and playing time Track number and time File name Artist 1 Album name 1 Playing time Time Track number and playing time Track number and time CD number and track number 39 ENGLISH Bluetooth® with the car sound system again.



You're reading an excerpt. Click here to read official BLAUPUNKT

TORONTO 400 BT user guide

<http://yourpdfguides.com/dref/3311063>

If you register a sixth one, the Bluetooth® device registered first is unregistered. Registering and connecting a device Registering and connecting a cell phone u In the Bluetooth® menu, select the "PAIR" menu item. u Press the menu. u Press the phone. button > to open the sub- Bluetooth® menu In the Bluetooth® menu, you find all the functions for registering, connecting and managing Bluetooth® devices. Calling the Bluetooth® menu u Press the MENU·OK button ?.

u Press the button @ to select the "BLUETOOTH" menu item. u Press the button > to open the Bluetooth® menu. u Press the button @ / 2 repeatedly until the desired menu item is selected. Notes: · The Bluetooth® menu is automatically exited approx. 30 seconds after the last button activation and you are returned to the display of the current audio source. · If a Bluetooth® process is running (e.g. re-establishing the connection to the last connected device), the functions of the Bluetooth® menu are blocked. If you attempt to open the Bluetooth® menu during this time, "LINK BUSY" appears on the display. To return to the current audio source, press the DIS/ESC button =.

To cancel the Bluetooth® process and open the Bluebutton A. tooth® menu, press the Exiting the Bluetooth® menu u Briefly press the DIS/ESC button = to exit the Bluetooth® menu. The "PHONE" menu item is selected. button > to register a cell The display shows "PAIRING" and the Bluetooth® symbol is flashing. The car sound system can now be recognised by a Bluetooth® cell phone for approx.

2 minutes and connected. u Search the car sound system from your cell phone (Bluetooth® name: "TORONTO 400 BT"). As soon as the car sound system is found by the cell phone and should be connected, "ENTER PIN" appears on the display and the PIN "1234". u Establish the connection from your cell phone. Enter the PIN displayed by the car sound system.

The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the cell phone are registered and connected. Note: If no connection can be established, "CON FAIL" (connection failed) is briefly displayed. Registering and connecting a Bluetooth® streaming device u In the Bluetooth® menu, select the "PAIR" menu item. u Press the menu. button > to open the sub- The "PHONE" menu item is selected. 40 Bluetooth® u Press the button @ to select the "STREAMING" menu item. u Press the button > to register a streaming device. The display shows the currently stored PIN (default "1234"). If required, enter the PIN of the streaming device: u Press the button @ / 2 repeatedly until the desired number appears at the respective current location. @@ u Press the MENU·OK button ? to confirm the PIN entered.

Note: Not all streaming devices require the entry of a PIN on the car sound system. For some streaming devices, you have to enter the PIN of the car sound system instead. For those devices, you can simply confirm the current PIN of the car sound system by pressing the MENU·OK button ? and then enter it on the streaming device. The display shows "PAIRING" and the Bluetooth® symbol is flashing. The car sound system can now be recognised by the streaming device for approx. 2 minutes and connected. u Search the car sound system from your streaming device (Bluetooth® name: "TORONTO 400 BT") and establish the connection. Enter the PIN of the car sound system, if necessary. The display may show "PAIRED", followed by "CONNECTED", as soon as the car sound system and the streaming device are registered and connected. Note: If no connection can be established, "CON FAIL" (connection failed) is briefly displayed.

Telephone functions Answering/rejecting an incoming phone call With an incoming call, the display alternately shows "INCOMING" and the number of the caller. The current audio source is muted and a ring tone is played via the loudspeakers of the car sound system. Note: If the number of the caller is not being transmitted, the display shows "PRIVATE NUMBER" instead of the number. If the number of the caller is stored together with a name, the name of the entry and the number are displayed (see the ch. "Storing a phone number").

u Press the button B to answer the call. "CALL" and the duration of the ongoing call are displayed. button A to reject the call or u Press the to end the current call. The display shows "CALL END". Making a call u In the Bluetooth® menu, select the "DIAL NEW" menu item.

u Press the button >. @@@@ u Press the entered. button B to call the number "OUTGOING" and the dialed number are alternately shown on the display. 41 ENGLISH Bluetooth® Note: If the dialed number is stored together with a name, the name of the entry and the number are displayed (see the ch. "Storing a phone number"). As soon as your calling party answers the call, the display alternately shows "CALL" and the time of the current phone call. @@ u Press the button >. @@@@ u Press the desired memory button 1 - 5 < for approx. 2 seconds to store only the number. - or u Press the MENU·OK button ? to enter a name for the entry.

@@@ @@@@ u Press the desired memory button 1 - 5 < for approx. 2 seconds to store the number and name. @@ "Storing a phone numbers"). button B. u Press the The display shows the number dialed last. @@ The "PAIR" menu item is selected. @@ u Press the button B to call the number. @@ The playback starts. @@ @@@@ Selecting tracks u Briefly press the button 5/ change to the previous/next track. > to 42 Bluetooth® Additional functions in the Bluetooth® menu

Changing the Bluetooth® PIN The factory-set Bluetooth® PIN of the car sound system is "1234"; e.

g. it must be entered on the cell phone when registering a cell phone. This PIN can be changed. @@ u Press the menu. @@@@ The display shows "CONNECTNG".

@@@@@@@ button A for approx. 2 secu Press the onds to unregister the displayed device. @@@@ u Press the button > to unregister all registered devices. The display shows "CONFIRM". u Press the button > again.

@@@ @@@@ u Press the MENU·OK button ?. @@@@ @@@@ u Press the menu. @@@@ Increased risk of injury from connector. @@@@ For this reason, we recommend using angled jack plugs, e.g. the Blaupunkt accessories cable (7 607 001 535). @@@@ @@@@ If necessary, remove connected devices first while the car sound system is switched off. Starting C'n'C mode u Press the SRC button 6 repeatedly until the name of the device connected via C'n'C appears on the display. The playback starts. Notes: · The C'n'C mode can be selected only if a suitable device is connected via a C'n'Cready interface.



You're reading an excerpt. Click here to read official BLAUPUNKT  
TORONTO 400 BT user guide  
<http://yourpdfguides.com/dref/3311063>

· To operate the radio in C n C mode, please read the chapter "CD/MP3/WMA/C n C/CD changer mode". · When using suitable adapter cables, you can connect up to 3 C n C-ready Blaupunkt interfaces to the car sound system. For the car sound system to distinguish the different interfaces, you can assign an individual device number to every interface (see ch. "User settings", section "Performing settings in the user menu", "C N C" menu item). Starting AUX mode

u Press the SRC button 6 repeatedly until "CDC /AUX" appears on the display. The playback starts. Note: You can enter a separate name for the rear AUX

input that is shown on the display in AUX mode if you selected the connected audio source (see ch. "User settings", section "Performing settings in the user menu", "AUX EDIT" menu item). Rear AUX input Different external audio sources can be connected to the car sound system via the rear AUX input (Rear-

AUX-IN): · C n C-ready devices from the Blaupunkt accessories programme (e.g.

a C n C-ready Bluetooth®/USB or iPod®/USB interface; C n C = Command and Control). · CD changer · Other external audio sources, such as portable CD players, MiniDisc players, MP3 players or a non-C n C-capable Blaupunkt interface. Note: An adapter cable is needed to connect an external audio

source via the rear AUX input. You can obtain this cable (Blaupunkt no.: 7 607 897 093) from your Blaupunkt dealer.

Before you connect a certain device, first check the mode of the rear AUX input and, if necessary, change the setting (see ch. "User settings", section "Performing settings in the user menu", 44 Sound settings Sound settings The following sound settings can be changed in the Audio menu: · Adjusting bass and treble · Setting the left/right volume distribution (Balance) or front/rear (Fader) · Setting the boost of bass at low volume (X-Bass). In the Enhanced Audio menu, you can also perform the following settings: · Setting the 3-band equalizer: Setting the middle level Selecting bass, middle and treble · Adjusting quality factor for bass and middle · Performing advanced X-Bass settings (level and frequency) · Selecting equalizer presets Note: The settings for bass, middle and treble are each stored for the current audio source. Note: The menu is automatically exited approx. 15 seconds after the last button activation and you are returned to the display of the current audio source.

Performing settings in the audio menu BASS Bass level. Settings: -7 to +7. u Press the button > to open the submenu. u Press the button the setting. @/2 to perform TREBLE Treble. Settings: -7 to +7. u Press the button > to open the submenu. u Press the button the setting. @/2 to perform Calling and exiting the audio menu u Briefly press the MENU-OK button ? to open the User menu. u Press the button @ / 2 repeatedly until the "AUDIO" menu item is selected.

u Press the menu. @@Settings: L9 (left) to R9 (right). u Press the button > to open the submenu. u Press the button the setting. @@u Perform the setting (see the next section). u Briefly press the MENU-OK button ? to select a different menu item. @@Settings: R9 (rear) to F9 (front). u Press the button > to open the submenu. u Press the button the setting. @/2 to perform X-BASS Increase of bass at low volume.

Settings: 0 (off) to 3 (highest increase). @@@@E-XBASS Setting the X-bass level and frequency. @@@@PRESETS Selecting equalizer presets. Settings: POP, ROCK, CLASSIC, P-EQ OFF (no presetting). u Press the button > to open the PRESETS submenu.

u Press the button @ / tween the settings. 2 to change be- Calling and exiting the enhanced audio menu u In the audio menu, select the "ENHANCED" menu item. u Press the button > to open the ENHANCED menu. u Press the button @/2 repeatedly until the desired menu item is selected. u Perform the setting (see the next section).

u Briefly press the MENU-OK button ? to select a different menu item. - or u Briefly press the DIS/ESC button = to exit the menu. Performing settings in the enhanced audio menu E-BASS Adjusting bass frequency and quality factor. Settings: · Bass frequency: 60/80/100/200 Hz · Quality factor: 1.0/1.25/1.5/2.0 u Press the submenu. button > to open the E-BASS u Press the button @ / 2 to change between the submenus "FREQ" (frequency) and "QFAC" (quality factor). @/E-TREBLE Setting the treble frequency.

Settings: 10/12.5/15/17.5 kHz. u Press the button > to open the E-TREBLE submenu. 46 User settings User settings Calling and exiting the user menu u Briefly press the MENU-OK button ? to open the menu. u Press the button @ / 2 repeatedly until the desired menu item is selected. u Perform the setting (see the next section). u Briefly press the MENU-OK button ? to select a different menu item. - or u Briefly press the DIS/ESC button = to exit the menu. Note: The menu is automatically exited approx.

15 seconds after the last button activation and you are returned to the display of the current audio source. u Press the menu. button > to open the sub2 to select the u Press the button @ / interface ("DEV 1 - 3"). u Press the number. button > to change the device > to change ENGLISH u Press the button 5 / between the positions.

The character at the selected position flashes if selected. u Press the button @ / 2 to select a character at the selected location. u Briefly press the MENU-OK button ? to confirm the device number entered. CDTEXT Switching the display of CD text on or off. Settings: ON, OFF.

u Press the button > to open the submenu. u Press the button > to change between the settings. u Briefly press the MENU-OK button ? to confirm the selected setting. TA VOLUME (only for tuner region "EUROPE") Setting the minimum volume for traffic announcements. Settings: 1 - 50. u Press the button > to open the submenu. u Press the button @ / 2 or turn the volume control 4 to perform the setting. SENS Only possible in FM radio mode: Setting the sensitivity of station seek tuning. Settings: LO1 (lowest) HI6 (highest). u Press the button > to open the submenu.

u Press the button the setting. @/2 to perform Performing settings in the user menu CDC Setting the rear AUX input mode Settings: ON (to connect a CD changer or another external audio source), OFF (to connect a C n C-ready Blaupunkt interface). u Press the button > to open the submenu. u Press the button > to change between the settings. u Briefly press the MENU-OK button ? to confirm the selected setting. The car sound system automatically switches off and on again with the selected setting. C N C Assigning an individual device number to connected C n C-ready interfaces (C n C = Command and Control).



You're reading an excerpt. Click here to read official BLAUPUNKT  
TORONTO 400 BT user guide  
<http://yourpdfguides.com/dref/3311063>

Length: 4 digits, characters: 0-9, A-F (hexadecimal). 47 User settings SCAN TIME Setting the scan time in 5-second increments. Settings: 5-30.

u Press the button > to open the submenu. u Press the button the setting. @/2 to perform u Briefly press the MENU-OK button ? to confirm the selected setting. BEEP Switching the confirmation beep on or off. Settings: ON, OFF.

u Press the button > to open the submenu. u Press the button > to change between the settings. u Briefly press the MENU-OK button ? to confirm the selected setting. MUTE LVL Setting the volume for low volume. Settings: 0-50.

u Press the button > to open the submenu. u Press the button @/2 or turn the volume control 4 to perform the setting. ON VOLUME Setting the power-on volume Settings: 0-50 or LAST VOL (volume set last before switching off the car sound system). With the "LAST VOL" setting, the power-on volume is limited to max. 25. u Press the button > to select the setting "LAST VOL". - or u Press the button 5 to set the power-on volume between 0 and 50. u Press the button @/2 or turn the volume control 4 to perform the setting. REG (only for tuner region "EUROPE") Only possible in FM radio mode: Switching REG function on or off. Settings: ON, OFF.

u Press the button > to open the submenu. u Press the button > to change between the settings. CLOCK SET Setting the time. u Press the button > to open the submenu. u Press the button 5/ to change between minutes and hours. The minute or hour display flashes if it is selected. u Press the button @/ minutes or hours. 2 to adjust the u Briefly press the MENU-OK button ? to confirm the time entered. Note: In 12-hour mode (12H MODE), an "A" is displayed after the time for the time before noon or a "P" for the time after noon. 12H/24H MODE Selecting the 12 or 24-hour time.

Settings: 12H, 24H. u Press the button > to open the submenu. u Press the button > to change between the settings. CLOCK Switching the display of time on or off with radio and vehicle ignition switched off. Settings: ON, OFF.

u Press the button > to open the submenu. u Press the button > to change between the settings. 48 User settings u Press the button @/ between the settings. 2 to change be- PTY (only for tuner regions "EUROPE", "USA", "S AMERICA") Only possible in FM radio mode: Switching PTY function on or off. Settings: ON, OFF.

u Press the button > to open the submenu. u Press the button > to change between the settings. DISP COL Mixing the colour for the display illumination from the basic colours Red, Green and Blue (RGB). Settings: For R, G and B each 0 to 16. u Press the button 5 to select the "4096 COL" submenu (setting R, G and B) or the button > to select the "256 COL" submenu (setting R and G, B remains unchanged). u Press the menu. button > to open the sub> to change COL SCAN Selecting the colour of the display illumination during a colour seek. u Press the button > to start the colour seek. The display alternately shows "SCANNING" and "OK (MENU)" and the colour of the display illumination changes constantly. u Briefly press the MENU-OK button ? to select the currently set colour.

DIM DAY/DIM NIGHT Setting the display brightness for the day (DIM DAY) or the night (DIM NIGHT). Settings: 1-16. u Press the button > to open the submenu. u Press the button the setting. @/2 to perform u Press the button 5 / between the colours. If your car sound system is installed as described in the installation instructions and your vehicle features the corresponding connection, the display brightness for day and night is switched by switching the vehicle lighting on or off. AUX EDIT Entering names for the rear AUX input in AUX mode. Length: 9 digits; characters: A-Z, 0-9. u Press the button > to open the submenu. u Press the button 5 / tween the positions.

> to change be- The value of the selected colour flashes. u Press the button @/2 to adjust the value of the selected colour. u Briefly press the MENU-OK button ? to confirm the selected setting. SCAN Switching the constant colour change of the display illumination on or off. Settings: ON, OFF.

u Press the button > to open the submenu. The character at the selected position flashes if selected. 49 ENGLISH PTY LANG (only for tuner region "EUROPE") Only possible in FM radio mode: Selecting the language for the display of programme types. Settings: ENGLISH, FRANCAIS, DEUTSCH. u Press the button > to open the submenu.

u Press the button > to change between the settings. u Briefly press the MENU-OK button ? to confirm the selected setting. If the constant colour change is switched on, the colour of the display illumination changes constantly across the colour spectrum. User settings | Factory settings u Press the button @/2 to select a character at the selected location. u Briefly press the MENU-OK button ? to confirm the name entered. TRAF (only for tuner region "EUROPE") Only possible in FM radio mode: Switching priority for traffic announcements on or off. Settings: ON, OFF. u Press the button > to open the submenu. u Press the button > to change between the settings. RDS (only for tuner region "EUROPE") Only possible in FM radio mode: Switching RDS function on or off.

Settings: ON, OFF. u Press the button > to open the submenu. u Press the button > to change between the settings. Factory settings Factory settings in the user menu: ON VOLUME MUTE LVL SENS SCAN TIME CLOCK BEEP DIM DAY DIM NIGHT CDTEXT 12H/24H MODE CLOCKSET TA VOL RDS\* REG\* TRAF\* LAST VOL 0 H16 10 OFF ON 15 12 OFF 24H 00:00 20 ON ON OFF \* Only in tuner region "EUROPE" You can restore the original factory settings of the car sound system: u Briefly press the MENU-OK button ? to open the menu. u Press the button @/2 repeatedly until the "NORMSET" menu item is selected. u Press and hold down the MENU-OK button ? for longer than 4 seconds. "NORM ON" briefly appears on the display. The car sound system automatically switches off and on again with the factory settings. Note: If you press the MENU-OK button ? for less than 4 seconds, "NORM OFF" appears on the display and the current settings are retained. 50 Useful information | Technical data Useful information Warranty We provide a manufacturer's warranty for products bought within the European Union.

For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid. The warranty terms can be called up under [www.blaupunkt.com](http://www.blaupunkt.com) or requested directly from: Blaupunkt GmbH Hotline Robert-Bosch-Str. 200 D-31139 Hildesheim Tuner

Wavebands in Europe/Thailand: FM: 87.

5 - 108 MHz AM (MW): 531 - 1,602 kHz LW (Europe only): 153 - 279 kHz Wavebands in the US: FM: AM (MW): ENGLISH 87.



You're reading an excerpt. Click here to read official **BLAUPUNKT**

**TORONTO 400 BT user guide**

<http://yourpdfguides.com/dref/3311063>

7 - 107.9 MHz 530 - 1,710 kHz Service In some countries, Blaupunkt offers a repair and pick-up service. Information about the availability of this service in your country can be found at [www.blaupunkt.com](http://www.blaupunkt.com).

com. If you want to take advantage of this service, you may request a pick-up service for your car sound system via the Internet. Wavebands in South America: FM: 87.5 - 107.9 MHz AM (MW): 530 - 1,710 kHz FM frequency response: 30 - 15,000 Hz CD Frequency response: 20 - 20,000 Hz Pre-amp out 4 channels: Input sensitivity Rear-AUX-IN: Front-AUX-IN: Tel/Navi input: 2V 1.2 V / 10 k 500 mV / 6 k 10 V / 1 k Technical data Voltage supply Operating voltage: 10.5 - 14.4 V Current consumption In operation: 10 A 10 sec. after switch-off: < 3.5 mA Amplifier Output power: 4 x 26 watts sine at 14.

4 V at 4 ohms. 4 x 50 watts max. power Dimensions and weight W x H x D (mm): 182 x 53 x 155 Weight: approx. 1.30 kg Subject to changes 51  
Einbauanleitung · Installation instruction DE Einbauanleitung Sicherheitshinweise Für die Dauer der Montage und des Anschlusses beachten Sie bitte folgende Sicherheitshinweise. GB Installation instructions Safety instructions When carrying out installation work and making connections please observe the following safety instructions: · Minuspol der Batterie abklemmen! Dabei die Sicherheitshinweise des Kfz-Herstellers beachten. · Disconnect the negative terminal of the battery! When doing so, please observe the vehicle manufacturer's safety instructions. · Beim Bohren von Löchern darauf achten, dass keine Fahrzeugteile beschädigt werden. · Make sure you do not damage vehicle components when drilling any holes. · The cross sections of the positive and negative cables must not be less than 1.

5 mm<sup>2</sup>. · Der Querschnitt des Plus- und Minuskabels darf 1,5 mm<sup>2</sup> nicht unterschreiten. · Do not connect the vehicle's plug connectors to the radio! You can obtain the adapter cable required for your vehicle type from any BLAUPUNKT dealer. · Fahrzeugseitige Stecker nicht an das Radio anschließen! Die für Ihren Fahrzeugtyp erforderlichen Adapterkabel erhalten Sie im BLAUPUNKTFachhandel. · Depending on the model, your vehicle may differ from the description provided here.

We accept no responsibility for any damages due to incorrect installation or connection or for any consequential damages. If the information provided here is not suitable for your specific installation requirements, please contact your Blaupunkt dealer, your vehicle manufacturer or our telephone hotline. When installing an amplifier or changer, you must first connect the device earth connections before connecting the plugs for the line-in or lineout jacks. Earth connection of external devices may not be connected to earth of car sound system (housing). · Je nach Bauart kann Ihr Fahrzeug von dieser Beschreibung abweichen.

Für Schäden durch Einbau- oder Anschlussfehler und für Folgeschäden übernehmen wir keine Haftung. Sollten die hier aufgeführten Hinweise für Ihren Einbau nicht passen, so wenden Sie sich bitte an Ihren Blaupunkt-Fachhändler, Ihren Fahrzeugherrsteller oder unsere TelefonHotline. Bei Einbau eines Amplifier oder Changers müssen unbedingt erst die Gerätemassen angeschlossen werden, bevor die Stecker für die Line-In- oder Line-Out-Buchse kontaktiert werden. Fremdgerätemassen dürfen nicht an der Autoradiomasse (Gehäuse) angeschlossen werden. 381 Notice de montage · Istruzioni di installazione FR Notice de montage Consignes de sécurité Respecter les consignes de sécurité suivantes pendant la durée du montage et du branchement. IT Istruzioni di installazione Note di sicurezza Durante il montaggio e l'allacciamento osservate per favore le seguenti istruzioni sulla sicurezza. · Débrancher le pôle (-) de la batterie ! Respecter les consignes de sécurité du constructeur automobile ! · Staccate il polo negativo della batteria! Nel fare ciò osservate le istruzioni di sicurezza del fabbricante d'auto. · Veiller à n'endommager aucune pièce du véhicule en perçant des trous. · Quando praticate dei fori, fate attenzione a non danneggiare nessuna parte dell'autovettura. · La section du câble (+) et (-) ne doit pas dépasser 1,5 mm<sup>2</sup>.

· La sezione dei cavi positivi e negativi non deve essere mai inferiore a 1,5 mm<sup>2</sup>. · Ne pas brancher les connecteurs du véhicule sur la radio ! Les câbles d'adaptation nécessaires pour le type de véhicule sont disponibles auprès des revendeurs BLAUPUNKT. · Non collegate alla radio le spine in dotazione di autovettura! · Richiedete ad un negoziante specializzato in articoli BLAUPUNKT il cavo di adattamento richiesto per il vostro modello di autovettura. · En fonction du modèle, votre véhicule peut différer de cette description. Nous déclinerons toute responsabilité en cas de dommages causés par des erreurs de montage ou de connexion et en cas de dommages consécutifs. Si les indications décrites ici ne s'appliquent au montage que vous voulez effectuer, adressez-vous à votre revendeur Blaupunkt, votre constructeur automobile ou notre service d'assistance téléphonique. Pour le montage d'un amplificateur ou changeur, les masses d'appareil doivent être d'abord connectées avant de connecter les fiches pour les connecteurs Line In ou Line Out. Les masses des appareils externes ne doivent pas être raccordées à la masse de l'autoradio (boîtier). · A seconda del modello il Suo veicolo può differire da questa descrizione. Non forniamo garanzia per danni derivanti da errori di montaggio o di collegamento e per danni conseguenti.

· Se le indicazioni qui elencate non sono adatte al Suo montaggio, La preghiamo di rivolggersi al Suo rivenditore Blaupunkt, al fabbricante dell'auto o alla nostra hotline telefonica. Quando vengono montati un amplificatore o un multiletto CD, bisogna innanzi tutto allacciare le masse degli apparecchi prima di eseguire la connessione delle spine con le prese line-in e line-out. Le masse di altri apparecchi non devono essere collegate alla massa dell'autoradio (involucro). 382 Inbowhandleiding · Monteringsvejledning NL Inbowhandleiding Adviezen voor de veiligheid Wilt u dedurende het monteren en aansluiten de volgende veiligheidsadviezen in acht nemen. SW Monteringsanvisning Skyddsanvisningar Vänligen beakta följande skyddsanvisningar under pågående montage och anslutning.



You're reading an excerpt. Click here to read official BLAUPUNKT

TORONTO 400 BT user guide

<http://yourpdfguides.com/dref/3311063>

· Lossa polskon från batteriets minuspol! Följ därvid fordonstillverkarens skyddsanvisningar. · De minpool van de batterij afklemmen! De veiligheidsadviezen van de fabrikant in acht nemen. · Se till att inga av fordonets komponenter skadas i samband med borrhning av hål. · Bij het gaten boren erop letten dat geen voertuigonderdelen worden beschadigt. · Plus- och minuskabelns ledningsarea måste vara minst 1,5 mm<sup>2</sup>. · De dwarsdoorsnede van de plus- en minkabel mag niet minder dan 1,5 mm<sup>2</sup> zijn. · Fordonetts stickkontakt får inte anslutas till radion! Din BLAUPUNKT fackhandel tillhandahåller för resp fordonstyp erforderlig adapterkabel. · Stekker aan de voertuigkant niet aan de radio aansluiten! De voor uw voertuig vereiste adapterkabel is bij de BLAUPUNKT-vakhandel verkrijgbaar! · Afhankelijk van de uitvoering kan uw auto afwijken van deze beschrijving. Voor schade door fouten in montage of aansluiting en schade als gevolg daarvan aanvaarden wij geen aansprakelijkheid. Mochten de hier vermelde aanwijzingen voor de montage voor u niet van toepassing zijn, dan kunt u contact opnemen met uw Blaupunkt-vakhandel, uw autofabrikant of onze telefoon-hotline. Bij inbouw van een versterker of cd-wisselaar moeten eerst de massacontacten van de apparaten worden verbonden voordat de stekkers voor de line-in- of line-out-bussen worden aangesloten. De massa van andere apparaten mag niet aan de massa van de autoradio (huis) worden aangesloten. · Beroende på konstruktionstyp kan fordonet avvika från denna beskrivning. Vi frånsäger oss allt ansvar för skada eller förlidskada pga. felaktig montering eller anslutning.

Om här givna monteringsanvisningar ej stämmer överens med faktiska förhållanden, vänligen kontakta Blaupunkt fackhandel, representant för fordonets tillverkare eller vår telefonkundtjänst. Vid montering av förstärkare eller cd-växlare måste först apparatstommen jordas, innan stickpropparna ansluts till in- eller utgångarna (hylstag line-in resp line-out). Jord från andra apparater får inte anslutas till bilradions jord (höjlet). 383 Instrucciones de instalación · Instruções de montagem ES Instrucciones de instalación Normas de seguridad Durante el montaje y la conexión es imprescindible observar las siguientes normas de seguridad. PT Instruções de montagem Instruções de segurança Durante a montagem e a ligação do aparelho, queira respeitar as seguintes instruções de segurança. · Separar o polo negativo da bateria! Respeitar ao mesmo tempo as instruções de segurança do fabricante do automóvel. · Desemborne el polo negativo de la batería. Observe las normas de seguridad dadas por el fabricante del vehículo. · Quando se procede à furagem de buracos, prestar atenção para não serem danificadas quaisquer partes do veículo. · Al perforar agujeros, asegúrese de no dañar ninguna pieza del vehículo. · La sección transversal del cable positivo y del cable negativo no debe ser menor de 1,5 mm<sup>2</sup>. · As secções transversais dos cabos positivo e negativo não devem ser inferiores a 1,5 mm<sup>2</sup>. · ¡No conecte a la radio los conectores ubicados en el vehículo! Los cables adaptadores necesarios para su vehículo los encontrará en el comercio especializado en artículos de la marca BLAUPUNKT. · Não ligar as fichas existentes do lado do automóvel ao auto-rádio Os cabos adaptadores necessários para o seu automóvel podem ser adquiridos nos revendedores da BLAUPUNKT. · O seu veículo pode divergir desta descrição em função do modelo.

Não assumimos qualquer responsabilidade por erros de montagem ou de ligação nem por danos daí decorrentes. Caso as presentes instruções não sejam adequadas para a montagem no seu veículo, dirija-se ao revendedor da Blaupunkt, ao fabricante do seu veículo ou à nossa linha verde. No caso de montagem de um amplificador ou leitor multi-CD, é imprescindível ligar primeiramente os aparelhos à terra antes de se conectar as fichas às tomadas Line In ou Line Out. A massa de aparelhos externos não deve ser ligada à massa do auto-rádio (caixa). · Dependiendo del modelo, es posible que su vehículo varíe un poco con respecto a la descripción aquí dada.

Tenga en cuenta que no asumimos ninguna responsabilidad por los daños debidos a un montaje o conexión incorrectos ni por los daños resultantes. Si las instrucciones aquí dadas no son aptas para el montaje en su vehículo, póngase en contacto con su proveedor de artículos Blaupunkt o con el fabricante del vehículo, o llame a nuestro teléfono de atención al cliente. En caso de montar un amplificador o un cambiadiscos, es necesario conectar la puesta a tierra de las unidades antes de establecer el contacto de los conectores para las hemibrillas Line-In y Line-Out. No deben conectarse masas de otros equipos a la masa de la radio (carcasa). 384 Monteringsvejledning · Instrukcja montaowa DK Monteringsvejledning Sikkerhedshenvisninger Under monteringen og tilslutningen skal følgende sikkerhedshenvisninger iagttages. PL Instrukcja montaowa Wskazówki bezpieczestwa Podczas montażu i podłączania należy przestrzegać ponisznych wskazówek bezpieczestwa. · Batteriets negative pol skal afbrydes! Herved skal bilfabrikantens sikkerhedshenvisninger iagttages. · Odliczy biegun ujemny akumulatora! Przestrzega wskazówek bezpieczestwa producenta pojazdu. · Vær opmærksom på, at ingen bildele ødelægges under boringen af huller. · Przy wierczeniu otworów uwaga, aby nie uszkodzi którego z urządzeń pokładowych pojazdu.

· Tøversnittet af plus- og minuskablet må ikke underskride 1,5 mm<sup>2</sup>. · Bilens stik må ikke tilsluttes radioen! De nødvendige adapterkabler til din biltype kan købes hos BLAUPUNKT-specialforretningen. · Przekrój kabla plusowego i minusowego nie może być mniejszy niż 1,5 mm<sup>2</sup>. · Nie podłącz wtyczek samochodu do radia! Odpowiedni dla danego typu pojazdu przewód-adAPTER można nabyć u autoryzowanego sprzedawcy produktów BLAUPUNKT.



You're reading an excerpt. Click here to read official BLAUPUNKT

TORONTO 400 BT user guide

<http://yourpdfguides.com/dref/3311063>

· Alt efter konstruktion kan bilen afvige fra denne beskrivelse. For skader på grund af monterings- eller tilslutningsfejl og for følgeskader overtager vi intet ansvar. Hvis de her anførte henvisninger til monteringen ikke skulle passe, kontakt din Blaupunktspesialforretning, bilfabrikanten eller vor telefon-hotline. Ved montering af en forstærker eller et Multi CDapparat skal apparaternes stel først tilsluttes, før stikkene for tilslutningerne Line-In eller Line-Out sættes i. Eksterne enheders stelforbindelse må ikke sluttet til bilradioens stelforbindelse (kabinet). · Zalenie od marki i modelu, konstrukcja Pastwa pojazdu moe niekiedy odbiega od podanego tu opisu.

Firma Blaupunkt wyklucza wszelk odpowiedzialno za szkody spowodowane bldnym montaem i instalacj urzdzienia. W przypadku, gdy podane tu wskazówki nie znajduj zastosowania w Pastwa pojedzie, prosimy skontaktowa si z autoryzowanym sprzedawc produków Blaupunkt, producentem pojazdu lub zadzwoni do naszej infolinii. Przy montau wzmacniacza lub zmieniarki nalej koniecznie najpierw podlczy masy urzuze, zanim polczona zostanie wtyczka do gniazda Line-In lub Line-Out. Do masy radioodtwarzacza (obudowa) nie wolno podlcza masy obcych urzuze. 385 Návod k montáži · Asennusohjeet CZ Návod k montáži

Bezpecnostní pokyny Bhem montáže a pipojení dodržujte prosím následující bezpecnostní pokyny.

SF Asennusohjeet Turvallisuusohjeita Noudata asennus- ja liittäintötöiden yhteydessä seuraavia turvallisuusohjeita. · Odpojte záporný pól akumulátoru! Pitom dodržujte bezpecnostní pokyny výrobce vozidla. · Irrota akun miinusnapakytkenntä! Noudata ajoneuvon valmistajan antamia turvaohjeita. · Reikiä poratessasi huolehdii siitä, etteivät ajoneuvon osat vahingoitu. · Pi vrtání otvor dbejte na to, abyste neposkodili zádné díly vozidla.

· Plus- ja miinusaapelin poikkipinta ei saa alittaa 1,5 mm<sup>2</sup> mittaa. · Prez kabelu plus a minus pólmu musí být minimáln 1,5 mm<sup>2</sup>. · Älä kytke auton pistoketta radioon! Saat autoosi sopiaan BLAUPUNKT-kauppialaasi. sovitinjohdon · Konektory od vozidla nepipojujte k rádiu! Adaptéravý kabel potebný pro vase vozidlo obdržíte ve specializované prodejn BLAUPUNKT. · Autosi saattaa poiketa tästä kuvauksesta. Emme vastaa asennus- tai kytkentävirheiden aiheuttamista vaurioista tai niiden seurauskisista. Jos tässä annetut ohjeet eivät soveltu asennustilanteeseen, käänny Blaupunkt-kauppiaan, ajoneuvon valmistajan tai puhelinpalvelumme puoleen. @@@@ @@@@ @@@@Pi montáži zesilovace nebo mnic, pedtím nez budou konektory zapojeny do zdíek Line-in nebo Line-out, musí být nejprve bezpodmínecn pipojeny kostry pístroj. Kostry jiných pístroj nesmí být pipojeny na kostru autorádia (kryt pístroje). 386 Beszerelési útmutató · HU Beszerelési útmutató Biztonsági elírások A beszerelési és csatlakoztatási invezetek során kérjük, tartsa be az alábbi biztonsági utasításokat: RU , , .

· Csatlakoztassa le az akkumulátor negatív kábelét! Ennek végrehajtása közben vegye figyelembe a járm gyártójának biztonsági utasításait. · ! - . · Ügyeljen arra, hogy a furatok készítésekor ne rongálja meg a járm alkatrészeit. · A pozitív és negatív kábelek keresztmetszete ne legyen kisebb, mint 1,5 mm<sup>2</sup>. · , . Ne használja a járm csatlakozóit a rádióhoz! @@@@ @@@@ @@@@ - , . · Ersít vagy CD-váltó beszerelésekor elbb a készülék test csatlakozásait kell csatlakoztatni, majd csak ezután a bemeneti és kimeneti csatlakozódugókat. A küls eszközök test csatlakozásait nem lehet az autós hangsugárzó rendszer testhez (házhöz) csatlakoztatni. , , , Blaupunkt .

(.) 387 GR , μ : · μ μ! , · μ μ . · μ μ 1,5 mm<sup>2</sup>. · M μ μ μ ! μ μ BLAUPUNKT.  
· μ μ . μ μ . μ μ μ μ , μ , μ μ Blaupunkt, μ μ μμ , μ . μ μ μ (.)

388 Mitgelieferte Montage- und Anschlussteile Supplied Mounting Hardware Materiel de montage fourni Componenti di fissaggio comprese nella fornitura Megeleverde montagematerialen Medföljande monteringsdetaljer Ferretería de montaje suministrada Elementos de fixação fornecidos Medleverede monterings- og tilslutningsdele Dolczone czci montaue i polczeniowe Pilozéné montázní díly a pípojn svorky Toimitukseen kuuluvat asennus- ja kytkentäosat A csomag részét képez szerelkeret μ Toronto 400 BT (7 649 035 110) Toronto 400 BT (7 649 036 010) 389 Als Sonderzubehör erhältlich Available as an optional accessory Disponibile en option Reperibili come accessori extra Als speciale accessoire verkrijgbaar Tillval De venta como accesorios especiales Disponíveis como acessórios opcionais Fås som specialtilbehör Dostpne jako wyposaenie dodatkowe Jako zvláštní píslusensví mzete obdržet Saatavana lisätarvikkeena Kiegészít tartozékként beszerezhet Einbausätze · Installation kits · Kits de montage · Set di montaggio · Inbouwsets · Monteringssatser · Juegos de montaje · Kits de montagem · Indbygningssæt · Zestawy montaue · Montázní soupravy · Asennussarjat · Beépít-készlet · 7 608 . . . . . Preamp./Sub./Center - out cable 7 607 001 512 A 7 607 621 ..

. 390 1.



You're reading an excerpt. Click here to read official BLAUPUNKT  
TORONTO 400 BT user guide  
<http://yourpdfguides.com/dref/3311063>