



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BLAUPUNKT VERONA RCR 45. You'll find the answers to all your questions on the BLAUPUNKT VERONA RCR 45 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BLAUPUNKT VERONA RCR 45
User guide BLAUPUNKT VERONA RCR 45
Operating instructions BLAUPUNKT VERONA RCR 45
Instructions for use BLAUPUNKT VERONA RCR 45
Instruction manual BLAUPUNKT VERONA RCR 45

Radio / Cassette

Verona RCR 45

Operating instructions



 **BLAUPUNKT**
Bosch Gruppe



[You're reading an excerpt. Click here to read official BLAUPUNKT VERONA RCR 45 user guide](http://yourpdfguides.com/dref/3676544)
<http://yourpdfguides.com/dref/3676544>

Manual abstract:

.....
.....
.....
..... 21 Precautions ...

.....
.....
.....
.....

.....
21 Traffic safety

.....
.....

.....
.....
.....

. 21 Installation/Connection

.....
.....

.. 22 Radio operation with RDS ...
..... 24 AF - Alternative frequency ..

.....
.....

... 24 REG - regional programme ..

.....

..... 24 Selecting a waveband ...

.....
.....
.....

... 24 Automatic tuning

.....
.....
.....

..... 24 Manual tuning

.....
.....
.....

.. @@ 25 Changing the memory bank (FM) ...

.....

. 25 Storing stations

.....
.....
.....

..... @@ 26 Recalling stored stations ..

.....
.....
.....

. 26 Tape operation

.....
.....
.....

. 28 Inserting a tape

27 Switching the warning beep off

..... 27 Automatic seek tuning start

.....

.... 28 Adjusting the volume for traffic announcements and the warning beep .

28 FRANÇAIS KeyCard theft-protection system 22 Receiving traffic programme stations with RDS-EON

.....

. 27 ENGLISH Scanning stored stations with Preset Scan

.....

.....

.....

..... 26 Scanning stations with Radio-Scan

.. 26 Selecting the seek tuning sensitivity ...

.. 26 Switching from stereo to mono (FM) ...

.. 27 DEUTSCH Contents Short instructions 1 On Off Volume 2 LD Loudness - When listening at a low level, the Loudness function creates a more natural sound by boosting the low frequency range. To switch the Loudness on/off: Press LD. For more information, read chapter "DSC programming". 3 AUD/GEO AUD To adjust the treble and bass frequencies with the rocker switch. GEO To adjust the balance (left/right) and fader (front/rear) with the rocker switch. This unit can also be switched on and off with the KeyCard B. Also, when being connected correctly, you may turn the radio on and off via the ignition of your car. Use one of the following possibilities to continue operating the set when the ignition is switched off: a) Switch on/off with knob 1.

b) Remove/insert the KeyCard. c) Press AUD 3. When turning on the unit with the KeyCard or by pressing the AUD button, the system will start to play with the volume adjusted last. When operating the unit with the ignition being switched off, the system will automatically shut down after one hour in order to avoid that the battery goes flat. Fader front Fader rear Balance left Balance right Treble + Treble Bass Bass + To alter a setting, press AUD or GEO and then change the value with the rocker switch. The adjusted value is indicated in the display. The last setting will be stored automatically. To finish the setting: Press AUD or GEO. If the setting remains unchanged within 8 seconds, the display will switch back to the previous condition. 18 4 DSC (Direct Software Control) Use the DSC function to customise certain programmable, basic settings to suit your personal needs and preferences.

See chapter "DSC programming" for more information. 5 AF - Alternative frequency during RDS operation When "AF" lights up in the display, the radio will automatically search for a frequency offering better reception of the same RDS programme. To switch AF on/off: Press AF briefly. 6 REG REG ON / REG OFF With REG ON the system will only switch to a better alternative frequency if the latter belongs to a linked station offering the same regional programme (see "REG - regional programme). To switch REG on or off: Press REG until "REG ON" or "REG OFF" appears in the display (BEEP tone).

8 Cassette removal Press . 9 Cassette loading slot Insert tape (side A or 1 up; the open side facing to the right). Tape operation: TR1-PLAY - Side 1 (or 2) 19 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS ITALIANO 7 lo/dx To alter the automatic seek tuning sensitivity. If "lo" is displayed, the radio will only pick up strong, local stations (low sensitivity). If "lo" does not light up, the radio will also pick up weaker, distant stations (high sensitivity).

To switch over: Press lo or dx briefly. For more information, see chapter "DSC programming". : Display Radio operation: NDR1 NDS - Station abbreviation or frequency FM - Waveband T - Memory bank (I, II, T) 5 - Preset button (1 - 6) - Stereo lo - Seek tuning sensitivity AF - Alternative RDS frequency TP - Traffic programme identifier TA - Priority for traffic programme stations LD - Loudness FRANÇAIS ENGLISH DEUTSCH ; PROG button/Fast winding To switch to the other side of the cassette tape: Press both buttons simultaneously. The display shows TR1-PLAY or TR2-PLAY. = PS Preset Scan (sampling all stations stored on the preset buttons): Press PS briefly. > 1, 2, 3, 4, 5, 6 - preset buttons You can store six stations on each FM memory bank (I, II, T). To store a station: Press button during radio operation and hold down until the radio resumes play. To recall a station: Select the waveband and on FM also the desired memory bank (press FMT button as many times as required). Then press the corresponding preset button briefly. ? TA (priority for traffic announcements) If "TA" is displayed, the system will play traffic stations only.

TA on/off: Press button. @ M-L To select the MW or LW waveband. Press button as many times until the desired band is adjusted. A FMT - FM, Travelstore To switch between the FM memory banks I, II and "T" (Travelstore). To switch over: Press FMT as many times until the desired bank is indicated in the display. To store the six most powerful stations automatically with Travelstore: Store: Press FMT; seek tuning starts. Recall: Press FMT as many times until the display shows "T". Then briefly press one of the preset buttons 1, 2, 3, 4, 5, or 6. Fast winding FR : Fast rewind; stop by pressing FF. FF : Fast forward; stop by pressing FR.

< SC Radio operation Scan (sampling all stations to be received): Press SC briefly. 20 B KeyCard theft-protection system To operate the set it is necessary that you have inserted the KeyCard. C Rocker switch Seek tuning Precautions Before starting to use your new car radio, please read the information on "Traffic safety" and "KeyCard theft-protection System" carefully. KeyCard For this, introduce the KeyCard into the slot with the contact area showing up (KeyCard tongue pulled out). Read also the information under "KeyCard theft-protection system".

Flashing KeyCard tongue When the car radio is turned off, the KeyCard tongue can be switched to flash for extra anti-theft protection. This feature can be switched on and off via DSC - LED. // Up Down Up/down in short intervals ("AF" must be switched off) To scroll through the broadcasting network when "AF" is activated (e.g. NDR1 .

.. NDR4). 21 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS Extra functions: In the DSC mode: Select and programme DSC functions.



[You're reading an excerpt. Click here to read official BLAUPUNKT](http://yourpdfguides.com/dref/3676544)

[VERONA RCR 45 user guide](http://yourpdfguides.com/dref/3676544)

<http://yourpdfguides.com/dref/3676544>

As the driver of a motor vehicle, it is your responsibility to pay attention to the traffic situation at all times. Never use your car radio in a way that could distract you. Please keep in mind that you travel a distance of 14 m per second at a speed of only 50 km/h. Should the traffic situation become particularly demanding, we advise you not to use the radio. Always make sure that you are still able to hear any warning signals coming from outside of the vehicle, such as police or fire engine sirens, so that you can react accordingly. Therefore, you should always select a moderate volume for playing your car radio while you are driving.

ITALIANO FRANÇAIS Traffic safety ENGLISH DEUTSCH Important notes KeyCard theft-protection system Installation/Connection If you would like to install this equipment yourself or add any new components, please read the enclosed installation and connection instructions carefully. Do not connect the loudspeaker outputs to ground! Use only the accessory and replacement parts approved by Blaupunkt. This car radio is supplied with one KeyCard as standard. However, the unit can also be operated with a second card. If you have lost or damaged your KeyCard, you can buy a new one from your specialised dealer. When using two KeyCards, you can individually store the following functions: Bass, treble, balance and fader settings, assignments of preset buttons, Loudness, TA (traffic announcement volume), BEEP volume. In addition to this, the settings activated before switching the radio off, such as the waveband, station, TA priority, Loudness, AF, REG ON/OFF and seek tuning sensitivity, will also remain stored. This ensures that the basic settings you have programmed will automatically be activated as soon as you have inserted your KeyCard. After approximately 10 seconds, the display will show "TURN OFF". Now turn off the set.

When inserting a card of a different kind (like for example a credit card), the display will show "WRONG KC" for approximately 2 seconds. Remove the wrong card and turn off the set. Do not make further adjustments until you have a correct KeyCard available. Removing the KeyCard Never pull out the KeyCard directly. · First press the KeyCard in.

This releases the card and puts it in the proper position for being removed. · Now you can pull it out. "Defining" a second KeyCard/ Replacing a KeyCard While operating the unit with the first KeyCard, you can "define" a second one to be also used with the set: · Insert the first KeyCard and turn on the set. · Press the DSC button and select "LEARN KC" with /. · The car radio is now ready for operation.

· In this case please do not go on operating the set. · "LED 1" must be adjusted in the DSC mode. · Press the M-L button within 2 seconds. The radio pass data will move through the display several times. · Now you can also use the new KeyCard for operating your unit. A maximum of two cards can be used per set. When trying to "define" a third one, the he FMT button as many times until the desired memory bank lights up in the display. Storing stations On FM, you can store six stations on the preset buttons 1 to 6 for each of the memory banks I, II and T. On MW/LW, you can store six stations each. · Now the station has been stored.

· NDR1 ... This function is particularly convenient on longer trips. · Press the FMT button for more than 2 seconds. · Select the waveband. · To start Preset Scan: · Press PS. The stations will be played for approximately 8 seconds each. · The unit will tune in the station listened to before starting the scan. Selecting the seek tuning sensitivity You can alter the automatic seek tuning sensitivity.

If "lo" is displayed, the radio will only pick up strong, local stations (low sensitivity). If "lo" does not light up, the radio will also pick up weaker, distant stations (high sensitivity). To switch over, · Press lo or dx. On top of this, the sensitivity levels can be adjusted separately for lo and dx (see chapter "DSC programming"). Recalling stored stations You can recall any stored station at the touch of a button.

· Select the waveband by pressing FMT or M-L. On FM, also choose the corresponding memory bank by pressing the FMT button as many times until the desired bank appears in the display. · Press the corresponding preset button briefly to recall the station. Scanning stations with Radio-Scan Beginning with the station currently tuned in, you can scan the waveband. The radio will play each station for 8 seconds.

To start the scan: · Press SC briefly. 26 Switching from stereo to mono (FM) If reception is poor, you may get better sound quality by switching to mono: · Press the lo button for approximately 2 seconds. With mono playback, the stereo sign will disappear from the display. Each time the radio is switched on, stereo playback is activated. The unit will automatically switch to mono if the received signal is not strong enough for stereo playback. · 27 PORTUGUÊS If the priority for traffic announcement programmes is activated, "TA" will light up in the display. To switch the priority on or off: · Press the TA button. Press TA. "TA" will disappear from the display. ESPAÑOL Traffic announcement priority on/off a preset button which has a traffic programme station allocated to it.

Alternatively: b) Switch off the priority for traffic announcements: · SVENSKA Many FM broadcasters offer traffic messages for their service area at regular intervals. All traffic programme stations transmit a special carrier signal alongside their programmes, which is decoded by your car radio. If this signal is identified, "TP" will appear in the display (Traffic Programme). In addition to these, there are also stations which do not actually transmit traffic programmes themselves, but by using RDSEON they offer the possibility to receive the traffic messages broadcast by another traffic programme station in the same radio network. If you listen to one of these stations (e.g. NDR3), "TP" will appear in the display provided the priority for traffic programme stations has been activated, i.e. "TA" must be displayed. If a traffic announcement is broadcast, the radio will automatically switch to the linked traffic programme station (in this case, NDR2) for the duration of the message and return to the original programme (NDR3) afterwards.

Warning beep If you leave the reception area of the traffic programme station currently tuned into, you will hear a warning beep after approximately 30 seconds. This alarm tone will also be released when pressing a preset button which has no traffic programme allocated to it. Switching the warning beep off a) Tune into another station offering traffic information: · Press the rocker switch or FRANÇAIS NEDERLANDS ITALIANO ENGLISH When pressing TA while a message is being broadcast, this message will be interrupted.



[You're reading an excerpt. Click here to read official BLAUPUNKT VERONA RCR 45 user guide](http://yourpdfguides.com/dref/3676544)
<http://yourpdfguides.com/dref/3676544>

The unit will then switch back to the previous condition. The priority for other traffic messages remains active.

DEUTSCH Receiving traffic programme stations with RDS-EON Tape operation Automatic seek tuning start (tape operation) When leaving the reception area of the tuned in traffic programme station while listening to a tape, the system will automatically start searching for a new TA programme. If no such station is found within approximately 30 seconds, tape operation will be stopped and a warning beep will sound. To switch the warning beep off, proceed as described above. Inserting a tape · Turn on the set. Insert a tape.

Stopping Fast Forward operation · Press FR. Fast Rewind · Press FR. At the beginning of the tape, the mechanism will automatically start playback. Stopping

Fast Rewind operation · Press FF. To switch to the other side of the cassette tape: Press both buttons simultaneously. The display shows TR1-PLAY or TR2-PLAY. Insert the tape with side A or 1 showing up, the open side facing to the right. = Press to eject the tape. Adjusting the volume for traffic announcements and the warning beep This volume was preset at the factory. You can alter the value using the DSC function (see "DSC programming, TA").

The tape will be played in the direction used last. "TR1-PLAY" in the display means that track 1 or A is being played. Removing a tape · Press . The cassette will eject. Fast winding FR : Fast rewind; stop by pressing FF. FF : Fast forward; stop by pressing FR. Fast Forward/Rewind Fast Forward · Press FF. @@@@ In this case check the condition of the cassette tape. Sometimes it helps to rewind it completely. LED (code) You can adjust the LED B to flash for extra anti-theft protection.

LED 1 - LED always flashes when the unit has been switched off via the ignition. / Select function Adjust value Adjust value + LED 0 - No flashing. LOUD Loudness - When listening at a low level, the Loudness function creates a more natural sound by boosting the low frequency range. LOUD 1 - Low boost LOUD 6 - Max. boost 29 TA VOL PORTUGUÊS To adjust the traffic announcement volume from between 1 to 9.

The message will then come through at this volume. (1 = low) ESPAÑOL SVENSKA NEDERLANDS ITALIANO DSC (Direct Software Control) allows you to customise certain programmable, basic settings to suit your personal needs and preferences and then store them. The basic settings for this audio equipment were made at the factory. In the following you can find an overview of these settings, so that you can always reset to these if desired. If you wish to alter any of the programming, · press DSC.

The display will show you the adjusted condition. Use the rocker switch to select and adjust the functions described in the following. BEEP Confirmation tone for all functions which require a button to be pressed for more than 2 seconds. The volume can be adjusted from between 0 to 9. (0 = off) Each alteration of this value is confirmed by a beep tone of the corresponding volume. FRANÇAIS ENGLISH DEUTSCH DSC programming Appendix RM (Radio Monitor) With RM-ON, the unit will automatically switch to the tuner whenever the cassette is fast winding. RM-OFF - The function is switched off. (lo) To adjust the seek tuning sensitivity for local reception. LOCAL 1 - high sensitivity LOCAL 3 - low sensitivity DIS (dx) To adjust the seek tuning sensitivity for distant reception. DIS.

1- high sensitivity DIS. 3- low sensitivity LEARN KC To "define" a second KeyCard for use with the set. Please read the information under "KeyCard theft-protection system". To quit the DSC programming mode and store the adjustment: · Press DSC. If the setting remains unchanged within 8 seconds, the system will automatically store the last adjustment. The display will switch back to the previous condition. Care notes Mechanism/cassette tapes To avoid possible problems, you should not use cassette tapes longer than 60 or 90 minutes (C60/C90). Store your tapes in a cool place away from dirt, dust and temperatures exceeding 50 ° Celsius. Allow very cold tapes to warm up before playing them in order to avoid uneven tape transport. After approximately 100 hours of use, dust particles collected on the playback head or roller may lead to tape run problems and sound distortions.

Use a head cleaning tape to remove normal dirt build-up. For tougher cases, use a cotton swab (Q-Tip) soaked with alcohol. Do not attempt to clean by inserting a hard object into the player! LOCAL Overview of the DSC factory settings TA VOL BEEP LED (Code) LOUD RM LOCAL DIS : : : : : 4 3 1 4 OFF 1 1 30 Specifications Amplifier Output power: 4 x 6 W RMS power acc. to DIN 45324/3.1 or 4 x 8 W max.

power acc. to DIN 45324/3.2 FM sensitivity: FM frequency response: Tape player Frequency response: 35 - 16 000 Hz 35 - 16 000 Hz Subject to modifications! 31 PORTUGUÊS ESPAÑOL SVENSKA NEDERLANDS 1.0 µV at 26 dB signal-to-noise ratio ITALIANO Tuner Wavebands FM : MW : LW : 87.5 108 MHz 531 1602 kHz 153 279 kHz FRANÇAIS ENGLISH DEUTSCH Bosch Gruppe 2/96 Pf K7/VKD 8 622 400 492 17 PORTUGUÊS Blaupunkt-Werke GmbH ESPAÑOL SVENSKA NEDERLANDS ITALIANO FRANÇAIS ENGLISH .



[You're reading an excerpt. Click here to read official BLAUPUNKT VERONA RCR 45 user guide](http://yourpdfguides.com/dref/3676544)
<http://yourpdfguides.com/dref/3676544>