



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH AHS 48-16. You'll find the answers to all your questions on the BOSCH AHS 48-16 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual BOSCH AHS 48-16
User guide BOSCH AHS 48-16
Operating instructions BOSCH AHS 48-16
Instructions for use BOSCH AHS 48-16
Instruction manual BOSCH AHS 48-16

Bedienungsanleitung
Operating Instructions
Instructions d'emploi
Instrucciones de servicio
Manual de instruções
Istruzioni d'uso
Gebruiksaanwijzing
Betjeningsvejledning
Bruksanvisning
Brukerveiledningen
Käyttöohje
Οδηγία χειρισμού
Kullanım kılavuzu

Deutsch
English
Français
Español
Português
Italiano
Nederlands
Dansk
Svenska
Norsk
Suomi
Ελληνικά
Türkçe



AHS 4-16
AHS 42-16
AHS 48-16
AHS 52-16
AHS 63-16 C

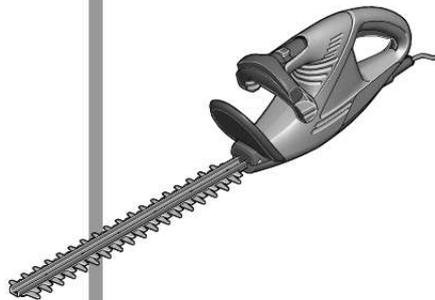

[You're reading an excerpt. Click here to read official BOSCH AHS 48-16 user guide](http://yourpdfguides.com/dref/2286445)

<http://yourpdfguides.com/dref/2286445>

Manual abstract:

Operation of the hedgecutter can cause serious injuries, if not used as intended. When using electric tools, basic safety precautions including the following should always be followed, to reduce the risk of fire, electric shock and personal injury. explanation of symbols: Read instruction manual. Do not use the hedgecutter in the rain or leave it outdoors when it is raining. Switch off and remove plug from mains before adjusting, cleaning or if the cable is entangled or if the cable is cut or damaged and before leaving the hedgecutter unattended for any period. Other persons and animals should remain at a distance of 3 metres or more when the hedgecutter is being used. never grasp the blade of the hedgecutter. Children or persons unfamiliar with these instructions must not operate the hedgecutter. Local regulations may restrict the age of the operator. Never cut a hedge while people, especially children or pets, are nearby. The operator or user is responsible for accidents or hazards occurring to other people or their property. Do not operate the hedgecutter when barefoot or wearing open sandals, always wear substantial footwear and long trousers. @@@@Do not operate with a damaged or excessively worn cutting device. S Check cable for damage before starting work and replace if necessary. Keep cable away from heat, oil and sharp edges.

S Know how to stop the hedgecutter quickly in an emergency. S Cut a hedge only in daylight or in good artificial light. S Never operate the hedgecutter with defective guards or without the guard in place. S Always ensure all handles and guards supplied are fitted when using the hedgecutter. Never attempt to use an incomplete hedgecutter or one with an unauthorised modification.

S While operating the hedgecutter always be sure of a safe and secure operating position at all times, especially when using steps or a ladder. S Always be aware of your surroundings and stay alert for possible hazards that you may not hear whilst operating the hedgecutter. S Remove the plug from the socket: before checking, clearing a blockage or working on the hedgecutter. after striking a foreign object, inspect the hedgecutter for damage and make repairs as necessary. if the hedgecutter starts to vibrate abnormally check immediately. S Keep all nuts, bolts and screws tight to ensure that the hedgecutter is always in a safe working condition. S The hedgecutter should be stored in a dry, high or locked up place out of the reach of children. s Replace worn or damaged parts for safety. S Do not attempt to repair the hedgecutter unless you are qualified to do so. S Ensure replacement parts fitted are Bosch approved.

Hedgecutter Part number (TYP) Rated power No-load stroke rate Cutting length Weight Protection class AHS 4-16 3 600 H47 0. Switch off, remove plug from mains before adjusting, cleaning or if cable is cut, damaged or entangled. The blades continue to move for a few seconds after the hedgecutter is switched off. caution! Do not touch the moving blades. @@@@Always check your RCD every time you use it. @@@@Fixing means for the connection leads must be used. @@@@It is important that you read these instructions carefully. @@@@ check that covers and guards are undamaged and correctly fitted. Carry out necessary maintenance or repairs before using. @@@@ Fit handle guard as shown.

Hold the hedgecutter away from yourself using both hands. stand in a secure and stable position. @@@@ cut stems upto 16 mm in thickness. @@The double edge of the cutting blade enables cutting to either direction, or with a side to side motion. Cut the sides of the hedge first, then the top.

To keep the sides flat, cutting upwards with the growth is recommended. Younger stems tend to move outwards when cutting them from top to bottom, resulting in shallow patches or holes in the hedge. To reach a level finish, fasten a piece of string along the length of the hedge at the required height and use as an alignment guide. Cut the hedge just above the string. Take care to avoid cutting into objects such as wire, which could cause damage to the cutting blades and the drive.

Recommended cutting/trimming times: Cut hedges with deciduous leaves in June and October. Every six weeks from May onwards. Shaping hedges should be cut to achieve a form as shown in figure. Before any work on the machine itself, pull the mains plug. Wear gloves when handling or cleaning the cutting blade. Always clean the cutting blade after operation and lubricate with protective spray. During longer cutting jobs, we recommend periodically lubricating the cutting blade with protective spray. Ensure that the blade is covered with the blade guard 7 supplied. Clean the exterior of the machine thoroughly using a soft brush and cloth. Store the hedgecutter in a secure, dry place out of the reach of children.

Do not place other objects on top of the machine. The following table gives checks and actions that you can perform if your machine does not operate correctly. If these do not identify/remedy the problem, contact your service agent. @@@@Exploded views and information on spare parts can be found under: www. Typically the A-weighted noise level of the product is: sound pressure level 80 dB (A); sound power level 94 dB (A). We declare under our sole responsibility, that this product is in conformity with the following standards or standardized documents: EN 774, EN 50 144 according to the provisions of the directives 89/336/EEC, 98/37/EC, 2000/14/EC. 2000/14/EC: The guaranteed sound power level LWA is lower than 96 dB (A). Subject to change without notice Hänvisning till produkter som inte saluförs i Storbritannien: OBS: För din säkerhet är det viktigt att på maskinen monterad kontakt 6 ansluts till skarvsladden 9, som bilden visar. .



[You're reading an excerpt. Click here to read official BOSCH AHS 48-16 user guide](http://yourpdfguides.com/dref/2286445)

<http://yourpdfguides.com/dref/2286445>