



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH AHS 6000 PRO-T. You'll find the answers to all your questions on the BOSCH AHS 6000 PRO-T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual BOSCH AHS 6000 PRO-T  
User guide BOSCH AHS 6000 PRO-T  
Operating instructions BOSCH AHS 6000 PRO-T  
Instructions for use BOSCH AHS 6000 PRO-T  
Instruction manual BOSCH AHS 6000 PRO-T

Bedienungsanleitung  
Operating instructions  
Instructions d'emploi  
Instrucciones de servicio  
Manual de instruções  
Istruzioni d'uso  
Gebruiksaanwijzing  
Betjeningsvejledning  
Bruksanvisning  
Brukerveiledningen  
Käyttöohje  
Οδηγία χειρισμού  
Kullanım kılavuzu



**AHS 400 - 24T**  
**AHS 480 - 24T**  
**AHS 550 - 24ST**  
**AHS 600 - 24ST**  
**AHS 650 - 24ST**  
**AHS 6000 PRO-T**  
**AHS 7000 PRO-T**

Deutsch  
English  
Français  
Español  
Português  
Italiano  
Nederlands  
Dansk  
Svenska  
Norsk  
Suomi  
Ελληνικά  
Türkçe

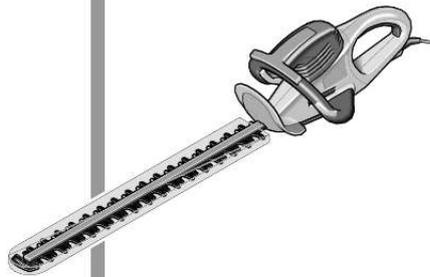

[You're reading an excerpt. Click here to read official BOSCH AHS 6000 PRO-T user guide](http://yourpdfguides.com/dref/2286509)

<http://yourpdfguides.com/dref/2286509>

**Manual abstract:**

Please keep the instructions safe for later use. Operation of the hedgecutter can cause serious injuries, if not used as intended. When using electric tools, basic safety precautions including the following should always be followed, to reduce the risk of fire, electric shock and personal injury. explanation of symbols: Read instruction manual. Do not use the hedgecutter in the rain or leave it outdoors when it is raining. Switch off and remove plug from mains before adjusting, cleaning or if the cable is entangled or if the cable is cut or damaged and before leaving the hedgecutter unattended for any period. Other persons and animals should remain at a distance of 3 metres or more when the machine is being used. never grasp the blade of the hedgecutter. Children or persons unfamiliar with these instructions must not operate the hedgecutter. Local regulations may restrict the age of the operator.

Never cut a hedge while people, especially children or pets, are nearby. The operator or user is responsible for accidents or hazards occurring to other people or their property. Do not operate the hedgecutter when barefoot or wearing open sandals, always wear substantial footwear and long trousers.

Do not operate with a damaged or excessively worn cutting device. S Check cable for damage before starting work and replace if necessary.

Keep cable away from heat, oil and sharp edges. S Know how to stop the hedgecutter quickly in an emergency. S Cut a hedge only in daylight or in good artificial light. S Never operate the hedgecutter with defective guards or without the guard in place. S Always ensure all handles and guards supplied are fitted when using the hedgecutter.

Never attempt to use an incomplete hedgecutter or one with an unauthorised modification. S While operating the hedgecutter always be sure of a safe and secure operating position at all times, especially when using steps or a ladder. S Always be aware of your surroundings and stay alert for possible hazards that you may not hear whilst operating the hedgecutter. S Remove the plug from the socket: before checking, clearing a blockage or working on the hedgecutter. after striking a foreign object, inspect the hedgecutter for damage and make repairs as necessary. if the hedgecutter starts to vibrate abnormally check immediately. S Keep all nuts, bolts and screws tight to ensure that the hedgecutter is always in a safe working condition. S The hedgecutter should be stored in a dry, high or locked up place out of the reach of children. s Replace worn or damaged parts for safety. S Do not attempt to repair the machine unless you are qualified to do so.

S Ensure replacement parts fitted are Bosch approved. Hedgecutter Part number Rated power No-load stroke rate Blade spacing Cutting length Weight Protection class Hedgecutter Part number Rated power No-load stroke rate Blade spacing Cutting length Weight Protection class AHS 400 - 24T 3 600 H48 0. 1 2 3 4 5 6 7 8 Cutting blade Front handle guard Front handle switch levers Ventilation slots Rear handle with switch lever Mains plug\*\* Blade guard Serial Number This manual gives instructions on the correct assembly and safe use of your hedgecutter. It is important that you read these instructions carefully. Carefully remove the machine from its packaging and check for complete contents: Hedgecutter Blade guard Operating instructions When parts are missing or damaged, please contact your dealer. @@@@ caution! Do not touch the moving blades. @@@@Always check your RCD every time you use it. @@@@Fixing means for the connection leads must be used. @@@@Cut the sides of the hedge first, then the top.

@@@@Cut the hedge just above the string.

@@@@Every six weeks from May onwards. @@@@@Before any work on the machine itself, pull the mains plug. Note: To ensure long and reliable service, carry out the following maintenance regularly. Check for obvious defects such as loose, dislodged or damaged blade, loose fixings and worn or damaged components. check that covers and guards are undamaged and correctly fitted.

Carry out necessary maintenance or repairs before using. If the hedgecutter should happen to fail despite the care taken in manufacturing and testing, repair should be carried out by an authorized customer service agent for Bosch garden products. For all correspondence and spare parts orders, always include the 10-digit part number (TYP) from the nameplate of the machine! Hold the hedgecutter away from yourself using both hands. stand in a secure and stable position. Position the extension cord over your shoulder to the rear and ensure that the cord is behind you at all times during cutting.

Never place the cable over the hedge, where it could easily be cut by the blades. Before any work on the machine itself, pull the mains plug. Wear gloves when handling or cleaning the cutting blade. Always clean the cutting blade after operation and lubricate with protective spray. During longer cutting jobs, we recommend periodically lubricating the cutting blade with protective spray. Ensure that the blade is covered with the blade guard 7 supplied. Clean the exterior of the machine thoroughly using a soft brush and cloth. Store the hedgecutter in a secure, dry place out of the reach of children. Do not place other objects on top of the machine. The following table gives checks and actions that you can perform if your machine does not operate correctly.

If these do not identify/remedy the problem, contact your service agent. @@@@@Exploded views and information on spare parts can be found under: www. Typically the A-weighted noise level of the product is: sound pressure level 82 dB (A) (AHS 400 - 24T / 480 - 24T / 550 - 24ST / 600 - 24ST / 650 - 24ST), 85 dB (A) (AHS 6000/7000 PRO-T); sound power level 96 dB (A) (AHS 400 - 24T / 480 - 24T / 550 - 24ST / 600 - 24ST / 650 - 24ST), 99 dB (A) (AHS 6000/7000 PRO-T). We declare under our sole responsibility, that this product is in conformity with the following standards or standardized documents: EN 774, EN 50 144 according to the provisions of the directives 89/336/EEC, 98/37/EC, 2000/14/EC. 2000/14/EC: The guaranteed sound power level LWA is lower than 98 dB (A) (AHS 400 - 24T / 480 - 24T / 550 - 24ST / 600 - 24ST / 650 - 24ST), 100 dB (A) (AHS 6000/7000 PRO-T). Subject to change without notice Hänvisning till produkter som inte saluförs i Storbritannien: OBS: För din säkerhet är det viktigt att på maskinen monterad kontakt 6 ansluts till skarvsladden 9, som bilden visar. .



**[You're reading an excerpt. Click here to read official BOSCH AHS 6000 PRO-T user guide](http://yourpdfguides.com/dref/2286509)**  
<http://yourpdfguides.com/dref/2286509>