



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH AL 1404. You'll find the answers to all your questions on the BOSCH AL 1404 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH AL 1404  
User guide BOSCH AL 1404  
Operating instructions BOSCH AL 1404  
Instructions for use BOSCH AL 1404  
Instruction manual BOSCH AL 1404

Bedienungsanleitung  
Operating instructions  
Instructions d'emploi  
Instrucciones de servicio  
Manual de instruções  
Istruzioni d'uso  
Gebruiksaanwijzing  
Betjeningsvejledning  
Bruksanvisning  
Brukerveiledningen  
Käyttöohje  
Οδηγία χειρισμού  
Kullanım kılavuzu

Deutsch  
English  
Français  
Español  
Português  
Italiano  
Nederlands  
Dansk  
Svenska  
Norsk  
Suomi  
Ελληνικά  
Türkçe



AL 1404  
AL 2404



[You're reading an excerpt. Click here to read official BOSCH AL 1404 user guide](http://yourpdfguides.com/dref/1306002)

<http://yourpdfguides.com/dref/1306002>

**Manual abstract:**

*Do not charge other batteries. The battery charger is suitable only for charging Bosch NiCd/NiMH batteries with the voltages listed in the technical data. Before each use, check the battery charger, cable and plug. Have repairs performed only by a qualified technician and only using original spare parts. Do not operate the battery charger on easily inflammable surfaces (e. The heating of the battery charger during the charging process can pose a fire hazard. Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. 0 Ah Weight according to EPTA-Procedure 01/2003 Protection class AL 1404 2 607 225 0. The trade names of individual battery chargers may vary.*

*Battery chargers marked with 230 V can also be operated with 220 V. 5 charging and discharging cycles.*

*Important: If for any reason the moulded plug is removed from the cable of this power tool, it must be disposed of safely. Exploded views and information on spare parts can be found under: www. By inserting and removing the battery several times) or replace the battery Battery defective Mains plug of battery charger not plugged in (properly) Replace the battery Insert mains plug (fully) into the socket outlet Battery charge indicator 3 does not light up Battery not inserted (prop- Insert battery (fully) into erly) the battery charging compartment Socket outlet, mains cable Check the mains voltage; or battery charger defec- have the battery charger tive checked by an authorised after-sales service agent for Bosch power tools If the battery charger should fail despite the care taken in manufacturing and testing procedures, repair should be carried out by an authorised after-sales service agent for Bosch power tools.*

*In all correspondence and spare parts orders, please always include the 10-digit article number on the type plate of the battery charger. Subject to change without notice. .*



[You're reading an excerpt. Click here to read official BOSCH AL 1404 user guide](http://yourpdfguides.com/dref/1306002)  
<http://yourpdfguides.com/dref/1306002>