



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH ART 24. You'll find the answers to all your questions on the BOSCH ART 24 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual BOSCH ART 24
User guide BOSCH ART 24
Operating instructions BOSCH ART 24
Instructions for use BOSCH ART 24
Instruction manual BOSCH ART 24



[You're reading an excerpt. Click here to read official BOSCH ART 24 user guide](http://yourpdfguides.com/dref/5873925)
<http://yourpdfguides.com/dref/5873925>

Manual abstract:

Warning: Keep a safe distance from the machine when operating. Switch off and remove plug from mains before adjusting, cleaning or if the cable is entangled and before leaving the garden product unattended for any period. Keep the supply flexible cord away from the cutting line. Wear eye and ear protection. Do not work in the rain or leave the trimmer outdoors whilst it is raining. english Safety Notes Warning! Read these instructions carefully, be familiar with the controls and the proper use of the machine. Please keep the instructions safe for later use! Warning: Keep a safe distance from the machine when operating. Operation □ This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety. Book Page 10 Monday, February 1, 2016 11:43 AM 10 \ English Children should be supervised to ensure that they do not play with the machine.

ζ Never allow children or people unfamiliar with these instructions to use the trimmer.

Local regulations may restrict the age of the operator. When not in use, store the trimmer out of reach of children. ζ Never operate the trimmer with missing or broken guards or shields or without guards or shields in position. ζ Before use check the supply and extension cord for signs of damage or ageing. If the cord becomes damaged during use, disconnect the cord from the supply immediately.

dO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY. Do not use the trimmer if the cord is damaged or worn. @@ □ Keep extension cords away from cutting elements. @@@@ζ Always wear long heavy trousers, boots and gloves. @@ζ Wear safety eye protection and ear defenders when operating the machine.

ζ Never work with this trimmer while people, especially children or pets are nearby. ζ The operator or user is responsible for accidents or hazards occurring to other people or their property. ζ Wait until the cutting head has completely stopped before touching it. The head continues to rotate after the trimmer is switched off, the cutting system can cause injury/damage. ζ Work only in daylight or in good artificial light. ζ Avoid operating the trimmer in bad weather conditions especially when there is a risk of lightning. ζ Operating the trimmer in wet grass decreases the efficiency of performance. ζ Switch off when transporting the trimmer to and from the area to be worked on. ζ Switch on the trimmer with hands and feet well away from the rotating line. ζ Do not put hands or feet near the cutting system.

ζ Never fit metal cutting elements to this trimmer. □ Inspect and maintain the trimmer regularly. ζ Have the trimmer repaired only by an authorized customer service agent. ζ Always ensure that the ventilation slots are kept clear of debris. bosch Power Tools OBJ_BUCH-1983-005. Book Page 11 Monday, February 1, 2016 11:43 AM English \ 11 □ Take care against injury from the blade fitted for cutting the nylon line length. After feeding line always return the trimmer to its horizontal operating position before switching on. ζ Switch off and remove the plug from the socket: – whenever you leave the machine unattended for any period – before replacing the spool – before cleaning or working on the trimmer □ After use, disconnect the machine from the mains and check for damage.

ζ Store the machine in a secure, dry place out of the reach of children. Do not place other objects on top of the machine.

□ Replace worn or damaged parts for safety. ζ Ensure replacement parts fitted are Bosch approved. ζ Do not operate the machine without the trimmer attachment fitted. electrical Safety □ Warning! @@@@ □ Caution – do not touch rotating cutting line. @@ Contact your Bosch Service Centre for details.

@@ Always check your RCD every time you use it. @@@@ The extension cord must be used with a cable strain relief.

@@ Please take note of the symbols and their meaning. @@@@@@@@@@ movement direction Technical Data Trimmer Article number 3 600 . @@@@@@@@@@ Book Page 13 Monday, February 1, 2016 11:43 AM English \ 13 Noise/Vibration Information Sound emission values determined according to EN 50636-2-91.

Typically the A-weighted noise levels of the product are: Sound pressure level Sound power level Uncertainty K Wear hearing protection! We declare under our sole responsibility that the product described under "Technical data" is in conformity with all relevant provisions of the directives 2011/65/EU, until 19 April 2016: 2004/108/EC, from 20 April 2016 on: 2014/30/EU, 2006/42/EC, 2000/14/EC including their amendments and complies with the following standards: EN 60335-1, EN 50636-2-91, EN 50581. 2000/14/EC: Guaranteed sound power level: Conformity assessment procedure according to Annex VI. ,

PT-HG/ENS-PA2, Stowmarket, Suffolk IP14 1EY, England Henk Becker Helmut Heinzelmann Executive Vice President Head of Product Certification Engineering PT/ETM9 dB(A) 94 94 96 □ Check the guard screw is fixed tightly before using. ζ Spool feeds line each time the machine comes to a stop (trigger is released), and line is cut when machine is started again. Action Delivery Scope Adjusting the Handle Mounting the Cutting Guard Mounting wheels Figure 1 2 3 4 5 6 7 8 9 10 11 12 – 13 Page 189 189 190 191 191 192 192 192 193 193 194 194 195 195 Robert Bosch GmbH, Power Tools Division 70764

Leinfelden-Echterdingen, GERMANY 01. 02. 2016 Connecting the extension lead Switching On and Off Working Advice Adjusting the Cutting Height Changing to edging mode Removing the line spool Winding Line on Spool Replacing the Line Spool Fitting Spool into Spool Holder Mounting and Operation □ Do not disassemble guard once connected. ζ Do not connect the machine to the mains socket before it is completely assembled. ζ The cutting line continues to rotate for a few seconds after the trimmer is switched off. Allow the motor/cutting line to stop rotating before switching "on" again.

ζ Do not rapidly switch off and on. ζ Remove any grass from spool cover when changing line or spool. Book Page 14 Monday, February 1, 2016 11:43 AM 14 \ English Troubleshooting Problem Trimmer fails to operate Possible Cause Power turned off Mains socket faulty Extension cable damaged Corrective Action Turn power on Use another socket Inspect cable, replace if damaged Inspect cable, replace if damaged Contact Service Agent Contact Service Agent Cut in stages Inspect the spool, replace if necessary Replace the spool Inspect the spool, replace if necessary Inspect the spool, replace if necessary Only trim with the tip of the line, avoid stones, walls and other hard objects. feed the line regularly to maintain full cutting width. Trimmer runs intermittently Extension cable damaged Internal wiring of machine damaged Garden product labours Machine does not cut Line can not be fed Grass too high Cutting line too short/broken off Spool empty Line inside the spool entangled Line keeps breaking Line inside the spool entangled Trimmer used incorrectly After-sales Service and Application Service www.



[You're reading an excerpt. Click here to read official BOSCH ART 24 user guide](http://yourpdfguides.com/dref/5873925)
<http://yourpdfguides.com/dref/5873925>

bosch-garden. @@@@Do not dispose of garden products into household waste! @@Subject to change without notice. Book Page 50 Monday, February 1, 2016 11:43 AM 50 \ Dansk \ Sikre altid, at ventilationsåbningerne \ Pas på er frie for ophobet græs. \ Sluk for haveværktøjet og træk altid elstikket ud af stikkåsen: – før haveværktøjet forlades – før spolen udskiftes – før trimmeren rengøres eller før der arbejdes på trimmeren \ Træk stikket ud, når arbejdet er færdigt, og kontroller haveværktøjet for beskadigelser. Dit haveværktøj er for din egen sikkerheds skyld beskyttelsesisoleret og har ikke brug for nogen jordforbindelse.

Book Page 51 Monday, February 1, 2016 11:43 AM Dansk \ 51 Symboler De efterfølgende symboler er af betydning for at kunne læse og forstå brugsanvisningen. 14 15 Side 195 195 Fejlsøgning Symptom Græstrimmeren arbejder ikke Mulig årsag Strøm er afbrudt Stikkontakt er defekt Forlængerledning er beskadiget Afhjælpning Kontroller og tænd for strømmen Prøv en anden stikkontakt Ledning kontrolleres og skiftes, hvis den er beskadiget Ledning kontrolleres og skiftes, hvis den er beskadiget Kontakt serviceforhandleren Græstrimmeren arbejder med afbrydelser Forlængerledning er beskadiget Haveværktøjets indvendige ledninger er Kontakt serviceforhandleren beskadiget Haveværktøj er overbelastet Haveværktøj skærer ikke Skæretre&arie ja lülitage sisse Kasutage teist pistikupesa Kontrollige toitejuhe üle ja vahetage välja, kui see on vigastatud Kontrollige toitejuhe üle ja vahetage välja, kui see on vigastatud Pöörduge remonditöökotta Pöörduge remonditöökotta Niitke järk-järgult Kontrollige pooli ja vajaduse korral vahetage see välja Vahetage niidipool välja Kontrollige niidipooli ja vajaduse korral vahetage see välja Murutrimmer töötab katkendlikult Pikendusjuhe on vigastatud Seadme siseühendused ei ole korras Aiatööriistale avaldub ülekoormus Aiatööriist ei löika Lõikeniiti ei anta järele Muru on liiga kõrge Lõikeelemendid on liiga lühikesed/murdunud Niidipool on tühi Lõikeniit on poolis keerdu läinud F 016 L81 320 \ (1. Book Page 175 Monday, February 1, 2016 11:43 AM Latviešu \ 175 Tunnused Lõikeniit katkeb endiselt Võimalik põhjus Lõikeniit on poolis keerdu läinud Murutrimmeri vale käsitlemine Kõrvaldamine Kontrollige niidipooli ja vajaduse korral vahetage see välja Trimmerdage üksnes lõikeniidi otsaga, vältige kokkupuudet kivide, seinte ja muude kõvade esemetega. .



[You're reading an excerpt. Click here to read official BOSCH ART 24 user guide](http://yourpdfguides.com/dref/5873925)
<http://yourpdfguides.com/dref/5873925>