



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH ART 30 COMBITRIM. You'll find the answers to all your questions on the BOSCH ART 30 COMBITRIM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual BOSCH ART 30 COMBITRIM  
User guide BOSCH ART 30 COMBITRIM  
Operating instructions BOSCH ART 30 COMBITRIM  
Instructions for use BOSCH ART 30 COMBITRIM  
Instruction manual BOSCH ART 30 COMBITRIM

Bedienungsanleitung  
Operating instructions  
Instructions d'emploi  
Instrucciones de servicio  
Manual de instruções  
Istruzioni d'uso  
Gebruiksaanwijzing  
Betjeningsvejledning  
Bruksanvisning  
Brukerveiledningen  
Käyttöohje  
Οδηγία χειρισμού  
Kullanım kılavuzu

Deutsch  
English  
Français  
Español  
Português  
Italiano  
Nederlands  
Dansk  
Svenska  
Norsk  
Suomi  
Ελληνικά  
Türkçe

 **BOSCH**

**ART COMBITRIM**

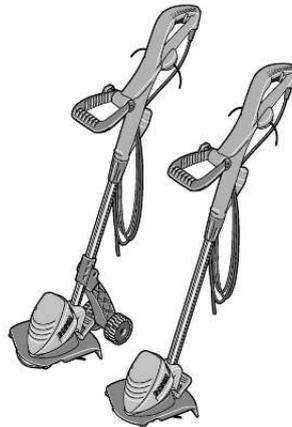

[You're reading an excerpt. Click here to read official BOSCH ART 30 COMBITRIM user guide](http://yourpdfguides.com/dref/2286787)

<http://yourpdfguides.com/dref/2286787>

### Manual abstract:

Please keep the instructions safe for later use. Explanation of symbols on the line trimmer General hazard safety alert. S Never allow children or people unfamiliar with these instructions to use the trimmer. Local regulations may restrict the age of the operator. When not in use store the trimmer out of reach of children. S Never work with this trimmer while people, especially children or pets are nearby. S The operator or user is responsible for accidents or hazards occurring to other people or their property. S Wait until the rotating line has completely stopped before touching it. @@S Work only in daylight or in good artificial light. s Avoid operating the trimmer in wet grass, where feasible.

@@@S Do not put hands or feet near the rotating line. S Never fit metal cutting elements to this trimmer. s Inspect and maintain the trimmer regularly. S Have the trimmer repaired only by an authorized customer service agent. S Always ensure that the ventilation slots are kept clear of debris. @@@@S Store the machine in a secure dry place out of reach of children. Do not place other objects on top of the machine. s Replace worn or damaged parts for safety. S Ensure replacement parts fitted are Bosch approved. Keep bystanders a safe distance away from the machine.

Switch off and remove plug from mains before adjusting, cleaning or if the cable is entangled and before leaving the trimmer unattended for any period. Keep the supply flexible cord away from the cutting line. Do not work in the rain or leave the trimmer outdoors whilst it is raining. S Never operate the trimmer with damaged guards or shields or without guards or shields in position. s Before use check the supply and extension cord for signs of damage or ageing. If the cord becomes damaged during use, disconnect the cord from the supply immediately. S Before using the machine and after impact, check for signs of wear or damage and repair if necessary. @@@@It is important that you read these instructions carefully. @@@@ caution do not touch rotating cutting line. @@It is recommended for increased electrical safety to use a Residual Current Device (RCD) with a tripping current of not more than 30 mA.

Always check your RCD every time you use it. WARNING: For safety, it is essential that the mains plug 15 attached to the product is fitted to the power supply cable 17. The couplings of connection leads must be protected against splashes and the coupling sockets on the leads must be made of rubber or coated with rubber. Fixing means for the connection leads must be used. The connection lead must be inspected for signs of damage at regular intervals and may only be used if in perfect condition. If the supply cord is damaged, it must be replaced by a Bosch Service Centre. Extension cords/leads should only be used if they comply with H05VV-F or H05RN-F types. Products sold in GB only: Your product is fitted with an approved 13 A (BS 1363/A) electric plug and is protected by a 3 A fuse (ASTA Approved to BS 1362). @@@@Release the foot pedal 12. @@@@Hook the guard onto trimmer head and push until secure fitting.

Push rear of guard until secure (click). G Adjusting cutting head angle: Depress the foot pedal 12. move the shaft 6 to the lowest position. Release the foot pedal 12. h Move trimmer head: Loosen the adjustment collar 5. @@@@Do not rapidly switch off and on. @@The trimmer can efficiently cut grass up to a height of 15 cm. @@@@Stop and remove plug from the power supply. @@Carry out necessary maintenance or repairs before using. @@@@Fitting the Extra Strong Line for very long tough conditions will improve the performance and give better results.

j Trimming Edges Guide the trimmer along the edge of the lawn. Do not allow the cutting line to contact paved surfaces, stones or garden walls, since this will wear the line rapidly. For better control use the plant protector 9 (ART 30/3000 COMBITRIM only available as an accessory for ART 23/26/2300/2600 COMBITRIM) as a guide. K Cutting Around Trees and Bushes Carefully cut around trees and bushes so that they do not come into contact with the cutting line. Plants can die if you damage the bark. For better control use adjustable handle 4 and use the plant protector 9 (ART 30/3000 COMBITRIM only available as an accessory for ART 30/3000 COMBITRIM). Stop and remove plug from the power supply. m Replacing the Line Spool Hold the spool plate 23 in position. Turn the spool cover 21 counter-clockwise and remove. Take the empty spool 25 out from the spool cover.

@@@@You will notice when the motor runs without load and no grass is cut. @@ 3 kg). This action will allow the feed button 20 to release the line out. Turn the spool cover 21 counter-clockwise and remove. @@@@Thread the line's end through the slot 26 in the cover ring 27 from the inside. Keep the line tight and slide the cover ring 27 over the smaller diameter of the spool. The use of other line will lead to a deterioration in performance. Stop and remove plug from the power supply. Clean the exterior of the machine thoroughly using a soft brush and cloth. Turn the machine on its side and clean the cutting guard 10 inside.

If grass cuttings are compacted, remove with a wooden or plastic implement. hang the cable on the hook provided. DO NOT wrap/loop the supply/extension cable around the hook and the guard together - this will cause the cable to be in contact with the guard blade which can damage the cable. @@@@Feed the line regularly to maintain full cutting width. @@@@According to the European Directive 2002/96/EC on waste electrical and electronic equipment and its incorporation into national law, power tools that are no longer suitable for use must be separately collected and sent for recovery in an environmental-friendly manner.

Exploded views and information on spare parts can be found under: www. Typically the A-weighted noise level of the product is: sound pressure level 84 dB (A); sound power level 95 dB (A). We declare under our sole responsibility that this product is in conformity with the following standards or standardization documents: EN 786, EN 60 335 according to the provisions of the directives 89/336/EEC, 98/37/EC, 2000/14/EC. 2000/14/EC: The guaranteed sound power level LWA is lower than 96 dB (A). Subject to change without notice .



[You're reading an excerpt. Click here to read official BOSCH ART 30 COMBITRIM user guide](http://yourpdfguides.com/dref/2286787)  
<http://yourpdfguides.com/dref/2286787>